

GLEM AE55MX3

Glem AE55MX3 Cooker Instruction Manual

Model: **AE55MX3**

Brand: **GLEM**

1. INTRODUCTION

Thank you for choosing the Glem AE55MX3 gas cooker. This instruction manual provides essential information for the safe and efficient use, installation, and maintenance of your appliance. Please read this manual carefully before using the cooker and keep it for future reference. Proper installation and operation are crucial for your safety and the longevity of the product.

2. SAFETY INFORMATION

Your safety and the safety of others are paramount. Please observe all safety warnings and instructions provided in this manual.

- **Gas Safety:** Ensure proper ventilation. Do not store flammable materials near the appliance. In case of a gas leak, turn off the gas supply, open windows, and do not operate electrical switches.
- **Electrical Safety:** Ensure the appliance is correctly earthed. Do not use adapters or extension cords. Disconnect from the power supply before cleaning or maintenance.
- **Child Safety:** Keep children away from the appliance during operation and cooling. The surfaces can become very hot.
- **Hot Surfaces:** The hob, oven, and surrounding areas become hot during use. Use oven mitts and avoid touching hot surfaces directly.
- **General Use:** Do not use the appliance for purposes other than cooking. Do not place heavy objects on the open oven door.

3. PRODUCT OVERVIEW

The Glem AE55MX3 is a freestanding gas cooker designed for domestic use, featuring a gas hob and a gas oven with grill functionality.

IMMAGINE



NON DISPONIBILE

This image displays the Glem AE55MX3 freestanding gas cooker in white. It features a four-burner gas hob on top, covered by a lid. Below the hob are control knobs for the burners and oven. The oven compartment has a glass door, and the unit stands on four black feet.

Key Features

- Four-burner gas hob for versatile cooking.
- Gas oven with a generous 62-liter capacity.
- Integrated grill function for browning and toasting.
- Internal oven light for clear visibility during cooking.
- Adjustable feet for stable positioning.

4. SETUP AND INSTALLATION

Installation of this appliance must be carried out by a qualified technician in accordance with local regulations and safety standards.

4.1 Unpacking

Carefully remove all packaging materials. Check the appliance for any damage. Report any damage to your retailer immediately. Keep packaging materials away from children.

4.2 Positioning

The cooker is a freestanding unit. Ensure it is placed on a stable, level surface. Maintain adequate clearance from adjacent walls and furniture as specified in the installation guide provided with the appliance. The product dimensions are approximately 53 cm (width) x 50 cm (depth) x 85 cm (height).

4.3 Gas Connection

The gas connection must be performed by a certified gas fitter. Ensure the gas supply pressure is compatible with the appliance specifications. Use only approved flexible gas hoses.

4.4 Electrical Connection

The electrical connection must be performed by a qualified electrician. Ensure the voltage and frequency match the appliance's rating plate. The appliance must be properly earthed.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel before operating the cooker.

5.1 Control Panel

The Glem AE55MX3 features intuitive knob controls for both the hob burners and the oven functions. Each knob is clearly marked to indicate its corresponding burner or oven setting.

5.2 Using the Gas Hob

1. Place a suitable pan centrally on the chosen burner's pan support.
2. Push in and turn the corresponding control knob counter-clockwise to the maximum flame setting.
3. Hold the knob in for a few seconds to allow the flame supervision device to activate. If the flame goes out, repeat the process.
4. Adjust the flame size by turning the knob between the maximum and minimum settings.
5. To turn off, turn the knob clockwise to the 'off' position.

5.3 Using the Gas Oven

1. Open the oven door.
2. Push in and turn the oven control knob to the desired temperature setting.
3. Ignite the oven burner (refer to specific ignition instructions in the full manual, typically involves holding the knob in for a period).
4. Close the oven door once the flame is stable.
5. The internal oven light can be switched on/off via a dedicated button or knob (if present) to monitor cooking progress.
6. To turn off, turn the oven control knob to the 'off' position.

5.4 Using the Grill

The grill function is ideal for browning food. Ensure the oven door is slightly ajar when using the grill, unless otherwise specified in the full manual.

1. Place food on the grill rack in the upper part of the oven.
2. Turn the oven control knob to the grill setting.
3. Ignite the grill burner (similar to oven ignition).
4. Monitor food closely to prevent burning.
5. To turn off, turn the knob to the 'off' position.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the optimal performance and longevity of your Glem AE55MX3 cooker.

6.1 General Cleaning

Always ensure the appliance is cool and disconnected from the power supply before cleaning. Use mild detergents and soft cloths. Avoid abrasive cleaners, scourers, or harsh chemicals that can damage surfaces.

6.2 Hob Cleaning

Remove pan supports and burner caps. Wash them in warm soapy water, rinse, and dry thoroughly. Wipe the hob surface with a damp cloth and mild detergent. Ensure all parts are completely dry before reassembling.

6.3 Oven Cleaning

For light soiling, wipe the interior with a damp cloth and mild detergent after each use. For heavier grease, use a specialized oven cleaner, following the product instructions carefully. Clean the oven door glass with a non-abrasive glass cleaner.

6.4 Replacing Oven Light

Ensure the cooker is disconnected from the power supply. Unscrew the protective cover of the oven light. Replace the bulb with a new one of the same type and wattage (check specifications for details). Reattach the protective cover.

7. TROUBLESHOOTING

Before contacting customer service, please consult the following table for common issues and their potential solutions.

Problem	Possible Cause	Solution
Burner does not ignite.	No gas supply; burner cap/crown incorrectly placed; ignition electrode dirty.	Check gas valve; reposition burner parts correctly; clean electrode.
Oven not heating.	Gas supply issue; oven control knob not set correctly.	Check gas supply; ensure knob is pushed in and turned to a temperature setting.

Problem	Possible Cause	Solution
Oven light not working.	Bulb faulty; power supply issue.	Replace bulb (see section 6.4); check power connection.
Uneven cooking in oven.	Incorrect rack position; oven not preheated; door seal damaged.	Use recommended rack position; preheat oven fully; inspect door seal for damage.

If the problem persists after attempting these solutions, please contact a qualified service technician.

8. SPECIFICATIONS

Detailed technical specifications for the Glem AE55MX3 cooker:

Feature	Specification
Brand	GLEM
Model	AE55MX3
Color	White
Product Dimensions (W x D x H)	53 x 50 x 85 cm
Oven Capacity	62 Liters
Cooking Type	Gas
Control Type	Knob
Form Factor	Freestanding
Special Features	Grill, Internal Light, Adjustable Fit (feet)
ASIN	B00DO6QP9M

9. WARRANTY AND SUPPORT

Your Glem AE55MX3 cooker comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, spare parts, or service requests, please contact your retailer or the authorized Glem service center in your region. Always provide the model number (AE55MX3) and serial number of your appliance when seeking assistance.