

[manuals.plus](#) /› [Cuisinart](#) /› [Cuisinart HB-155PC Smart Stick Stainless Steel Hand Blender with Whisk Instruction Manual](#)

Cuisinart HB-155PC

Cuisinart HB-155PC Smart Stick Stainless Steel Hand Blender with Whisk Instruction Manual

1. PRODUCT OVERVIEW

The Cuisinart Smart Stick Hand Blender, model HB-155PC, is a versatile kitchen appliance designed for blending and whisking. It features a powerful 200-watt motor and variable speed control, allowing for precise adjustments from low to high simply by turning the knob on top. Its stainless steel construction ensures durability and a sleek appearance. This hand blender is ideal for use directly in pots, pitchers, blending cups, and bowls, making food preparation convenient and efficient.

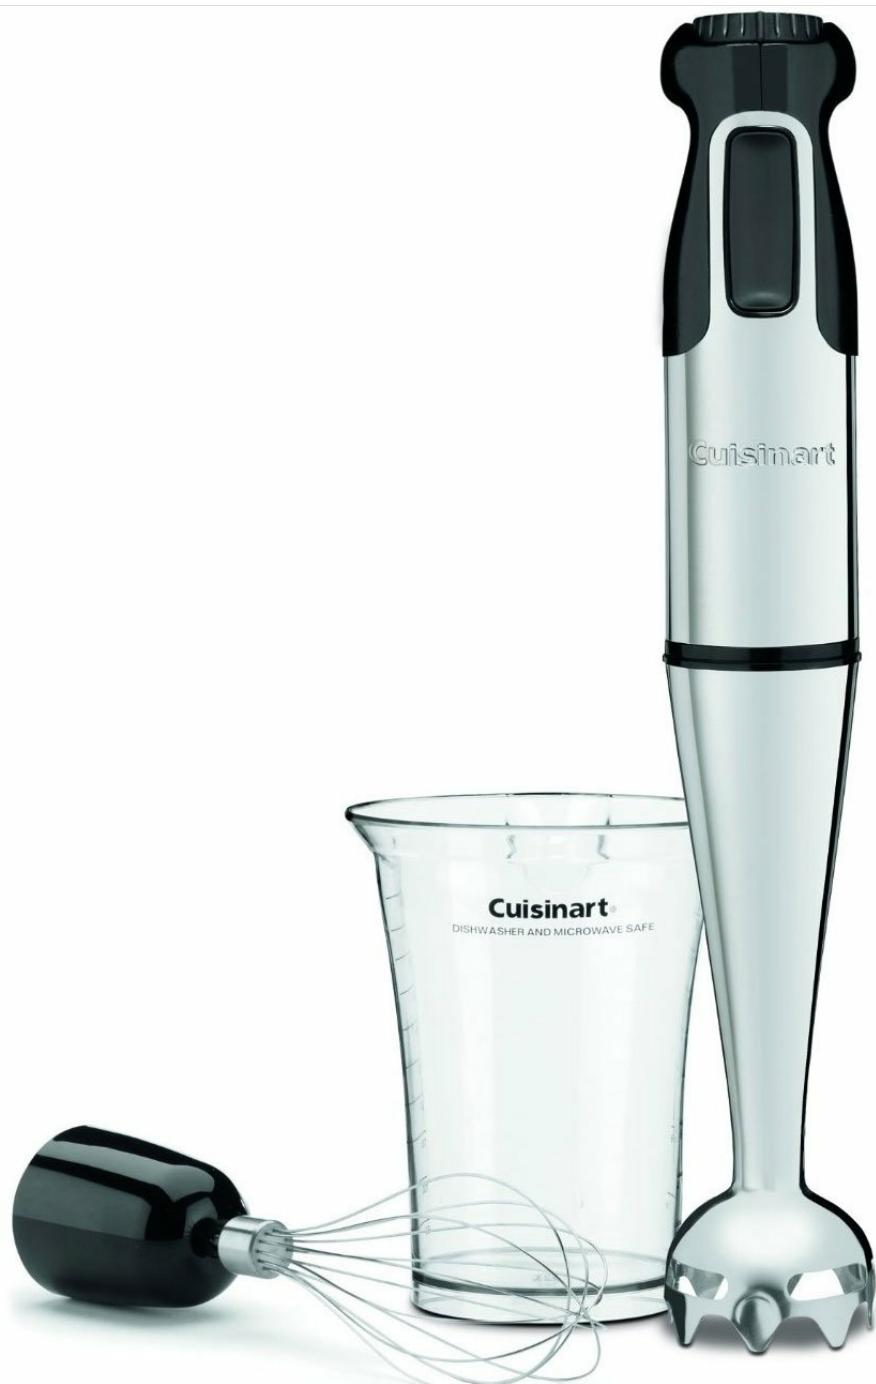


Image of the Cuisinart Smart Stick Hand Blender, featuring its stainless steel body and blending attachment.

2. WHAT'S INCLUDED

Your Cuisinart HB-155PC Smart Stick Hand Blender package includes the following components:

- Motor Body (200-watt)
- Blending Attachment (Stainless Steel)
- Whisk Attachment
- 16 oz. Mixing/Measuring Beaker (BPA Free)
- Instruction and Recipe Booklet

3. SETUP

1. **Unpack Components:** Carefully remove all parts from the packaging. Retain packaging for storage or future

transport.

2. **Clean Before First Use:** Wash the blending shaft, whisk attachment, and mixing/measuring beaker in warm, soapy water. Rinse thoroughly and dry. The motor body should be wiped clean with a damp cloth. Do not immerse the motor body in water.
3. **Assemble Attachment:** To attach the blending shaft or whisk, align the attachment with the motor body and twist until it locks securely into place. Ensure it is firmly attached before use.
4. **Position for Use:** Place the food to be processed in a suitable container such as the provided beaker, a pot, pitcher, or bowl. Ensure the container is stable.

4. OPERATING INSTRUCTIONS

1. **Connect Power:** Plug the hand blender into a standard electrical outlet.
2. **Select Speed:** The variable speed control knob is located on the top of the motor body. Turn the knob to select your desired speed, from low to high, depending on the task.
3. **Begin Blending/Whisking:** Immerse the blending shaft or whisk into the ingredients. Press and hold the ON button located on the handle to start the motor.
4. **Process Ingredients:** Move the hand blender up and down gently to ensure all ingredients are processed evenly. For best results, keep the blade guard fully submerged to prevent splashing.
5. **Stop Operation:** Release the ON button to stop the motor.
6. **Unplug After Use:** Always unplug the appliance from the electrical outlet immediately after use and before cleaning or detaching accessories.

Tips for Best Results:

- For blending, use a container that is deep enough to prevent splashing.
- When blending hot liquids, allow them to cool slightly before processing.
- Do not operate the blender continuously for more than 1 minute. Allow it to rest between cycles.
- The whisk attachment is ideal for whipping cream, beating eggs, and mixing light batters.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your Cuisinart Smart Stick Hand Blender.

1. **Disconnect Power:** Always unplug the hand blender before cleaning.
2. **Detach Attachments:** Twist and pull the blending shaft or whisk attachment to remove it from the motor body.
3. **Clean Attachments:** The blending shaft, whisk attachment, and mixing/measuring beaker are dishwasher-safe (top rack only) or can be washed by hand in warm, soapy water. Rinse thoroughly and dry immediately.
4. **Clean Motor Body:** Wipe the motor body with a damp cloth. Do not immerse the motor body in water or any other liquid. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
5. **Storage:** Store the hand blender and its attachments in a dry place. The cord can be wrapped neatly around the motor body for compact storage.

6. TROUBLESHOOTING

If you encounter issues with your Cuisinart Smart Stick Hand Blender, refer to the following common troubleshooting steps:

- **Blender does not turn on:**

- Ensure the unit is properly plugged into a working electrical outlet.
- Check if the blending or whisk attachment is securely locked into the motor body.
- Verify that the ON button is being pressed and held during operation.

- **Motor sounds strained or stops:**

- The consistency of the ingredients might be too thick. Add more liquid or process in smaller batches.
- Ensure the blender has not been operated continuously for too long. Allow it to cool down for a few minutes before resuming.

- **Splashing during operation:**

- Ensure the blade guard is fully submerged in the ingredients before starting the blender.
- Use a deeper container or reduce the amount of ingredients.
- Lower the speed setting using the variable speed control knob.

If these steps do not resolve the issue, please contact Cuisinart Customer Service for further assistance.

7. SPECIFICATIONS

Brand	Cuisinart
Model Number	HB-155PC
Color	Silver/Black
Special Feature	Multiple Attachments
Capacity	16 Fluid Ounces (Mixing/Measuring Beaker)
Included Components	Blending Attachment, Whisk Attachment, 16 oz. Mixing/Measuring Beaker
Recommended Uses	Blending, Whisking
Power Source	Corded Electric
Voltage	200 Volts
Controls Type	Knob (Variable Speed)
Material Type Free	BPA Free
Blade Material	Stainless Steel
Product Dimensions	2.16 x 14 x 2.6 inches
Item Weight	2.15 pounds
Date First Available	February 19, 2013

8. WARRANTY AND SUPPORT

The Cuisinart HB-155PC Smart Stick Hand Blender comes with a **Limited Warranty**. For specific details regarding the warranty period and coverage, please refer to the included Instruction and Recipe Booklet or visit the official Cuisinart

website.

For product support, replacement parts, or warranty claims, please contact Cuisinart Customer Service through their official channels. Always have your model number (HB-155PC) and date of purchase available when contacting support.