

[Manuals.plus](#) /

› [SEIKO](#) /

› Seiko NR435P Analog Melody Alarm Clock User Manual

SEIKO NR435P

Seiko NR435P Analog Melody Alarm Clock User Manual

Model: NR435P | Brand: SEIKO

INTRODUCTION

The Seiko NR435P is an analog alarm clock designed to provide a pleasant wake-up experience with its selection of 31 melodies. This clock features a quartz movement for accurate timekeeping and offers various alarm settings. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your Seiko NR435P clock.



Figure 1: Front view of the Seiko NR435P Analog Melody Alarm Clock. This image displays the clock's face, hands, and the overall pink and white design.

1. SETUP

1.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert three (3) AA alkaline batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Figure 2: Rear view of the Seiko NR435P clock, showing the battery compartment and control switches.

1.2 Setting the Time

1. Turn the time setting knob, usually located on the back or side of the clock, to adjust the hour and minute hands to the current time.
2. Ensure the time is set accurately, especially for AM/PM if applicable (though this is an analog clock, some internal mechanisms might differentiate).

2. OPERATING INSTRUCTIONS

2.1 Setting the Alarm

1. Locate the alarm setting knob or dial, typically on the back or front of the clock.
2. Rotate the alarm setting knob to move the alarm hand to your desired wake-up time.
3. Ensure the alarm ON/OFF switch (often a small slider on the side or back) is in the "ON" position.



Figure 3: Side view of the Seiko NR435P clock, highlighting the alarm ON/OFF switch.

2.2 Selecting Melodies

The Seiko NR435P features 31 different melodies for its alarm function. These can be selected in three patterns:

- **Daily Rotation:** The clock can play a different melody each day of the month.
- **Mood-Based Selection:** Choose a pattern that suits your mood.
- **Favorite Song:** Set the alarm to play a specific, preferred melody.

Refer to the controls on the front of the clock (Figure 4) to cycle through melody options and select your desired pattern. The specific labels for these controls may be in Japanese, but typically involve a button or switch to advance through songs or modes.



Figure 4: Close-up of the front controls on the Seiko NR435P clock, used for melody selection and other functions.

2.3 Volume Adjustment

The alarm volume can typically be adjusted using a switch or dial on the clock. Available settings usually include:

- Medium
- Loud
- Super Loud

Adjust the volume to a level suitable for your needs. Note that a "super quiet" setting may not be available.

2.4 Snooze Function

To temporarily stop the alarm and activate the snooze function, press the large button located on the top of the clock. The alarm will sound again after a short interval. To fully turn off the alarm, slide the alarm ON/OFF switch to the "OFF" position.

3. MAINTENANCE

3.1 Cleaning

Wipe the clock's surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish and internal components.

3.2 Battery Replacement

Replace the batteries when the clock's display dims, the melodies sound weak, or the clock stops functioning. Always replace all three AA batteries at the same time with new ones. Dispose of used batteries according to local regulations.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not functioning / Alarm not sounding.	Dead or incorrectly installed batteries. Alarm switch is OFF.	Replace batteries with new AA alkaline batteries, ensuring correct polarity. Ensure the alarm ON/OFF switch is in the "ON" position.
Alarm melody sounds distorted or weak.	Low battery power.	Replace batteries with new AA alkaline batteries.
Time is inaccurate.	Incorrect time setting. Weak batteries.	Re-set the time using the time setting knob. Replace batteries if they are old or weak.
Difficulty understanding melody selection controls.	Controls are labeled in a foreign language.	Experiment with the buttons/switches on the front of the clock to cycle through melodies and patterns. Typically, one button advances the melody, and another selects the mode.

5. SPECIFICATIONS

- **Model Number:** NR435P
- **Brand:** SEIKO
- **Color:** Pink
- **Display Type:** Analog
- **Movement:** Quartz (+/- 30 seconds per month)
- **Special Features:** 31 Melody Alarm, Snooze Function
- **Power Source:** Battery Powered (3 x AA alkaline batteries)
- **Product Dimensions:** 5.4"W x 5.1"H x 2.8"D (13.6 x 12.9 x 7.1 cm)
- **Unit Weight:** 0.35 kg (350 Grams)
- **Material:** Plastic
- **Indoor/Outdoor Usage:** Indoor
- **Country of Origin:** China

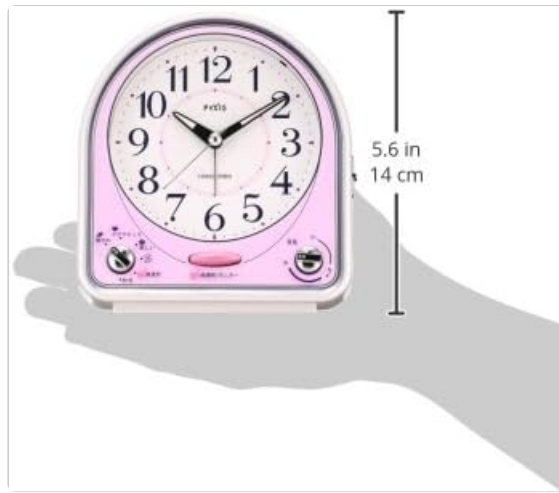


Figure 5: The Seiko NR435P clock held in a hand, illustrating its compact size and dimensions.

6. WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

7. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Seiko NR435P clock, please contact Seiko customer service. Contact information can typically be found on the official Seiko website or on the product packaging.

