

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Rubbermaid](#) /
- › [Rubbermaid RCP3486108 Light Commercial Spray Mop Instruction Manual](#)

Rubbermaid RCP3486108

Rubbermaid RCP3486108 Light Commercial Spray Mop Instruction Manual

Model: RCP3486108

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Rubbermaid RCP3486108 Light Commercial Spray Mop. Designed for light-duty cleaning tasks, this spray mop offers an efficient solution for maintaining various floor surfaces. Please read this manual thoroughly before initial use and retain it for future reference.

PRODUCT OVERVIEW

The Rubbermaid RCP3486108 Light Commercial Spray Mop is engineered for professional home cleaners and small business owners. It features an ergonomic thumb-activated trigger that dispenses liquid in two spray streams behind the mop head. The design includes a 15 oz refill cartridge for cleaning solution and a removable microfiber pad for effective cleaning.



Image: The Rubbermaid RCP3486108 Light Commercial Spray Mop, featuring a yellow handle and black mop head.

SETUP

1. **Unpack Components:** Carefully remove all components from the packaging. Ensure all parts are present: mop handle, mop head, 15 oz refill cartridge, and microfiber pad.
2. **Assemble Mop Handle:** Connect the handle sections if they are separate. Ensure they are securely fastened.
3. **Attach Mop Head:** Securely attach the mop head to the assembled handle.
4. **Fill Refill Cartridge:** Remove the 15 oz refill cartridge from the mop. Fill it with your preferred cleaning solution or water. Ensure the cap is securely closed to prevent leaks.
5. **Insert Cartridge:** Reinsert the filled cartridge into its designated slot on the mop handle until it clicks into place.
6. **Attach Microfiber Pad:** Align the microfiber pad with the Velcro strips on the bottom of the mop head. Press firmly to secure the pad.

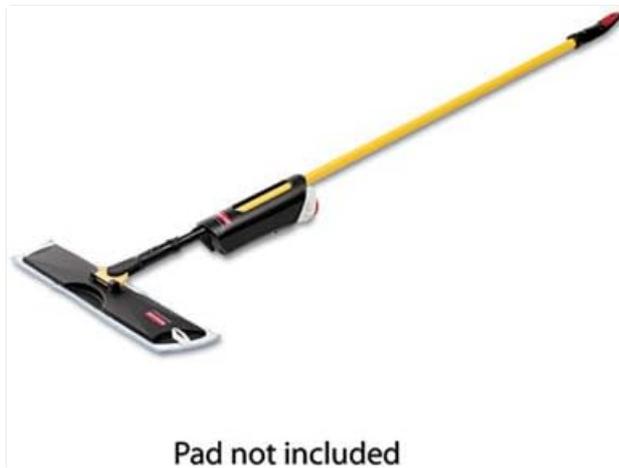


Image: The spray mop assembly, showing the handle, reservoir, and mop head. Note: Pad is sold separately.

OPERATING INSTRUCTIONS

1. **Prepare Area:** Before mopping, sweep or vacuum the floor to remove loose dirt and debris.
2. **Activate Spray:** Hold the mop with the handle and press the thumb-activated trigger located on the handle. This will dispense a fine mist of cleaning solution onto the floor in two streams behind the mop head.
3. **Mop Floor:** Glide the mop head over the floor surface, applying gentle pressure. The microfiber pad will clean and absorb dirt.
4. **Repeat:** Continue to spray and mop sections of the floor until the desired area is clean.



Image: The spray mop in action, demonstrating the dual spray function on a hard floor surface.

MAINTENANCE

- **Cleaning the Microfiber Pad:** After each use, detach the microfiber pad from the mop head. The pad is machine washable. Wash with similar colors and air dry or tumble dry on low. Do not use bleach or fabric softeners, as these can degrade the pad's effectiveness.
- **Refilling the Cartridge:** When the cleaning solution runs low, remove the 15 oz cartridge, unscrew the cap, and refill with your chosen cleaning solution. Securely close the cap before reinserting.
- **Storing the Mop:** Store the mop in a dry place. Ensure the cartridge is empty or contains only water if storing for extended periods to prevent residue buildup.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No spray from nozzle.	Cartridge empty or improperly inserted. Nozzle clogged.	Refill cartridge or ensure it is securely seated. Check nozzle for blockages and clear if necessary.
Mop is leaking.	Cartridge cap not sealed properly. Cartridge not fully inserted.	Ensure cartridge cap is tightly closed. Push cartridge firmly into its slot until it clicks.
Poor cleaning performance.	Microfiber pad is dirty or worn out. Insufficient cleaning solution.	Remove and wash the microfiber pad. Replace with a new pad if worn. Ensure adequate cleaning solution is in the cartridge.

SPECIFICATIONS

Feature	Detail
Brand	Rubbermaid
Model Number	RCP3486108
Color	Blue (Mop head and handle accents)
Product Dimensions (L x W x H)	52"L x 18"W x 52"H
Item Weight	3 Pounds
Handle Material	Alloy Steel
Head Material	Microfiber
Cartridge Capacity	15 oz
Surface Recommendation	Floor

WARRANTY INFORMATION

Specific warranty details for the Rubbermaid RCP3486108 Light Commercial Spray Mop are not provided within this manual. For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Rubbermaid Commercial Products website.

SUPPORT INFORMATION

For further assistance, technical support, or to inquire about replacement parts for your Rubbermaid RCP3486108 Light Commercial Spray Mop, please contact Rubbermaid Commercial Products customer service. Contact details can typically be found on the product packaging or on the official Rubbermaid Commercial Products website.

