

Thomas 792023

Thomas Vaporo Buggy Steam Cleaner User Manual

Model: 792023

INTRODUCTION

Thank you for choosing the Thomas Vaporo Buggy Steam Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.

The Thomas Vaporo Buggy is an easy-to-use steam cleaner designed for versatile use around your home. With a heating capacity of 1500 W and a steam pressure of 3.5 bar, it provides a hygienic cleaning solution for hard floors, bathrooms, kitchens, and sanitary facilities. Its practical handle, large wheels, and integrated accessory compartment ensure ease of use and comfort.

IMPORTANT SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filter in place.
- Do not open the water tank cap while the appliance is operating or under pressure.
- Use only clean water in the tank. Do not add detergents, perfumes, or other chemicals.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Thomas Vaporo Buggy Steam Cleaner.



Figure 1: Thomas Vaporo Buggy Steam Cleaner. This image shows the compact main unit with its large wheels, handle, and various cleaning attachments.

The steam cleaner typically includes:

- Main Unit with Water Tank
- Steam Hose with Handle
- Extension Tubes
- Floor Nozzle
- Window Squeegee
- Detail Nozzle
- Round Brushes (various sizes)
- Measuring Cup
- Funnel

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Filling the Water Tank:**
 - Ensure the appliance is unplugged and cool.
 - Unscrew the water tank cap.
 - Using the provided measuring cup and funnel, fill the water tank with up to 1.6 liters of clean tap water. Do not overfill.
 - Securely replace the water tank cap.
3. **Attaching Accessories:**
 - Connect the steam hose to the main unit by aligning the connectors and twisting until secure.
 - Attach desired cleaning accessories (e.g., extension tubes, floor nozzle, detail nozzle) to the steam hose handle. Ensure they click into place.

OPERATING INSTRUCTIONS

1. **Power On:** Plug the power cord into a suitable 230V electrical outlet. The power indicator light will illuminate.
2. **Heating Up:** The appliance will begin to heat the water. This process typically takes 5-8 minutes. The steam-ready indicator light will turn on when the desired steam pressure (3.5 bar) is reached.
3. **Steam Release:**
 - Unlock the steam trigger on the handle (if applicable).
 - Press and hold the steam trigger to release steam. A small amount of water may initially be discharged before continuous steam appears.
 - Direct the steam nozzle towards the surface to be cleaned.
4. **Cleaning Surfaces:**
 - **Hard Floors:** Use the floor nozzle with a microfiber cloth. Move the nozzle slowly over the surface to allow the steam to penetrate and loosen dirt.
 - **Tiles and Grout:** Use the detail nozzle with a small round brush for targeted cleaning.
 - **Windows and Mirrors:** Attach the window squeegee. Steam the surface, then use the squeegee to remove condensation and dirt.
 - **Upholstery (Test First):** For delicate fabrics, test on an inconspicuous area first. Use the detail nozzle from a

distance to refresh and sanitize, avoiding direct saturation.

5. Refilling Water: If the steam output decreases or stops, the water tank may be empty.

- Unplug the appliance and allow it to cool down for at least 10 minutes.
- Carefully unscrew the water tank cap to release any residual pressure.
- Refill the tank as described in the "Setup" section.
- Plug in and wait for the appliance to reheat.

6. Shutting Down:

- Release the steam trigger.
- Unplug the power cord from the outlet.
- Allow the appliance to cool completely before storing.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your steam cleaner.

1. Emptying and Cleaning the Water Tank:

- After each use, ensure the appliance is unplugged and cool.
- Carefully unscrew the water tank cap and empty any remaining water.
- Rinse the tank with clean water. Do not use harsh chemicals.
- Allow the tank to air dry before replacing the cap.

2. Descaling:

- Depending on water hardness and frequency of use, descaling may be necessary every 3-6 months.
- Use a commercially available descaling agent suitable for steam cleaners, following the manufacturer's instructions.
- Alternatively, a solution of white vinegar and water (1:1 ratio) can be used. Fill the tank with the solution, let it sit for a few hours (or overnight), then empty and rinse thoroughly. Run a tank of clean water through the system to flush out any residue.

3. Cleaning Accessories:

- Remove all accessories from the steam hose.
- Wash brushes and cloths with warm soapy water. Rinse thoroughly and allow to air dry.
- Wipe down plastic parts with a damp cloth.

4. Storage:

- Ensure the appliance is clean, dry, and cool.
- Store the steam cleaner and its accessories in a dry, safe place, away from direct sunlight and extreme temperatures. The integrated accessory compartment can be used for convenient storage.

TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty Appliance not heated sufficiently Nozzle blocked Limescale buildup	Refill water tank (see "Operating Instructions") Wait for steam-ready indicator light Clean nozzle opening Descale the appliance (see "Maintenance")
Water dripping from nozzle	Appliance not fully heated Condensation in hose	Wait for steam-ready indicator light Point nozzle into a bucket and press trigger until only steam is released
Power indicator not on	Appliance not plugged in Power outlet faulty	Check power connection Test outlet with another appliance

SPECIFICATIONS

Feature	Detail
Model Name	Vaporo Buggy
Model Number	792023
Brand	Thomas
Power (Wattage)	1500 W
Voltage	230 V
Steam Pressure	3.5 bar
Water Tank Volume	1.6 Liters
Item Weight	6 kg
Recommended Surfaces	Hard floors, household surfaces, upholstery (test first)

WARRANTY AND SUPPORT

This Thomas Vaporo Buggy Steam Cleaner comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by improper use, negligence, or failure to follow instructions in this manual.
- Normal wear and tear of consumable parts (e.g., brushes, cloths).
- Damage caused by unauthorized repairs or modifications.

For warranty claims or technical support, please contact your retailer or the official Thomas customer service. Please have your proof of purchase and model number (792023) ready when contacting support.

For more information, visit the official Thomas website or refer to the contact details provided with your purchase documentation.



© 2023 Thomas. All rights reserved.
This manual is subject to change without notice.