

Indesit IWUD 41051 C ECO EU

Indesit IWUD 41051C ECO Washing Machine

USER MANUAL

1. INTRODUCTION

Thank you for choosing the Indesit IWUD 41051C ECO Washing Machine. This appliance is designed to provide efficient and reliable laundry care for your home. To ensure optimal performance and safety, please read this user manual carefully before installation, operation, and maintenance. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the appliance.
- Do not touch the appliance with wet hands or bare feet.
- Unplug the appliance before performing any cleaning or maintenance.
- Do not force the door open during operation.
- Ensure all transport bolts are removed before first use to prevent damage and excessive vibration.

3. PRODUCT OVERVIEW

The Indesit IWUD 41051C ECO is a freestanding, front-loading washing machine with a 4 kg capacity and a maximum spin speed of 1000 rpm. It features an A+ energy efficiency rating, designed for economical operation.



Figure 3.1: Front view of the Indesit IWUD 41051C ECO Washing Machine, showing the control panel, detergent dispenser, and drum door.

Key Features:

- **Capacity:** 4 kg drum capacity, suitable for small to medium loads.
- **Spin Speed:** Up to 1000 revolutions per minute for effective water extraction.
- **Energy Efficiency:** A+ rated for reduced energy consumption.
- **Design:** Freestanding, front-loading design with a compact footprint.
- **Controls:** User-friendly push-button and knob controls with an LCD display.

4. INSTALLATION AND SETUP

Proper installation is crucial for the safe and efficient operation of your washing machine. Please follow these steps carefully.

4.1 Unpacking and Positioning

- Remove all packaging materials.
- **Crucial:** Locate and remove all transport bolts from the rear of the machine. These bolts secure the drum during transit and **must** be removed before use to prevent severe vibration and damage. Refer to the diagram below for typical bolt locations.
- Position the washing machine on a firm, level surface. Adjust the feet to ensure stability and prevent rocking.

4.2 Water and Drain Connections

- Connect the water inlet hose to a cold water tap. Ensure a tight seal to prevent leaks.
- Securely place the drain hose into a standpipe or over the edge of a sink, ensuring it is not kinked.

4.3 Electrical Connection

- Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (230V AC).



Figure 4.1: Dimensions of the Indesit IWUD 41051C ECO Washing Machine: 85 cm (height), 59.5 cm (width), 32.3 cm (depth).

5. OPERATING INSTRUCTIONS

Operating your Indesit washing machine is straightforward. Follow these steps for a typical wash cycle.

5.1 Loading Laundry

- Open the drum door and load your laundry. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The maximum capacity is 4 kg.
- Close the door firmly until it clicks.

5.2 Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment.
- Add fabric softener or other additives to their designated compartments, if desired.
- Push the dispenser drawer back in completely.

5.3 Selecting a Wash Program

- Turn the program selector knob to choose the desired wash program (e.g., Cotton, Synthetics, Delicates, Eco).
- Use the push buttons to select additional options such as temperature, spin speed (up to 1000 rpm), or delayed start.
- The LCD display will show the selected settings and estimated remaining time.

5.4 Starting the Wash Cycle

- Press the Start/Pause button to begin the wash cycle.
- The machine will automatically fill with water and begin the selected program.

5.5 End of Cycle

- Once the cycle is complete, the machine will signal with an audible alert or display a message.
- Wait a few moments for the door lock to release, then open the door and remove your laundry.
- Leave the door slightly ajar to allow the drum to air dry and prevent odors.

6. MAINTENANCE AND CLEANING

Regular maintenance helps prolong the life of your washing machine and ensures optimal performance.

6.1 Cleaning the Detergent Dispenser

- Pull out the dispenser drawer completely.
- Rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser drawer with a brush.
- Reinsert the drawer.

6.2 Cleaning the Door Seal

- Wipe the rubber door seal after each wash to remove lint and moisture, preventing mold and odors.

6.3 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.4 Filter Cleaning

- Periodically clean the drain pump filter, usually located at the bottom front of the machine. Refer to the diagram in your quick start guide for exact location and procedure.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, consult this section before contacting service.

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected.	Check power supply; Ensure door is latched; Select a program and press Start.
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts (critical) ; Adjust leveling feet; Redistribute laundry in drum.
Water not draining	Drain hose kinked/blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter.
Water leaking	Hose connections loose; Detergent overdose; Damaged door seal.	Tighten hose connections; Use correct detergent amount; Inspect and replace door seal if damaged.
Poor washing results	Incorrect program/temperature; Overloading; Insufficient detergent.	Select appropriate program; Do not overload; Use recommended detergent amount.

8. SPECIFICATIONS

Detailed technical specifications for the Indesit IWUD 41051C ECO Washing Machine.

Feature	Specification
Model	IWUD 41051 C ECO EU
Type	Freestanding, Front-loader
Capacity	4 kg
Max. Spin Speed	1000 rpm
Energy Efficiency Class	A+
Annual Energy Consumption	140 kWh/year
Annual Water Consumption	5720 L/year
Noise Level (Wash)	59 dB
Noise Level (Spin)	79 dB
Dimensions (H x W x D)	85 cm x 59.5 cm x 32.3 cm
Weight	52.5 kg
Voltage	230V AC

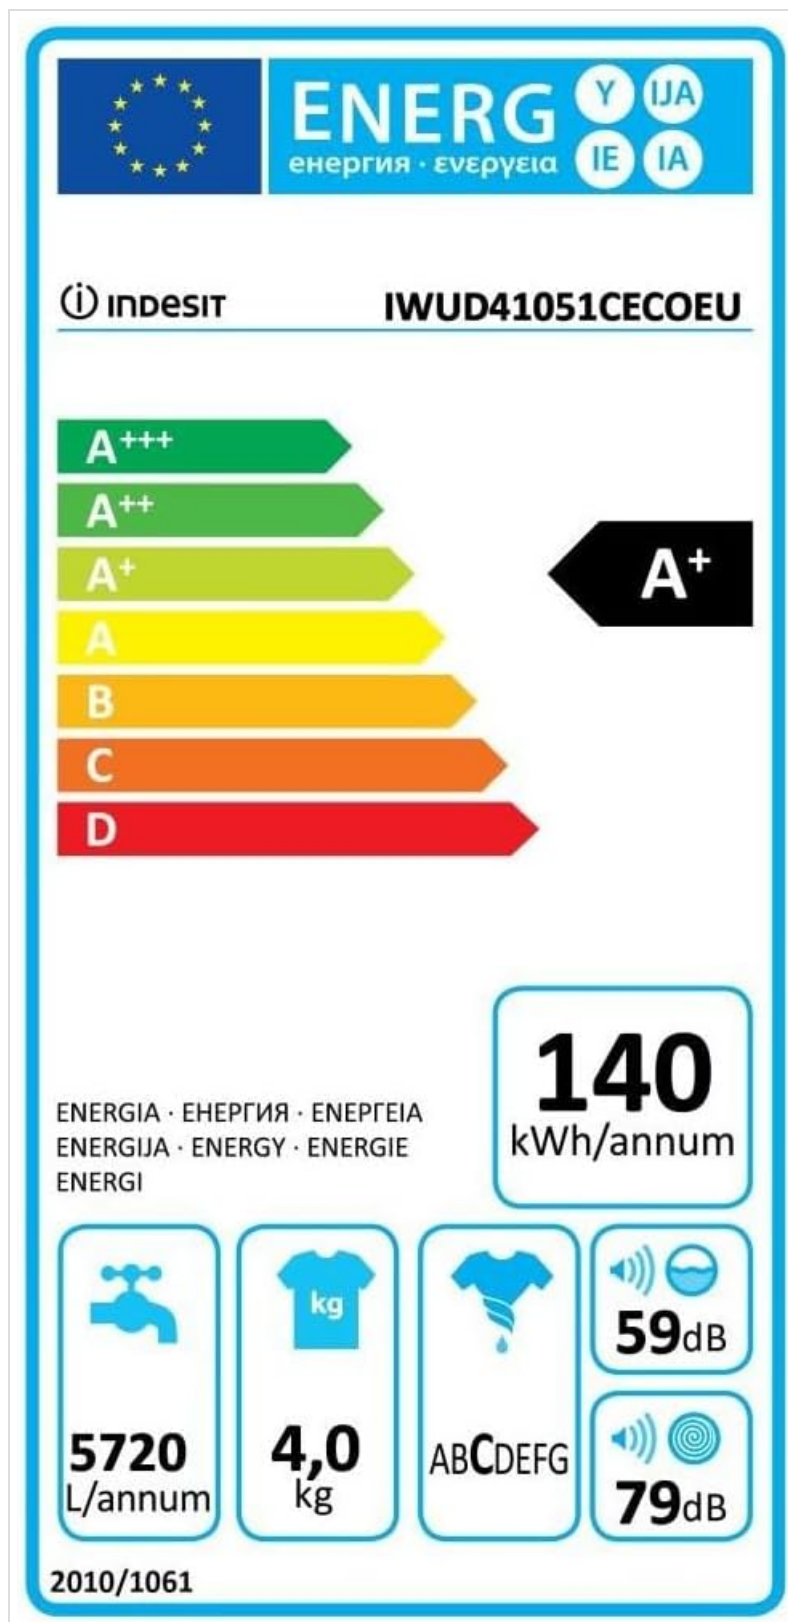


Figure 8.1: Energy label for the Indesit IWUD 41051C ECO, showing A+ energy efficiency, 4 kg capacity, 1000 rpm spin, and noise levels.

9. WARRANTY AND SUPPORT

Your Indesit IWUD 41051C ECO Washing Machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage period and what is covered.

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Contact details can typically be found on the manufacturer's website or in the documentation provided with your appliance.

When contacting support, please have your model number (IWUD 41051 C ECO EU) and serial number ready.

© 2024 Indesit. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question