

InSinkErator PRO750CORD

InSinkErator PRO750 Food Waste Disposal User Manual

Model: PRO750CORD | Brand: InSinkErator

- [Information](#)
- [Specifications](#)
- [Installation](#)
- [Introduction](#)
- [Operation](#)
- [Safety](#)
- [Maintenance](#)
- [Troubleshooting](#)
- [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your InSinkErator PRO750 Food Waste Disposal. The PRO750 model features advanced SoundSeal and MultiGrind technologies, designed for quiet operation and effective grinding of various food wastes. Its compact design is suitable for households with restricted cabinet space.



Image: The InSinkErator PRO750 food waste disposal unit, a compact gray and silver appliance designed to fit under a kitchen sink.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions thoroughly before installing or using the appliance. Failure to follow these instructions could result in electric shock, fire, or serious injury.

- Always turn off the power to the disposal unit at the circuit breaker before attempting to install, clean, or service it.
- Do not put hands or fingers into the disposal unit. Use tongs or other utensils to retrieve items.
- Never dispose of non-food items such as glass, plastic, metal, or large bones.

- Avoid pouring grease or oil down the drain, as this can clog pipes and damage the disposal.
- Ensure a continuous flow of cold water when operating the disposal.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

3. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	InSinkErator
Model Number	PRO750CORD
Motor Horsepower	3/4 HP Dura-Drive Induction Motor
Grind Stages	2 (MultiGrind Technology)
Noise Reduction	SoundSeal Technology (40% quieter than standard disposers)
Included Accessories	Power Cord, Quiet Collar Sink Baffle
Dimensions	10 x 10 x 16.25 inches
Item Weight	18.8 pounds
Power Source	AC
Voltage	120 Volts
Switch Type	Wall Switch (external)

4. INSTALLATION GUIDE

Installation of the InSinkErator PRO750 requires basic plumbing and electrical knowledge. For optimal safety and performance, professional installation is recommended. The unit is designed for easy replacement of most existing disposals and includes a power cord for convenience.

4.1 Pre-Installation Checklist

- Ensure power to the sink area is off at the circuit breaker.
- Gather necessary tools (e.g., screwdriver, pliers, pipe wrench, putty knife).
- Verify all included parts are present: disposal unit, mounting assembly, Quiet Collar Sink Baffle, power cord.

4.2 General Installation Steps (Summary)

1. Remove the old disposal unit (if applicable).
2. Install the new mounting assembly to the sink flange.
3. Connect the dishwasher drain to the disposal (if applicable).
4. Connect the disposal to the drain pipe.
5. Wire the disposal unit. The PRO750CORD model comes with a pre-installed power cord for direct plug-in to a grounded outlet. If hardwiring, consult a qualified electrician.

6. Attach the disposal unit to the mounting assembly.
7. Test for leaks and proper operation.

Refer to the detailed installation instructions provided in the physical packaging for complete step-by-step guidance.

5. OPERATING INSTRUCTIONS

The InSinkErator PRO750 is designed for continuous feed operation, allowing you to add food waste while the unit is running. Its SoundSeal technology ensures quiet performance, while MultiGrind technology handles tough food scraps efficiently.

1. Ensure the sink stopper is removed.
2. Turn on a medium stream of **cold water**. Cold water helps solidify grease and oils so they can be flushed away, and keeps the motor cool.
3. Turn on the disposal unit using the wall switch.
4. Slowly feed food waste into the disposal opening. Avoid overloading the unit.
5. Allow the disposal to run until all food waste is ground and flushed away. You will hear only the sound of the motor and running water.
6. Turn off the disposal unit, then turn off the cold water after a few seconds to flush the drain line.

5.1 Acceptable Food Waste

The PRO750 can handle most food scraps, including fruit and vegetable peels, small bones, coffee grounds, and eggshells. Its MultiGrind technology processes even fibrous materials effectively.

5.2 Unacceptable Items

Do NOT put the following items into the disposal:

- Large bones (e.g., beef, pork)
- Fibrous materials in large quantities (e.g., corn husks, artichokes)
- Grease, fats, or oils
- Plastic, glass, metal, or rubber items
- Clam or oyster shells
- Harsh chemicals or drain cleaners

6. CARE AND MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your InSinkErator PRO750.

6.1 Cleaning the Disposal

- **Regular Cleaning:** Grind small bones or ice cubes to help scour the grind chamber. Follow with a citrus peel (lemon, orange) to freshen the scent.
- **Deep Cleaning:** For stubborn odors, turn off the disposal, remove the Quiet Collar Sink Baffle, and clean the underside with a brush and soapy water. Replace the baffle.

6.2 Preventing Jams

- Always run cold water before and after operating the disposal.
- Feed food waste gradually, allowing the unit to process it completely before adding more.

- Avoid putting large quantities of fibrous materials or hard items at once.

7. TROUBLESHOOTING COMMON ISSUES

Before calling for service, try these simple troubleshooting steps.

7.1 Disposal Not Starting / Humming Sound

This usually indicates a jam. The motor is trying to turn but cannot.

1. Turn off the disposal and disconnect power at the circuit breaker.
2. Look into the drain opening with a flashlight to identify the object causing the jam.
3. Use tongs or pliers to remove the object. **NEVER use your hand.**
4. If no object is visible, insert the hex key (provided with the unit) into the center hole on the bottom of the disposal. Rotate it back and forth until the motor frees up.
5. Press the red reset button on the bottom of the disposal.
6. Restore power and test the unit with cold water.

7.2 Leaks

Leaks can occur at various connection points.

- **Sink Flange:** Tighten mounting bolts. If the leak persists, the putty seal may need to be replaced.
- **Dishwasher Connection:** Ensure the hose clamp is tight and the connection is secure.
- **Drain Pipe Connection:** Check that the slip nuts are tight and the rubber gaskets are properly seated.

7.3 Odors







Odors are usually caused by food particles accumulating in the grind chamber or splash guard.

- Follow the cleaning instructions in Section 6.1.
- Ensure you are always running cold water for several seconds after use to flush the system.

8. WARRANTY AND CUSTOMER SUPPORT

The InSinkErator PRO750 typically comes with a comprehensive warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the 9-year warranty mentioned by users. To register your product, locate the serial number on the unit and visit the official InSinkErator website.

For technical assistance, replacement parts, or further inquiries, please contact InSinkErator customer support through their official website or the contact information provided in your product documentation.

 <p>EVOLUTION COMPACT® compact size food waste disposer the perfect fit for your kitchen, a must-have feature of quality in home appliances</p> <p>AnswerLine 1-800-551-5102 www.inksinkerator.com</p> <p>Evolution Compact</p>	<p>InSinkErator Evolution Compact Food Waste Disposer: Use and Care Manual</p> <p>This manual provides instructions for the InSinkErator Evolution Compact food waste disposer, covering installation, operation, cleaning, and maintenance. It details safety precautions, troubleshooting, and warranty information for the product.</p>
 <p>EVOLUTION SPACESAVER XP® space saver disposer in compact size with powerful 1/2 HP motor plus 10 performance rated in home compact</p> <p>AnswerLine 1-800-551-5102 www.inksinkerator.com</p> <p>Evolution SpaceSaver XP</p>	<p>InSinkErator Evolution SpaceSaver XP Food Waste Disposer: Installation, Care, and Use</p> <p>Comprehensive guide to installing, operating, and maintaining the InSinkErator Evolution SpaceSaver XP food waste disposer, featuring SoundSeal® and MultiGrind® technologies for quiet and efficient performance.</p>
 <p>Evolution Compact® Evolution SpaceSaver® Evolution SpaceSaver XP® Evolution Series® Evolution Series XP® Evolution Series XP®</p> <p>AnswerLine 1-800-551-5102 www.inksinkerator.com</p>	<p>InSinkErator Evolution Series Food Waste Disposer Installation and User Guide</p> <p>Comprehensive guide for installing, using, and maintaining InSinkErator Evolution Series food waste disposers, including safety instructions, parts lists, and troubleshooting.</p>
 <p>inksinkerator PRO 750 Evolution Series IN-HOME LIMITED WARRANTY</p> <p>AnswerLine 1-800-551-5102 www.inksinkerator.com</p>	<p>InSinkErator PRO 750 Evolution Series In-Home Limited Warranty</p> <p>Details the 6-year limited in-home warranty for the InSinkErator PRO 750 Evolution Series garbage disposal, covering defects in materials and workmanship for residential use. Includes coverage, exclusions, claim procedures, and liability limitations.</p>
 <p>inksinkerator essentials</p> <p>ES30 & ES50 Food Waste Disposal</p> <p>AnswerLine 1-800-551-5102 LP 202-233-0221 www.inksinkerator.com</p>	<p>InSinkErator ES30 & ES50 Food Waste Disposal Installation and Use Manual</p> <p>This manual provides detailed installation, operation, and maintenance instructions for the InSinkErator ES30 and ES50 Food Waste Disposals. It includes safety warnings, parts lists, step-by-step installation guides, operating tips, cleaning instructions, and warranty information.</p>
 <p>inksinkerator essentials</p> <p>ES30 & ES50 Food Waste Disposal</p> <p>AnswerLine 1-800-551-5102 LP 202-233-0221 www.inksinkerator.com</p>	<p>InSinkErator ES30 & ES50 Food Waste Disposal Installation and Operation Manual</p> <p>This manual provides detailed instructions for the installation, operation, maintenance, and warranty information for InSinkErator Essentials ES30 and ES50 food waste disposals. It includes safety warnings and step-by-step guides.</p>



[pdf] Instructions

insinkerator PRO750CORD PART2 cdn spmsys shared dbi product |||

EVOLUTION PRO 750 EVOLUTION PRO 1000LP LIFT LATCH™ EVOLUTION PRO 880LT™ DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury. WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury. CAUTION indicates a hazardous situation which, if not avoided, could result in death or serious injury.

lang:es score:27 filesize: 4.46 M page_count: 20 document date: 2022-04-25