

SAMSUNG AA59-00785A

Samsung AA59-00785A Remote Control

USER MANUAL

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Samsung AA59-00785A Remote Control. This remote is an authorized aftermarket product designed to be compatible with various Samsung brand television models, serving as a direct replacement for OEM part # AA59-00785A. Please read this manual thoroughly before use to ensure proper functionality and longevity of your device.

SETUP

1. Battery Installation

The Samsung AA59-00785A Remote Control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 1: Front view of the Samsung AA59-00785A Remote Control, showing all buttons and their labels. This image displays the power button, number pad, volume and channel controls, navigation buttons, and special function keys.



Figure 2: Back view of the Samsung AA59-00785A Remote Control, highlighting the battery compartment and ergonomic design. The Samsung logo is visible on the back casing.

2. Compatibility

This remote control is designed to work out of the box with various Samsung television models. No programming or code entry is typically required. Simply install the batteries, and the remote should be ready for use with your compatible Samsung TV.

OPERATING INSTRUCTIONS

The Samsung AA59-00785A Remote Control provides intuitive access to your television's functions. Below are descriptions of key buttons and their uses:

- **POWER () Button:** Turns the television on or off.
- **SOURCE Button:** Cycles through available input sources (e.g., HDMI1, HDMI2, TV, AV).
- **Number Pad (0-9):** Directly enters channel numbers.
- **VOL (+/-) Buttons:** Adjusts the volume level up or down.
- **CH (▲/▼) Buttons:** Changes channels up or down.
- **MUTE Button:** Mutes or unmutes the television audio.
- **MENU Button:** Opens the television's main menu for settings and options.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Used to navigate through menus and options.
- **ENTER Button:** Confirms selections within menus.
- **RETURN Button:** Returns to the previous screen or menu.
- **EXIT Button:** Closes the current menu or application.
- **TOOLS Button:** Accesses quick settings or context-sensitive options.
- **INFO Button:** Displays information about the current program or input.
- **Color Buttons (A, B, C, D):** These buttons (Red, Green, Yellow, Blue) provide access to specific functions within certain applications or menus, as indicated on the screen.
- **Special Feature: Backlit Keys:** This remote features backlit keys, which illuminate to improve visibility in low-light conditions.

MAINTENANCE

Cleaning the Remote Control

To maintain the appearance and functionality of your remote control, follow these cleaning guidelines:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray liquids directly onto the remote.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's finish or internal components.

Battery Replacement

Replace the batteries when the remote control's responsiveness decreases or if the television does not respond to commands. Always replace both batteries at the same time with new AAA batteries. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not responding.	Batteries are dead or incorrectly installed. Obstruction between remote and TV. Remote is out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Move closer to the television.
Certain buttons are not working.	Button stuck or damaged.	Gently press the button multiple times. If still unresponsive, the button may be damaged.
Remote works intermittently.	Low battery power. Infrared sensor on TV is blocked.	Replace batteries. Ensure the TV's infrared sensor is clear of obstructions.

SPECIFICATIONS

Product Type	Remote Control
Model Number	AA59-00785A
Brand	SAMSUNG
Dimensions (L x W x H)	11 x 4 x 3 inches
Item Weight	0.01 ounces
Batteries Required	2 AAA batteries
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Television
Special Feature	Backlit

Manufacturer	Samsung
Date First Available	June 28, 2013

WARRANTY INFORMATION

This Samsung AA59-00785A Remote Control is an authorized aftermarket product. For specific warranty details, please refer to the documentation included with your purchase or contact the retailer from whom the product was acquired. General warranty terms for Samsung accessories typically cover manufacturing defects for a limited period from the date of purchase. Keep your proof of purchase for any warranty claims.

SUPPORT

For further assistance, troubleshooting, or information regarding your Samsung AA59-00785A Remote Control, please consider the following resources:

- Samsung Official Website:** Visit the official Samsung support website for product information, FAQs, and contact options. www.samsung.com/us/support/
- Retailer Support:** Contact the customer service department of the retailer where you purchased the remote control.
- Online Resources:** Search for community forums or online guides related to Samsung remote controls for additional tips and user experiences.

© 2025 Samsung. All rights reserved. Model: AA59-00785A.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question