

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Acctim](#) /
- › [Acctim Ulya Cuckoo Clock Model 27593 Instruction Manual](#)

## Acctim 27593

# Acctim Ulya Cuckoo Clock Model 27593 Instruction Manual

Your guide to setting up, operating, and maintaining your Acctim Ulya Cuckoo Clock.

[Introduction](#)   [Safety Information](#)   [Package Contents](#)   [Setup](#)   [Operation](#)   [Maintenance](#)  
[Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for purchasing the Acctim Ulya Cuckoo Clock, Model 27593. This contemporary painted metal cuckoo clock is designed to provide accurate timekeeping and a charming hourly cuckoo sound. This manual provides essential information for the proper setup, operation, and maintenance of your clock. Please read these instructions carefully before use and retain them for future reference.

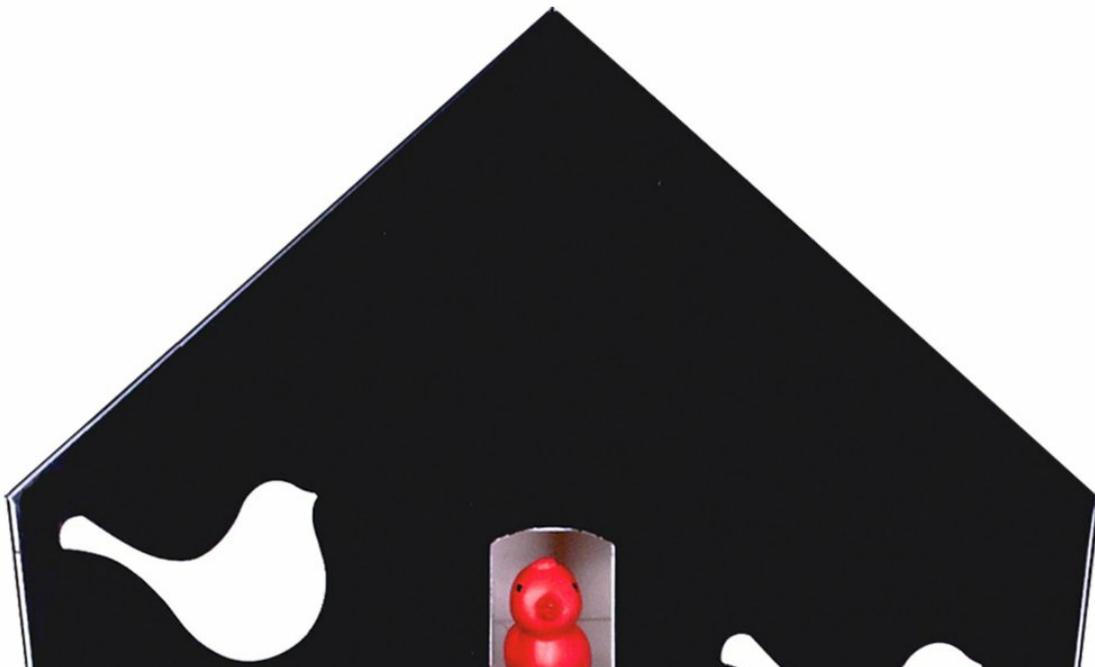




Image 1.1: The Acctim Ulya Contemporary Painted Metal Cuckoo Clock in Black. This image shows the front view of the clock, highlighting its modern design and the cuckoo bird's opening.

## 2. SAFETY INFORMATION

---

Please observe the following safety precautions to prevent damage to the clock or injury to yourself:

- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Avoid placing the clock near strong magnetic fields.
- Use only the specified battery type and ensure correct polarity during installation.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children. Do not dispose of batteries in fire.
- Do not attempt to disassemble or repair the clock yourself. Refer all servicing to qualified personnel.
- Ensure the clock is securely mounted if hanging on a wall to prevent it from falling.

## 3. PACKAGE CONTENTS

---

Carefully unpack your Acctim Ulya Cuckoo Clock and check that all items are present and in good condition. The package should contain:

- Acctim Ulya Cuckoo Clock Unit (Model 27593)
- Instruction Manual

*Note: Batteries are not included and must be purchased separately.*

## 4. SETUP

---

### 4.1. Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding or unlatching it.
3. Insert the required batteries (typically 2x AA or C batteries, refer to the compartment markings) according to the polarity indicators (+ and -).
4. Replace the battery compartment cover securely.

### 4.2. Setting the Time

1. Turn the time setting knob, usually located on the back of the clock, clockwise to advance the minute hand.
2. Continue turning until the clock displays the correct time.
3. *Important: When setting the time, ensure you pass each hour mark slowly to allow the cuckoo mechanism to synchronize. If the cuckoo sounds incorrectly after setting, refer to the "Troubleshooting" section.*

### 4.3. Mounting the Clock

The Acctim Ulya Cuckoo Clock is designed for wall mounting.

- Choose a suitable location on a wall, ensuring it is level and away from direct heat sources or drafts.
- Use an appropriate wall anchor and screw (not supplied) for your wall type to securely hang the clock

from the keyhole slot on its back.

- Verify the clock is stable and level after mounting.

## 4.4. Cuckoo Sound Settings

Your cuckoo clock may feature various settings for its hourly chime. These are typically located on the side or back of the clock.

- **Volume Control:** A small dial or switch may be present to adjust the volume of the cuckoo sound. Turn it to your desired level.
- **Night Sensor/Silent Mode:** Many cuckoo clocks include a light sensor that automatically silences the cuckoo sound in low light conditions (e.g., at night). Ensure this sensor is not obstructed if you wish for the cuckoo to sound during the day. Some models may have a manual switch for silent mode.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Basic Timekeeping

Once batteries are installed and the time is set, your Acctim Ulya Cuckoo Clock will begin keeping time. The hour and minute hands will move continuously to indicate the current time.

### 5.2. Cuckoo Function

The cuckoo bird will emerge from its door and sound its call on the hour, every hour, from approximately 6:00 AM to 9:00 PM (or as determined by the light sensor/silent mode setting). The number of cuckoo calls will correspond to the hour (e.g., one call at 1:00, twelve calls at 12:00).

- **Observation:** Observe the cuckoo's movement and sound. It should emerge smoothly and retract after sounding.
- **Synchronization:** If the cuckoo calls do not match the hour, refer to the "Troubleshooting" section for synchronization steps.

## 6. MAINTENANCE

---

### 6.1. Cleaning

- Wipe the clock's exterior with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- Avoid getting moisture into the clock mechanism.

### 6.2. Battery Replacement

Replace batteries annually or when the clock begins to lose time, the cuckoo sound weakens, or the cuckoo mechanism becomes erratic. Follow the "Battery Installation" steps in Section 4.1.

*Always replace all batteries at the same time with new ones of the same type. Do not mix old and new batteries or different battery types.*

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock not running or losing time.	Dead or weak batteries. Incorrect battery installation.	Replace all batteries with new ones, ensuring correct polarity.
Cuckoo sound is weak or absent.	Weak batteries. Night sensor activated. Volume too low.	Replace batteries. Check if the room is too dark or if the night sensor is obstructed. Adjust volume control.
Cuckoo calls do not match the hour.	Synchronization issue after time setting.	<ol style="list-style-type: none"> <li>1. Set the clock to 12:50.</li> <li>2. Wait for the cuckoo to sound at 1:00.</li> <li>3. If it sounds once, immediately set the clock to the correct time.</li> <li>4. If it sounds more than once, turn the minute hand clockwise until the cuckoo sounds once at 1:00, then set to the correct time.</li> </ol>
Cuckoo bird does not emerge or gets stuck.	Obstruction. Mechanism fault.	Ensure nothing is blocking the cuckoo door. If the problem persists, contact customer support. Do not force the bird.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	27593
Brand	Acctim
Color	Black
Item Weight	3.62 pounds
Package Dimensions	18.03 x 11.65 x 4.88 inches
Batteries Required	Yes (Not Included)
Manufacturer	Acctim

## 9. WARRANTY AND SUPPORT

Acctim products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Acctim website.

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Acctim customer support. Contact details can typically be found on the product packaging or the official brand website.

**Website:** [www.acctim.com](http://www.acctim.com) (This is a placeholder URL, please verify the actual manufacturer's website for support.)

