

[Manuals.plus](#) /

› [Spin Master](#) /

› Spin Master Air Hogs RC Hyper Actives 5 Stunt Vehicle Instruction Manual

Spin Master 20062397

Spin Master Air Hogs RC Hyper Actives 5 Stunt Vehicle Instruction Manual

Model: 20062397

1. INTRODUCTION

Thank you for purchasing the Spin Master Air Hogs RC Hyper Actives 5 Stunt Vehicle. This remote-controlled vehicle is designed for dynamic stunts and versatile driving across various terrains. Please read this manual thoroughly before operation to ensure proper setup, safe use, and optimal performance.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 Air Hogs Hyper Actives 5 Racer Vehicle
- 1 Controller/Charger
- 1 Instruction Sheet (this manual)



Image 1: The Air Hogs Hyper Actives 5 Stunt Vehicle shown in its retail packaging, highlighting the vehicle and controller.

3. SETUP AND BATTERY INSTALLATION

3.1 Vehicle Battery Installation

The Air Hogs Hyper Actives 5 vehicle requires 6 AAA batteries (not included).

1. Locate the battery compartment on the underside of the vehicle.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 6 new AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

3.2 Controller Battery Installation

The controller/charger requires 3 AAA batteries (not included).

1. Locate the battery compartment on the back of the controller.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Important: Always use fresh, high-quality alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

4. OPERATING INSTRUCTIONS

4.1 Pairing the Vehicle and Controller

1. Ensure both vehicle and controller are powered on.
2. Turn on the vehicle using the power switch located on its underside.
3. Turn on the controller using its power switch.
4. The vehicle and controller should automatically pair. A light on the controller will indicate a successful connection.

4.2 Basic Controls

Familiarize yourself with the controller's functions:

- **Left Joystick:** Controls forward and backward movement.
- **Right Joystick:** Controls steering (left and right).
- **Stunt Button (if applicable):** Activates special stunt maneuvers. Refer to the controller diagram for exact location.

4.3 Driving and Stunts

The Hyper Actives 5 is designed for high-impact stunts and versatile driving. Its unique 5th wheel provides extra torque for dynamic maneuvers.

- **Forward/Backward:** Push the left joystick forward or backward.
- **Turning:** Use the right joystick to steer left or right while moving.
- **Stunts:** Experiment with sudden changes in direction, speed, and using the 5th wheel to perform flips, rolls, and spins. The vehicle is designed to continue driving even when upside down.
- **Terrain:** The shock compression tires allow the vehicle to handle various terrains and obstacles.



Image 2: The Air Hogs Hyper Actives 5 Stunt Vehicle demonstrating its ability to drive on multiple wheels, showcasing its dynamic capabilities.

5. MAINTENANCE

5.1 Cleaning

To clean your vehicle, gently wipe it with a damp cloth. Do not immerse the vehicle or controller in water. Avoid using harsh chemicals or solvents.

5.2 Storage

When not in use, store the vehicle and controller in a cool, dry place away from direct sunlight. Remove batteries from both the vehicle and controller if storing for extended periods to prevent leakage.

6. TROUBLESHOOTING

- **Vehicle not responding:**

- Ensure both vehicle and controller are powered on.
- Check if batteries are correctly installed and have sufficient charge in both the vehicle and controller.
- Re-pair the vehicle and controller (refer to Section 4.1).
- Ensure you are within the operating range (approximately 2.4 GHz).

- **Poor performance or slow movement:**

- Replace batteries in both the vehicle and controller with fresh ones.
- Check for debris or obstructions in the wheels or axles.
- Ensure you are operating on a suitable surface. Performance may vary on very soft or uneven terrain.

- **Vehicle drives erratically:**

- Interference from other 2.4 GHz devices may be present. Try moving to a different location.
- Check battery levels.

7. SPECIFICATIONS

Model Number	20062397
Product Dimensions	4.25 x 9 x 11 inches
Item Weight	4 ounces
Recommended Age	8 - 13 years
Vehicle Batteries	6 x AAA batteries (not included)
Controller Batteries	3 x AAA batteries (not included)
Frequency	2.4 GHz

8. SAFETY INFORMATION

- Do not operate near people, pets, or fragile objects.
- Avoid operating in wet conditions or near water.
- Keep fingers, hair, and loose clothing away from moving parts.
- Adult supervision is recommended for younger users.
- Dispose of used batteries responsibly.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Spin Master website or contact their customer service department. Contact details are typically provided on the product packaging or their official website.

Note: Specific warranty terms may vary by region and retailer. Please retain your proof of purchase.

