

[Manuals.plus](#) /

› [faytech](#) /

› faytech FT08267410MW2G60G Touch-PC User Manual

faytech FT08267410MW2G60G

faytech FT08267410MW2G60G Touch-PC User Manual

Model: FT08267410MW2G60G

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your faytech FT08267410MW2G60G Touch-PC. Please read this manual thoroughly before using the device and retain it for future reference. The faytech FT08267410MW2G60G is an 8-inch Touch-PC featuring an Intel ATOM N2600 processor, 2GB RAM, 60GB SSD, and Wi-Fi connectivity, designed for various applications requiring a compact and robust computing solution.

2. SAFETY INFORMATION

- **Power Supply:** Use only the power adapter supplied with the device. Using an incorrect adapter may damage the device and void the warranty.
- **Ventilation:** Ensure proper ventilation around the device. Do not block ventilation openings.
- **Environment:** Avoid exposing the device to extreme temperatures, humidity, dust, or direct sunlight.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Servicing:** Do not attempt to service the device yourself. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Please check the package contents upon unpacking. If any items are missing or damaged, contact your retailer.

- faytech FT08267410MW2G60G Touch-PC
- Power Adapter
- User Manual (this document)
- Antenna (for Wi-Fi)

4. PRODUCT OVERVIEW

Familiarize yourself with the components and interfaces of your Touch-PC.

4.1 Front and Side View



Image 1: Front and side view of the faytech FT08267410MW2G60G Touch-PC, showing the 8-inch display and side ventilation.

4.2 Rear Panel and Ports



Image 2: Rear view of the Touch-PC, highlighting the various input/output ports. From left to right: W-LAN antenna connector, Microphone input, Earphone output, DisplayPort, LAN1, LAN2, USB 3.0 ports (blue), USB 2.0 ports, COM port (DB9), and DC-IN power input.

4.3 Side Panel with Power Button



Image 3: Side view of the Touch-PC, showing the power button and additional ventilation grilles.

4.4 Rear Mounting and Cooling



Image 4: Rear view of the Touch-PC, illustrating the heat sink design and mounting points, likely for VESA compatibility.

5. SETUP

5.1 Connecting the Power Adapter

1. Connect the power adapter cable to the DC-IN port on the rear panel of the Touch-PC.
2. Plug the power adapter into a suitable electrical outlet.

5.2 Attaching the Wi-Fi Antenna

Screw the provided Wi-Fi antenna onto the W-LAN connector located on the rear panel.

5.3 Connecting Peripherals

Connect your keyboard, mouse, and any other USB devices to the available USB ports. If using an external display, connect it to the DisplayPort.

5.4 Network Connection

- **Wired Connection:** Connect an Ethernet cable from your router or network switch to either the LAN1 or LAN2 port on the rear panel.
- **Wireless Connection:** Ensure the Wi-Fi antenna is attached. The device will detect available Wi-Fi networks after booting.

6. OPERATING

6.1 Powering On/Off

- **Power On:** Press the power button located on the side panel (refer to Image 3). The device will begin to boot up.
- **Power Off:** To safely shut down the system, use the operating system's shutdown function. For a forced shutdown, press and hold the power button for approximately 5 seconds.

6.2 Using the Touchscreen

The 8-inch display is a touchscreen interface. Use your finger or a compatible stylus for navigation and input. Standard touch gestures (tap, drag, swipe) are supported by the operating system.

6.3 Operating System (Linux)

This Touch-PC typically comes with a Linux operating system pre-installed. Refer to the specific Linux distribution's documentation for detailed instructions on software installation, network configuration, and system management.

7. MAINTENANCE

7.1 Cleaning the Device

To clean the exterior of the Touch-PC, including the screen, use a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents.

7.2 Software Updates

Regularly check for and install operating system and driver updates to ensure optimal performance and security. Consult your Linux distribution's documentation for update procedures.

7.3 Storage and Environment

When not in use for extended periods, store the device in a cool, dry place. Protect it from dust and extreme temperature fluctuations.

8. TROUBLESHOOTING

This section addresses common issues you might encounter.

- **No Power:**
 - Ensure the power adapter is securely connected to both the device and the electrical outlet.
 - Verify the electrical outlet is functional.
- **No Display:**
 - Check if the device is powered on.
 - If an external monitor is connected, ensure it is powered on and the correct input source is selected.
- **Wi-Fi Connection Issues:**
 - Ensure the Wi-Fi antenna is properly attached.
 - Check Wi-Fi settings in the operating system to ensure Wi-Fi is enabled and connected to the correct network.
 - Restart the device and your Wi-Fi router.
- **Touchscreen Unresponsive:**
 - Restart the device.
 - Ensure the screen is clean and free of obstructions.

If problems persist, consult the faytech support website or contact your retailer.

9. SPECIFICATIONS

Feature	Specification
Model Number	FT08267410MW2G60G
Brand	faytech
Operating System	Linux
Processor	Intel ATOM N2600 (2 Cores)
RAM	2 GB DDR3 SDRAM
Storage Capacity	60 GB SSD (64 GB listed in some specs)
Screen Size	8 Inches
Human Interface Input	Touchscreen
Wireless Technology	Wi-Fi
Hardware Connectivity	DisplayPort, USB, Ethernet
Product Dimensions (L x W x H)	21.59 x 18.29 x 5.69 cm (8.5 x 7.2 x 2.24 inches)

Feature	Specification
Item Weight	2.63 kilograms

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official faytech website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question