

[Manuals.plus](#) /

› [Kaito](#) /

› Kaito KA249W Multi-Functional LED Camping Lantern User Manual

Kaito KA249W

Kaito KA249W Multi-Functional LED Camping Lantern User Manual

PRODUCT OVERVIEW

The Kaito KA249W is a versatile device designed for outdoor activities and emergency preparedness. It integrates an LED lantern, an AM/FM NOAA weather radio, and a cell phone charger into a single unit. This manual provides instructions for its setup, operation, and maintenance.



Figure 1: Kaito KA249W Multi-Functional Lantern with key features highlighted. This image illustrates the solar panel on top, LED flashlight, cell phone charging port, USB output, hand crank, and built-in speaker.

INITIAL SETUP

Battery Installation

The KA249W includes an internal 3.7V Li-ion 500 mAh rechargeable battery. For additional power or backup, the unit also supports 3 AA batteries (not included). To install AA batteries, locate the battery compartment on the base of the lantern, open it, insert the batteries according to the polarity indicators, and close the compartment securely.

Initial Charging

Before first use, it is recommended to fully charge the internal Li-ion battery using one of the available charging methods: solar, hand crank, or 5V DC USB input.

OPERATING INSTRUCTIONS

Lantern Operation

The lantern features 8 LED bulbs with two brightness levels. To operate the lantern:

1. Locate the light switch, typically on the front panel.
2. Slide the switch to the "Low" position for reduced brightness and extended battery life.
3. Slide the switch to the "High" position for maximum illumination.
4. Slide the switch to "Off" to turn off the lantern.

Radio Operation

The KA249W includes an AM/FM and NOAA weather band radio.

1. Extend the telescopic antenna for optimal reception.
2. Turn the "Volume" knob clockwise to power on the radio and adjust the sound level.
3. Use the "Band" switch to select between AM, FM, or WB (Weather Band).
4. Rotate the "Tuning" knob to scan for stations. The tuning dial indicates the frequency.
5. For NOAA weather broadcasts, select the WB band and tune to one of the 7 NOAA channels (162.400 MHz, 162.425 MHz, 162.450 MHz, 162.475 MHz, 162.500 MHz, 162.525 MHz, 162.550 MHz).

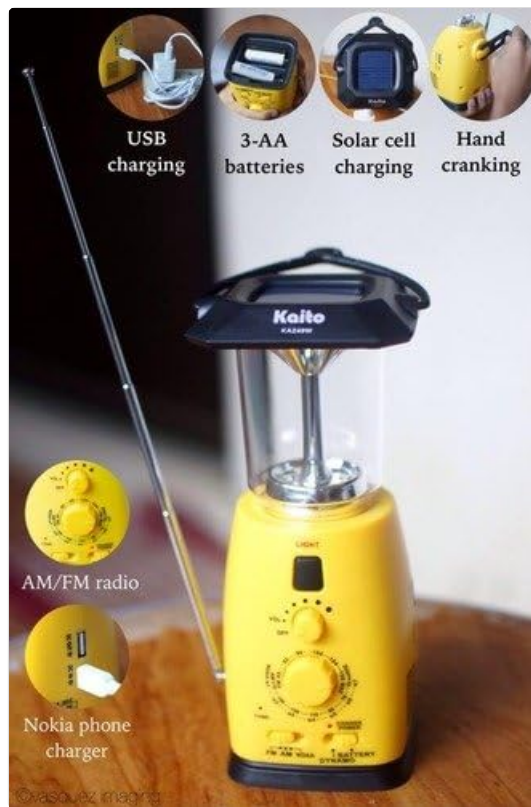


Figure 2: Front panel of the Kaito KA249W, detailing the radio controls, telescopic antenna, and indicators for different power sources.

POWERING OPTIONS

The KA249W offers multiple ways to power the unit and recharge its internal battery:

Solar Charging

Place the lantern with the solar panel facing direct sunlight. The solar panel is located on the top of the unit. Charging time varies depending on sunlight intensity.

Hand Crank Charging

Unfold the hand crank handle located on the side of the lantern. Rotate the crank clockwise or counter-clockwise at a steady pace (approximately 120-150 rotations per minute) for 3-5 minutes to generate power for the lantern or radio, or to provide a quick charge to the internal battery.

USB DC 5V Input Charging

Connect a standard Micro USB cable (not included) to the "DC IN 5V" port on the side of the lantern and plug the other end into a USB power source (e.g., computer, wall adapter). The charging indicator light will illuminate.

Cell Phone Charging (USB Output)

The lantern can charge compatible USB devices, such as cell phones, using its "DC OUT 5V" standard USB port. Connect your device's USB charging cable to this port. This function draws power from the lantern's internal battery or AA batteries. Note that charging a cell phone will deplete the lantern's battery more quickly.







Figure 3: Side view of the Kaito KA249W, highlighting the hand crank and USB input/output ports.

MAINTENANCE

- Keep the unit dry and clean. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the unit to extreme temperatures or direct moisture.
- If storing for an extended period, ensure the internal battery is partially charged and periodically recharge it to maintain battery health. Remove AA batteries if not in use for long periods to prevent leakage.

TROUBLESHOOTING

Lantern Not Lighting Up

- Check if the battery is depleted. Recharge the unit using solar, hand crank, or USB.
- Ensure AA batteries (if installed) are correctly inserted and not depleted.

Radio Not Receiving Stations Clearly

- Extend the telescopic antenna fully.
- Adjust the tuning knob slowly to find a clear signal.
- Move to an open area away from obstructions or interference.
- Check battery level; low power can affect reception.

Cell Phone Not Charging

- Ensure the lantern's internal battery has sufficient charge.
- Verify the USB cable is securely connected to both the lantern's "DC OUT 5V" port and your device.
- Confirm your device is compatible with 5V USB charging.

SPECIFICATIONS

Feature	Detail
Model Number	KA249W
Light Source	8 LED bulbs
Radio Bands	AM: 520 - 1710 KHz, FM: 88 - 108 MHz, NOAA Weather Channels: 7
Internal Battery	3.7V Li-ion 500 mAh
Backup Battery	3 AA batteries (not included)
DC Input	Micro USB 5V
DC Output	Standard USB 5V
Dimensions (L x W x H)	4.25" x 4.25" x 8.25"
Weight	10.56 ounces
Material	Plastic

Feature	Detail
Color	Yellow

SUPPORT INFORMATION

For further assistance or inquiries, please refer to the Kaito official website or contact customer support. Keep your model number (KA249W) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question