

Manuals.plus /

› IKEA /

› IKEA MICKE Desk User Manual

IKEA MICKE 802.130.74

IKEA MICKE Desk User Manual

Model: MICKE 802.130.74

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your IKEA MICKE Desk. Please read these instructions carefully before beginning assembly or use to ensure proper function and safety. The IKEA MICKE Desk is designed for home office environments, offering a clean and simple aesthetic that integrates well into various spaces. Its design incorporates features for cable management and efficient storage.

SAFETY INFORMATION

- Always follow the assembly instructions precisely.
- When used with an add-on unit, the entire combination must be secured to a wall to prevent tipping.
- Ensure all screws and fittings are tightened securely before use. Periodically check and re-tighten as necessary.
- Do not overload the desk or drawers.
- Always follow instructions for charging electronic equipment. Disconnect power when leaving electronic equipment unattended for extended periods.

SETUP AND ASSEMBLY

The MICKE Desk requires assembly. It is recommended to assemble the desk on a soft, clean surface to prevent scratches. Two people are recommended for assembly.

Components Overview

The desk consists of a tabletop, side panels, supporting legs, bottom panel, cable management components, back rail, shelf, and drawers. Specific materials include particleboard, fiberboard, paper, acrylic paint, ABS plastic, foil, steel, and epoxy/polyester powder coating.



Image: The IKEA MICKE Desk shown with its main components, including the open drawers and the side cabinet with shelves, highlighting

its storage capabilities.

Assembly Steps

1. Unpack all components and verify against the parts list provided in the original packaging.
2. Assemble the main frame of the desk, attaching the side panels to the tabletop and bottom panel.
3. Install the supporting leg structure.
4. Assemble and insert the drawers. Ensure drawer stops are correctly installed to prevent them from being pulled out too far.
5. Attach the cable management components and back rail.
6. If using an add-on unit, secure the entire combination to a wall using appropriate wall fasteners (not included).
7. Ensure all connections are firm and stable before placing items on the desk.



Image: The IKEA MICKE Desk positioned in a room, demonstrating its compact size and suitability for a home office setup, complete with a laptop and chair.

OPERATING INSTRUCTIONS

The MICKE Desk is designed for general office and study use. Its features are straightforward to operate.

Cable Management

The desk features a cable outlet at the back, allowing cords and cables to be routed discreetly, keeping the work surface tidy. The back of the desk is finished, allowing it to be placed anywhere in a room.

Drawer Usage

The drawers are equipped with stops to prevent them from being pulled out too far, enhancing safety and preventing accidental spills of contents.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your MICKE Desk.

Cleaning

- Wipe clean using a damp cloth and a mild cleaner.
- Wipe dry with a clean cloth immediately after cleaning to prevent moisture damage.
- Avoid abrasive cleaners or harsh chemicals that may damage the surface finish.

General Care

- Periodically check all assembly fittings and re-tighten them if necessary.
- Protect the surface from excessive heat, moisture, and direct sunlight.
- Use coasters or protective pads under hot or wet items.

TROUBLESHOOTING

This section addresses common issues you might encounter with your MICKE Desk.

Problem	Possible Cause	Solution
Desk feels wobbly or unstable.	Loose fittings or uneven floor.	Check and re-tighten all screws and bolts. Ensure the desk is on a level surface. Use furniture glides if necessary.
Drawers do not slide smoothly.	Dust/debris in runners or misaligned runners.	Clean drawer runners. Check if drawers are correctly installed on the runners. Ensure no items are obstructing the drawer path.
Desk surface is scratched or damaged.	Impact or abrasive contact.	For minor scratches, touch-up paint may be used (check with IKEA for suitable products). For deeper damage, consider a desk mat or surface protector.

SPECIFICATIONS

Detailed specifications for the IKEA MICKE Desk, Model 802.130.74.



Image: The IKEA MICKE Desk with key dimensions indicated: 105.11 cm width, 49.86 cm depth, and 74.93 cm height.

Model Number: MICKE 802.130.74

Brand: IKEA

Color: White

Product Dimensions: 105.11 cm (Width) x 49.86 cm (Depth) x 74.93 cm (Height)

Item Weight: Approximately 11.3 kg

Materials:

- Table top/ Side panel/ Supporting leg/ Bottom panel: Particleboard, Fiberboard, Paper, Acrylic paint, ABS plastic
- Cable management/ Back rail/ Shelf/ Front: Particleboard, Foil, ABS plastic
- Drawer side/ Drawer back: Foil
- Drawer bottom: Fiberboard, Acrylic paint
- Leg: Steel, Epoxy/polyester powder coating

Features: Cable outlet, finished back, drawer stops.

WARRANTY INFORMATION

Specific warranty details for IKEA products can vary by region and purchase date. Please refer to your original purchase receipt or visit the official IKEA website for the most accurate and up-to-date warranty information applicable to your product.

Generally, IKEA offers a limited warranty against defects in materials and workmanship for a specified period from the date of purchase. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, spare parts, or detailed assembly instructions, please contact IKEA customer service or visit their official website.

IKEA Official Website: www.ikea.com

Contact Information: Refer to the "Contact Us" section on your local IKEA website for phone numbers and support hours.

