

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [iDance](#) /

› [iDance Blue50LM Wireless Headphones User Manual](#)

## iDance Blue50LM

# iDance Blue50LM Wireless Headphones User Manual

Model: Blue50LM

## INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your iDance Blue50LM Wireless Headphones. Please read this manual thoroughly before using the product and retain it for future reference.

## PRODUCT OVERVIEW

The iDance Blue50LM are wireless headphones designed for audio playback and hands-free communication. Key features include a 10-meter operating range, advanced noise reduction, and a 30mm speaker driver for clear sound. The integrated rechargeable Lithium Battery provides up to 6 hours of continuous usage.



*An image showing the iDance Blue50LM wireless headphones. The headphones are green, with padded earcups and a padded headband. The right earcup appears to have control buttons.*

## SETUP

---

### 1. Charging the Battery

1. Locate the charging port on the headphones.
2. Connect the provided USB charging cable to the headphones and a compatible USB power source (e.g., computer USB port, USB wall adapter).
3. The LED indicator will illuminate to show charging status. It will typically change color or turn off when fully charged.
4. A full charge provides up to 6 hours of continuous usage.

### 2. Pairing with a Bluetooth Device

1. Ensure the headphones are fully charged.
2. Press and hold the Power button on the headphones until the LED indicator flashes, indicating pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, computer), go to the Bluetooth settings.
4. Search for available devices. The headphones should appear as "iDance Blue50LM" or similar.
5. Select the headphones from the list to initiate pairing.
6. Once paired, the LED indicator on the headphones will change to a steady light or flash slowly, and you may hear an audible confirmation.

## OPERATING INSTRUCTIONS

---

### Power On/Off

- **To Power On:** Press and hold the Power button for approximately 3 seconds.
- **To Power Off:** Press and hold the Power button for approximately 5 seconds.

### Music Playback

- **Play/Pause:** Press the Multi-function button (often the Power button or a dedicated play/pause button) once.
- **Next Track:** Press and hold the Volume Up button or a dedicated 'Next' button.
- **Previous Track:** Press and hold the Volume Down button or a dedicated 'Previous' button.
- **Volume Up:** Press the Volume Up button.
- **Volume Down:** Press the Volume Down button.

### Call Management

- **Answer Call:** Press the Multi-function button once when a call comes in.
- **End Call:** Press the Multi-function button once during a call.
- **Reject Call:** Press and hold the Multi-function button for approximately 2 seconds when a call comes in.
- **Redial Last Number:** Double-press the Multi-function button.

### Operating Range

The headphones maintain a stable connection within a 10-meter (33 feet) operating range from the paired device. Performance may vary based on environmental factors and obstacles.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.

- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in use for extended periods.
- Water Exposure:** These headphones are not waterproof. Avoid exposure to water or excessive moisture.

## TROUBLESHOOTING

Problem	Possible Solution
Headphones do not power on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair with a device.	<ul style="list-style-type: none"><li>Ensure headphones are in pairing mode (flashing LED).</li><li>Make sure Bluetooth is enabled on your device.</li><li>Move headphones closer to the device.</li><li>Forget the device from your Bluetooth list and try pairing again.</li></ul>
No sound or low volume.	<ul style="list-style-type: none"><li>Increase volume on both the headphones and the connected device.</li><li>Ensure the headphones are properly paired and connected.</li><li>Try restarting both the headphones and the connected device.</li></ul>
Poor call quality.	<ul style="list-style-type: none"><li>Ensure you are within the 10-meter operating range.</li><li>Minimize interference from other wireless devices.</li><li>Check your device's network signal.</li></ul>

## SPECIFICATIONS

- Model:** Blue50LM
- Brand:** iDance
- Connectivity:** Wireless (Bluetooth)
- Operating Range:** Up to 10 meters
- Speaker Driver:** 30 mm
- Battery:** Rechargeable Lithium Battery
- Continuous Usage:** Up to 6 hours
- Noise Reduction:** Advanced
- Item Weight:** Approximately 100 g (99.8 g)
- Package Dimensions:** 21.2 x 18.2 x 6.4 cm
- Manufacturer:** IDANCE

## SAFETY INFORMATION

Please observe the following safety guidelines:

- Do not expose the headphones to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not attempt to disassemble or modify the headphones, as this may void the warranty and cause damage.
- Keep out of reach of children.
- Dispose of the product and battery responsibly according to local regulations.
- Prolonged listening at high volume levels can cause hearing damage. Adjust volume to a safe level.

## **WARRANTY AND SUPPORT**

---

For warranty information and technical support, please refer to the documentation provided at the time of purchase or visit the official iDance website. Keep your proof of purchase for warranty claims.