

Farberware f89dc42b-47d6-403b-a108-8bc24efa4617-CA

Farberware 12-Cup Programmable Digital Coffee Maker Instruction Manual

Model: f89dc42b-47d6-403b-a108-8bc24efa4617-CA

INTRODUCTION

Welcome to your new Farberware 12-Cup Programmable Digital Coffee Maker. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure you get the best experience from your appliance.

Figure 1: Front view of the Farberware 12-Cup Programmable Digital Coffee Maker. The image displays the stainless steel and black exterior, the digital display showing "12:00", and the control buttons for Power/Brew, Strength, HR, MIN, Prog/Warm, and Clean. The glass carafe filled with coffee is visible below the brewing unit.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not place cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Scalding may occur if the lid is removed during the brewing cycles.
- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a cold or wet surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

COMPONENTS

Familiarize yourself with the parts of your coffee maker:

- **Lid:** Covers the water reservoir and filter basket area.
- **Water Reservoir:** Holds water for brewing, with dual water windows for easy level monitoring.
- **Filter Basket:** Holds the coffee filter and ground coffee.
- **Permanent Filter:** Reusable filter for ground coffee.
- **Chlorine Filter:** Cleans water before brewing.
- **Showerhead:** Distributes water evenly over coffee grounds.
- **Control Panel:** Features digital display and various function buttons.
- **Glass Carafe:** 12-cup capacity with a precision-pour rim to prevent drips.
- **Warming Plate:** Keeps brewed coffee hot.



Figure 2: Detail of the control panel. From left to right, buttons include POWER/BREW, STRENGTH, HR (Hour), MIN (Minute), PROG/WARM, and CLEAN. A digital display shows the current time or program setting.

SETUP

Before First Use

1. Unpack the coffee maker and remove all packaging materials.
2. Wipe the exterior of the coffee maker with a damp cloth.
3. Wash the glass carafe, permanent filter, and filter basket in warm, soapy water. Rinse thoroughly and dry.
4. Insert the chlorine filter into its designated holder within the water reservoir.

Initial Cleaning Cycle

Before brewing coffee for the first time, it is recommended to run a full brewing cycle with only water to clean the internal components:

1. Fill the water reservoir to the 12-cup mark with fresh, cold water.
2. Place the empty filter basket and permanent filter into position.
3. Place the empty glass carafe on the warming plate.
4. Plug the coffee maker into a standard electrical outlet.
5. Press the **POWER/BREW** button to start the cycle.
6. Allow the cycle to complete. Discard the water from the carafe.
7. Repeat this process once more for thorough cleaning.

OPERATING INSTRUCTIONS

Brewing Coffee

1. Open the lid and fill the water reservoir with fresh, cold water to your desired level, using the dual water windows as a guide.
2. Place the permanent filter or a paper filter (cone-style) into the filter basket.
3. Add the desired amount of ground coffee to the filter. A general guideline is one level tablespoon of coffee per cup. Adjust to taste.
4. Close the lid securely.
5. Place the empty glass carafe on the warming plate.
6. Press the **STRENGTH** button repeatedly to select your desired brew strength:*Strong, Gourmet, Bold, or Normal.* The selected strength will be indicated on the digital display.
7. Press the **POWER/BREW** button to begin brewing. The indicator light will illuminate.
8. The coffee maker will automatically keep the coffee warm for up to four hours after brewing is complete.

Setting the Programmable Timer (Auto Function)

The programmable timer allows you to set the coffee maker to start brewing at a specific time.

1. Ensure the current time is set correctly on the digital display. If not, press the **HR** and **MIN** buttons to adjust the time.
2. Prepare the coffee maker for brewing as described in the "Brewing Coffee" section (water, coffee, carafe in place).
3. Press the **PROG/WARM** button once. The display will show "PROG".
4. Use the **HR** and **MIN** buttons to set the desired brew-start time.
5. Press the **PROG/WARM** button again to confirm the programmed time. The "PROG" indicator light will illuminate, indicating the timer is set.
6. The coffee maker will automatically start brewing at the set time.

Using the Keep Warm Function

The coffee maker automatically keeps coffee warm for up to 4 hours after brewing. To manually activate or extend the warming function (if not already active):

- After brewing, the warming plate will remain on for 4 hours.
- To turn off the warming plate before the 4-hour period, press the **POWER/BREW** button.

MAINTENANCE

Daily Cleaning

1. Always unplug the coffee maker before cleaning and allow it to cool completely.
2. Discard used coffee grounds and filter.
3. Wash the glass carafe, permanent filter, and filter basket in warm, soapy water. These parts are also top-rack dishwasher safe.
4. Wipe the exterior of the coffee maker, warming plate, and control panel with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
5. Do not immerse the coffee maker in water or any other liquid.

Descaling (Clean Function)

Mineral deposits (calcium) can build up in your coffee maker over time, affecting its performance. The "CLEAN" function helps remove these deposits. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

1. Remove the chlorine filter from the water reservoir before descaling.
2. Fill the water reservoir with a mixture of 1 part white vinegar and 2 parts cold water. For example, for a 12-cup cycle, use 4 cups of vinegar and 8 cups of water.
3. Place the empty filter basket (without coffee or filter) and the empty glass carafe on the warming plate.
4. Press the **CLEAN** button. The "CLEAN" indicator light will illuminate, and the descaling cycle will begin.
5. Allow the cycle to complete. The coffee maker will pause periodically during the cycle to allow the cleaning solution to soak.
6. Once the cycle is finished, discard the vinegar solution from the carafe.
7. Run 2-3 full cycles with fresh, cold water only to rinse out any remaining vinegar taste or odor.
8. Reinsert the chlorine filter after rinsing is complete.

TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	Coffee maker not plugged in; power outage; water reservoir empty; brew cycle not initiated.	Ensure unit is plugged in; check power supply; fill water reservoir; press POWER/BREW button.
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio; incorrect brew strength setting.	Adjust amount of coffee grounds; select desired brew strength using the STRENGTH button.
Coffee overflows from filter basket.	Too much coffee grounds; filter basket not seated correctly; clogged filter.	Reduce coffee grounds; ensure filter basket is properly inserted; clean filter or use a new paper filter.
Coffee tastes bad.	Mineral buildup; stale coffee; unclean carafe.	Perform descaling cycle; use fresh coffee; clean carafe thoroughly.
Carafe drips when pouring.	Carafe lid not properly aligned or damaged.	Ensure carafe lid is securely and correctly placed. If damaged, replace carafe.

SPECIFICATIONS

- **Model Number:** f89dc42b-47d6-403b-a108-8bc24efa4617-CA
- **Capacity:** 12 Cups
- **Voltage:** 120 Volts
- **Wattage:** 900 Watts
- **Dimensions (L x W x H):** Approximately 10.43" x 8.07" x 14.29" (26.5 cm x 20.5 cm x 36.3 cm)
- **Weight:** Approximately 6.94 lbs (3.15 kg)
- **Material:** Stainless Steel, Plastic
- **Color:** Black & Stainless

- **Special Features:** Programmable, Timer, Keep Warm Function (4 hours), Chlorine Filter, Dual Water Windows, 4 Brew Strengths

WARRANTY & SUPPORT

This Farberware 12-Cup Programmable Digital Coffee Maker comes with a **2-year limited warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal household use. For warranty claims, technical support, or replacement parts, please contact Farberware Customer Service. Refer to the product packaging or the official Farberware website for the most current contact information. Please retain your proof of purchase for warranty validation.

Related Documents

 <p>FARBERWARE DUAL BREW COFFEE MAKER</p> <p>Please read this manual completely before operating your unit and retain for future reference. The glass carafe is not included.</p> <p>814100109</p>	<p><u>Farberware Dual Brew Coffee Maker - User Manual</u></p> <p>Comprehensive user manual for the Farberware Dual Brew Coffee Maker, covering important safety instructions, parts identification, operation, brewing methods for single-serve and carafe, cleaning, maintenance, troubleshooting, and technical data.</p>
 <p>FARBERWARE DUAL BREW COFFEE MAKER</p> <p>Please read this manual completely before operating your unit and retain for future reference.</p> <p>814100109</p>	<p><u>Farberware Dual Brew Coffee Maker User Manual</u></p> <p>Comprehensive user manual for the Farberware Dual Brew Coffee Maker, covering important safety instructions, parts identification, operation, brewing methods for single-serve and carafe, cleaning, maintenance, descaling, troubleshooting, and technical data.</p>
 <p>FARBERWARE STAINLESS STEEL ELECTRIC PERCOLATOR</p> <p>USE & CARE INSTRUCTIONS</p>	<p><u>Farberware Stainless Steel Electric Percolator User Manual and Safety Guide</u></p> <p>Comprehensive guide for Farberware stainless steel electric percolators (models FCP240, FCP280, FCP412), including safety instructions, usage, care, cleaning, and warranty information.</p>
 <p>FARBERWARE MILLENNIUM</p> <p>USE & CARE INSTRUCTIONS ESPRESSO MAKER</p>	<p><u>Farberware FES15B Espresso Maker: Use and Care Instructions</u></p> <p>Comprehensive use and care instructions for the Farberware Millennium FES15B Espresso Maker, covering important safety precautions, operation, brewing espresso, preparing cappuccino, user maintenance, descaling, and warranty information.</p>