

Toshiba ER-LD330

Toshiba Stone Dome Superheated Steam Oven Range ER-LD330 Instruction Manual

Model: ER-LD330

1. PRODUCT OVERVIEW

The Toshiba Stone Dome Superheated Steam Oven Range ER-LD330 is a versatile kitchen appliance designed for various cooking methods including microwave, oven, grill, and superheated steam. Its unique "Stone Dome structure" ensures rapid and even circulation of hot air along the curved ceiling inside the oven cavity. This design, combined with 300°C superheated steam, allows for oil-free frying (non-fry) cooking.



Figure 1: Front view of the Toshiba Stone Dome Superheated Steam Oven Range ER-LD330, featuring a sleek design and control panel.

This appliance offers a 30-liter capacity, making it suitable for a wide range of dishes. It includes various automatic cooking programs and defrost functions for convenience.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Do not operate the oven if the door is damaged or if the seals are not working correctly.
- Ensure proper ventilation around the appliance. Do not block any ventilation openings.
- Do not heat liquids or other foods in sealed containers, as they are liable to explode.
- Always use oven mitts when handling hot dishes or accessories.
- Unplug the appliance from the power outlet before cleaning or maintenance.
- Keep children away from the appliance during operation and when it is cooling down.
- Do not use corrosive chemicals or abrasive cleaners on this appliance.

3. SETUP

3.1 Unpacking

- Carefully remove the appliance from its packaging.
- Remove all packing materials, including any protective film or tape from the interior and exterior.
- Check for any damage during transit. If damaged, do not operate and contact customer support.

3.2 Placement

- Place the oven on a stable, level, heat-resistant surface, such as a countertop.
- Ensure there is adequate space around the appliance for ventilation: at least 10 cm on the sides, 20 cm at the rear, and 30 cm above.
- Do not place the oven near heat sources or in direct sunlight.

3.3 Initial Cleaning

- Wipe the interior and exterior surfaces with a damp cloth and mild detergent.
- Clean all accessories (baking trays, grill net) with warm soapy water before first use.
- Ensure all parts are completely dry before plugging in the appliance.

3.4 Power Connection

- Plug the power cord into a grounded 100V AC electrical outlet.
- Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

The ER-LD330 offers multiple cooking modes. Familiarize yourself with the control panel, which features a keypad and buttons for various functions.

4.1 Microwave Function

- Place food in a microwave-safe container inside the oven.
- Close the oven door securely.
- Select the desired power level (1000W, 600W, 500W, 200W equivalent, 100W equivalent).
- Set the cooking time using the keypad or dial.
- Press the Start button to begin cooking.

4.2 Oven/Grill Function

- Place food on the appropriate baking tray or grill net.
- Select Oven or Grill mode.
- Set the desired temperature (up to 300°C for oven) and cooking time.
- For oven cooking, preheating may be required. Follow recipe instructions.
- Press the Start button.

4.3 Superheated Steam Function

- Fill the water tank with fresh water as indicated in the manual.
- Place food in a suitable container or directly on the baking tray.
- Select the Steam function or a specific superheated steam program.
- Set cooking time if not using an automatic program.
- Press the Start button.

4.4 Automatic Cooking Programs

- The appliance features various automatic cooking programs for convenience.
- Refer to the separate recipe book for a detailed list of programs and instructions.
- Select the desired program using the control panel.
- Follow on-screen prompts or manual instructions for food placement and quantity.
- Press the Start button.

4.5 Defrost Function

- Place frozen food in a microwave-safe container.
- Select the Defrost function.
- Enter the weight of the food or select a pre-set defrost program.
- Press the Start button.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

5.1 General Cleaning

- Always unplug the oven before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the interior cavity with a damp cloth and mild detergent after each use to prevent food residue

buildup.

- For stubborn stains, use a specialized oven cleaner suitable for microwave ovens, following the product instructions.

5.2 Cleaning Accessories

- The far-infrared baking trays (with "Torechau Coat") and grill net can be washed with warm soapy water.
- Ensure accessories are completely dry before placing them back into the oven.

5.3 Water Tank Cleaning

- Remove the water tank and empty any remaining water after each steam use.
- Clean the tank with warm water and a soft brush. Rinse thoroughly.
- Periodically descale the water tank and steam generator according to the instructions in the full user manual to prevent mineral buildup.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Power cord not plugged in; circuit breaker tripped.	Ensure cord is securely plugged in; check circuit breaker.
Food not heating evenly in microwave mode.	Food placed incorrectly; incorrect power level/time.	Rearrange food; adjust power level and time.
Oven not reaching desired temperature.	Door not closed properly; preheating insufficient.	Ensure door is fully closed; allow sufficient preheating time.
Steam function not producing steam.	Water tank empty; mineral buildup.	Fill water tank; descale the water tank and steam generator.
Unusual noise during operation.	Loose accessories; internal component issue.	Check for loose accessories; if noise persists, contact service.

If the problem persists after attempting these solutions, please contact Toshiba customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Toshiba (TOSHIBA)
Model Number	ER-LD330
Color	Grand White
Oven Capacity	30 Liters

Feature	Specification
Main Unit Size (W x D x H)	50.0 x 45.0 x 38.8 cm
Effective Internal Size (W x D x H)	39.8 x 33.0 x 23.2 cm
Weight	18.0 kg
Microwave Power Consumption	1430 W
Microwave Output	1000W, 600W, 500W, 200W equivalent, 100W equivalent
Oven/Grill Power Consumption	1420 W
Heater Output (Oven/Grill/Steam)	Oven 1390W, Grill 1100W, Steam 350W
Voltage	100 V (AC)
Installation Type	Countertop
Special Functions	Automatic cooking, Defrost
Material	Ceramic (interior)
Energy Saving Achievement Rate (2008 target)	104%
Annual Power Consumption	70.6 kWh/year
Included Accessories	2 Far-infrared baking trays (with Torechau Coat), Grill net, Instruction manual, Separate recipe book

8. WARRANTY AND SUPPORT

This Toshiba appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details.

8.1 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Toshiba customer support. Contact information can typically be found on the warranty card, the official Toshiba website, or the product packaging.

When contacting support, please have your model number (ER-LD330) and purchase date readily available.

