



Manuals.plus /

› Philips /

› Philips HP 8643 Hair Straightener and Hair Dryer Combo Pack User Manual

Philips HP8643

Philips HP 8643 Hair Straightener and Hair Dryer Combo Pack User Manual

Model: HP8643

1. PRODUCT OVERVIEW

The Philips HP 8643 Hair Straightener and Hair Dryer Combo Pack is designed for versatile hair styling. This compact and ergonomic set provides tools for both drying and straightening hair, offering flexibility for various hairstyles.



Image: Philips HP 8643 Hair Straightener and Hair Dryer Combo Pack, showcasing both the pink hair dryer and the pink hair straightener.

2. WHAT'S IN THE BOX

Your Philips HP 8643 Combo Pack includes the following items:

- 1 Hair Dryer
- 1 Hair Straightener
- Adaptor
- Storage Hook
- Warranty Card
- User Manual

Unboxing Video

Your browser does not support the video tag.

Video: This video demonstrates the unboxing process and shows all the components included in the Philips HP 8643 Hair Straightener and Hair Dryer Combo

3. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to avoid injury or damage. Keep this manual for future reference.

- Do not use the appliance near water.
- Always unplug the appliance after use.
- Keep the appliance away from heat sources.
- Do not use if the cord or plug is damaged.
- Ensure hands are dry before plugging in or unplugging.
- Keep out of reach of children.

4. SETUP

Before first use, ensure all packaging materials are removed. Plug the appliance into a suitable power outlet. The hair straightener heats up quickly, typically within 60 seconds.

5. OPERATING INSTRUCTIONS

5.1. Hair Dryer Usage

The hair dryer features 2 flexible speed settings for optimal airflow. Always blow dry in a downwards motion and in one direction for best results. Ensure hair is clean and semi-dried before use.

5.2. Hair Straightener Usage

The hair straightener features ceramic heating plates for smooth, shiny hair. It reaches a professional temperature of 210 degrees Celsius. Use on clean, dry hair. Section hair with a comb and clips for easier straightening. Move the straightener smoothly through each section from root to tip.

5.3. Styling Guides

Explore various hairstyles with your Philips HP 8643 combo pack. Below are video guides for popular styles:

Sleek Straight Hairstyle

Your browser does not support the video tag.

Video: This tutorial demonstrates how to achieve a sleek straight hairstyle using the Philips hair dryer and straightener.

Smart Side Bangs Hairstyle

Your browser does not support the video tag.

Video: Learn how to create smart side bangs with volume using the Philips hair dryer and a round brush.

Cute Curls Hairstyle

Your browser does not support the video tag.

Video: This guide shows how to create cute curls using the Philips hair straightener by winding hair sections around the plates.

Edgy Flipped Up Hairstyle

Your browser does not support the video tag.

Video: Discover how to achieve an edgy flipped-up look by turning the straightener slightly outwards at the hair ends.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Philips HP 8643 appliances, follow these maintenance guidelines:

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For the hair dryer, regularly clean the air inlet and outlet grilles to prevent dust buildup, which can affect performance.
- For the hair straightener, gently wipe the ceramic plates to remove any product residue.
- Store the appliances in a dry place, preferably using the provided storage hook for the hair dryer.

7. TROUBLESHOOTING

If you encounter any issues with your Philips HP 8643 appliances, refer to the following common troubleshooting tips:

- **Appliance not turning on:** Check if the power cord is securely plugged into a working outlet. Ensure the power switch is in the 'ON' position.
- **Hair dryer not blowing air or blowing weak air:** Check for any obstructions in the air inlet or outlet grilles. Clean them if necessary.
- **Hair straightener not heating up:** Ensure the appliance is plugged in and switched on. Allow sufficient time for it to heat up (approximately 60 seconds).
- **Hair damage/frizz:** Ensure your hair is completely dry before using the straightener. Consider using a heat protectant spray.
- **Overheating:** Both products are designed to automatically switch off if they overheat. Unplug the appliance and let it cool down before attempting to use it again.

If the problem persists, please contact Philips customer support or refer to the warranty information.

8. SPECIFICATIONS

Feature	Detail
Brand	Philips
Model Name	HP8643/00
Item Model Number	HP8643
Color	Pink
Material	Ceramic
Wattage	1000 Watts
Power Source	Electric
Hair Type	Damaged (Note: Suitable for all hair types)
Number of Settings	2 (for hair dryer)
Special Features	Flexible Speed Settings, Ceramic Heating Plates, Handle Lock System
Item Weight	740 Grams
Product Dimensions	0.1 x 0.1 x 0.1 cm

9. WARRANTY AND SUPPORT

The Philips HP 8643 Hair Straightener and Hair Dryer Combo Pack comes with a 6-month manufacturer's warranty from the date of purchase. For warranty claims or technical support, please refer to the contact information provided on your warranty card or visit the official Philips website.

You may also consider purchasing an extended warranty for additional coverage.

For further information, visit the [Philips Store on Amazon](#).