

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BECKER ANTRIEBE GmbH](#) /
- › [Becker EC5410-II Centronic EasyControl 10-Channel Remote Control User Manual](#)

BECKER ANTRIEBE GmbH EC5410-II

Becker EC5410-II Centronic EasyControl 10-Channel Remote Control User Manual

Model: EC5410-II | Brand: BECKER ANTRIEBE GmbH

INTRODUCTION

This manual provides comprehensive instructions for the Becker EC5410-II Centronic EasyControl 10-channel handheld transmitter. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual carefully before using the remote control.

PRODUCT FEATURES

- Clear 10-channel display with 3-color LEDs for easy identification.
- Allows programming of 2 freely selectable intermediate positions per channel.
- Includes a wall mount and a labeling field on the back for convenient organization.
- Supports individual, group, or central control of connected devices.

SETUP

Battery Installation

The Becker EC5410-II remote control operates on a Lithium-ion battery. While the product specifications indicate batteries are not included or required for purchase, please check the device's battery compartment for specific battery type and installation instructions. Ensure correct polarity when inserting batteries.

Pairing with Centronic Receiver

1. Ensure your Centronic receiver is in pairing mode. Refer to your receiver's manual for specific instructions on how to activate pairing mode.
2. On the EC5410-II remote, select the desired channel you wish to pair.
3. Press and hold the programming button (often located on the back or side of the remote) until the receiver confirms successful pairing (e.g., a short movement of the connected device or an audible signal).
4. Test the remote control's functionality on the paired channel.

OPERATING INSTRUCTIONS

Channel Selection

Use the channel selection buttons (typically up/down arrows or numbered buttons) to navigate between the 10 available channels. The 3-color LEDs will indicate the currently selected channel.

Individual, Group, and Central Control

- **Individual Control:** Select a specific channel to operate a single device.
- **Group Control:** The remote allows for two groups of 5 channels. Consult your receiver's manual for setting up groups. Once configured, select the designated group channel to control multiple devices simultaneously.
- **Central Control:** A dedicated central channel may be available to control all paired devices at once.

Programming Intermediate Positions

The EC5410-II allows you to program two freely selectable intermediate positions per channel. To program an intermediate position:

1. Move the connected device to the desired intermediate position using the UP/DOWN buttons.
2. Press and hold the STOP button until the device briefly moves or a confirmation signal is received.
3. The intermediate position is now saved for the selected channel. Repeat for the second intermediate position if desired.

MAINTENANCE

Battery Replacement

If the remote control's response becomes sluggish or the LEDs dim, it may be time to replace the battery. Open the battery compartment (if applicable) and replace the old battery with a new Lithium-ion battery of the correct type, ensuring proper polarity. Dispose of old batteries responsibly.

Cleaning

Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the device's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:** Check battery level and replace if necessary. Ensure the remote is within range of the receiver. Verify that the correct channel is selected.
- **Device not pairing:** Ensure the receiver is in pairing mode. Confirm the remote is transmitting on the correct frequency. Try resetting both the remote and receiver (refer to their respective manuals for reset procedures).
- **Limited range:** Check for obstructions between the remote and receiver. Ensure there are no strong interference sources nearby (e.g., other wireless devices, large metal objects).

If problems persist, please contact customer support.

SPECIFICATIONS

Manufacturer	Becker
Model Number (Reference)	4034 000 203 0

Package Dimensions	15 x 10.5 x 4 cm
Item Weight	133 grams
Battery Type	Lithium-ion (internal or user-replaceable, not included)
ASIN	B00DVG45T2
Date First Available	May 18, 2022
Discontinued by Manufacturer	No

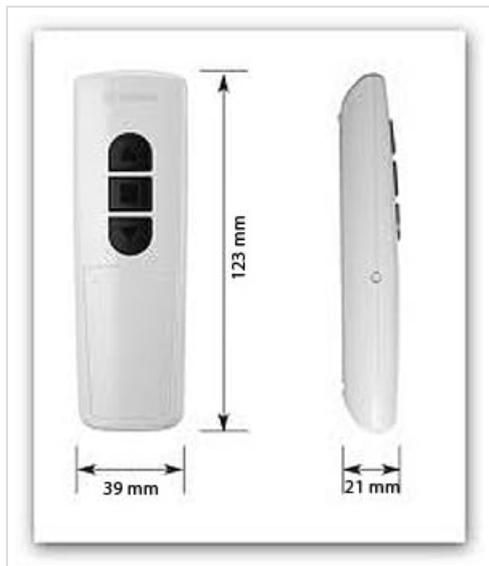


Image: Dimensions of the Becker EC5410-II Centronic EasyControl remote control. The front view shows a width of 39 mm and a height of 123 mm. The side view shows a depth of 21 mm.

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or spare parts, please refer to the documentation provided with your purchase or visit the official BECKER ANTRIEBE GmbH website. Contact details for customer service can typically be found on the manufacturer's website or product packaging.