

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DIMPLEX](#) /

› [DIMPLEX YOOQLE X-061454 Electric Stove Instruction Manual](#)

DIMPLEX X-061454

DIMPLEX YOOQLE X-061454 Electric Stove Instruction Manual

Model: X-061454

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your DIMPLEX YOOQLE X-061454 Electric Stove. Please read these instructions carefully before installation and use, and retain them for future reference.

IMPORTANT SAFETY INFORMATION

- Always ensure the appliance is placed on a firm, level surface.
- Do not cover the heater or obstruct the air inlet/outlet openings.
- Keep combustible materials such as furniture, curtains, and other fabrics at least 1 meter (3 feet) from the front of the heater.
- Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool.
- Unplug the appliance when not in use and before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Upon opening the package, verify that all components are present and undamaged:

- DIMPLEX YOOQLE X-061454 Electric Stove Unit
- Remote Control (with 1 CR2032 battery included)

- Instruction Manual (this document)

SETUP

Unpacking and Placement

The DIMPLEX YOOQLE X-061454 Electric Stove is designed for freestanding installation and comes fully assembled. Carefully remove the stove from its packaging. Place the stove on a stable, level surface in your desired location, such as a living room. Ensure there is adequate clearance from walls and other objects as specified in the safety information. The stove dimensions are approximately 13.39"D x 20.08"W x 23.5"H (510 x 340 x 597 mm).

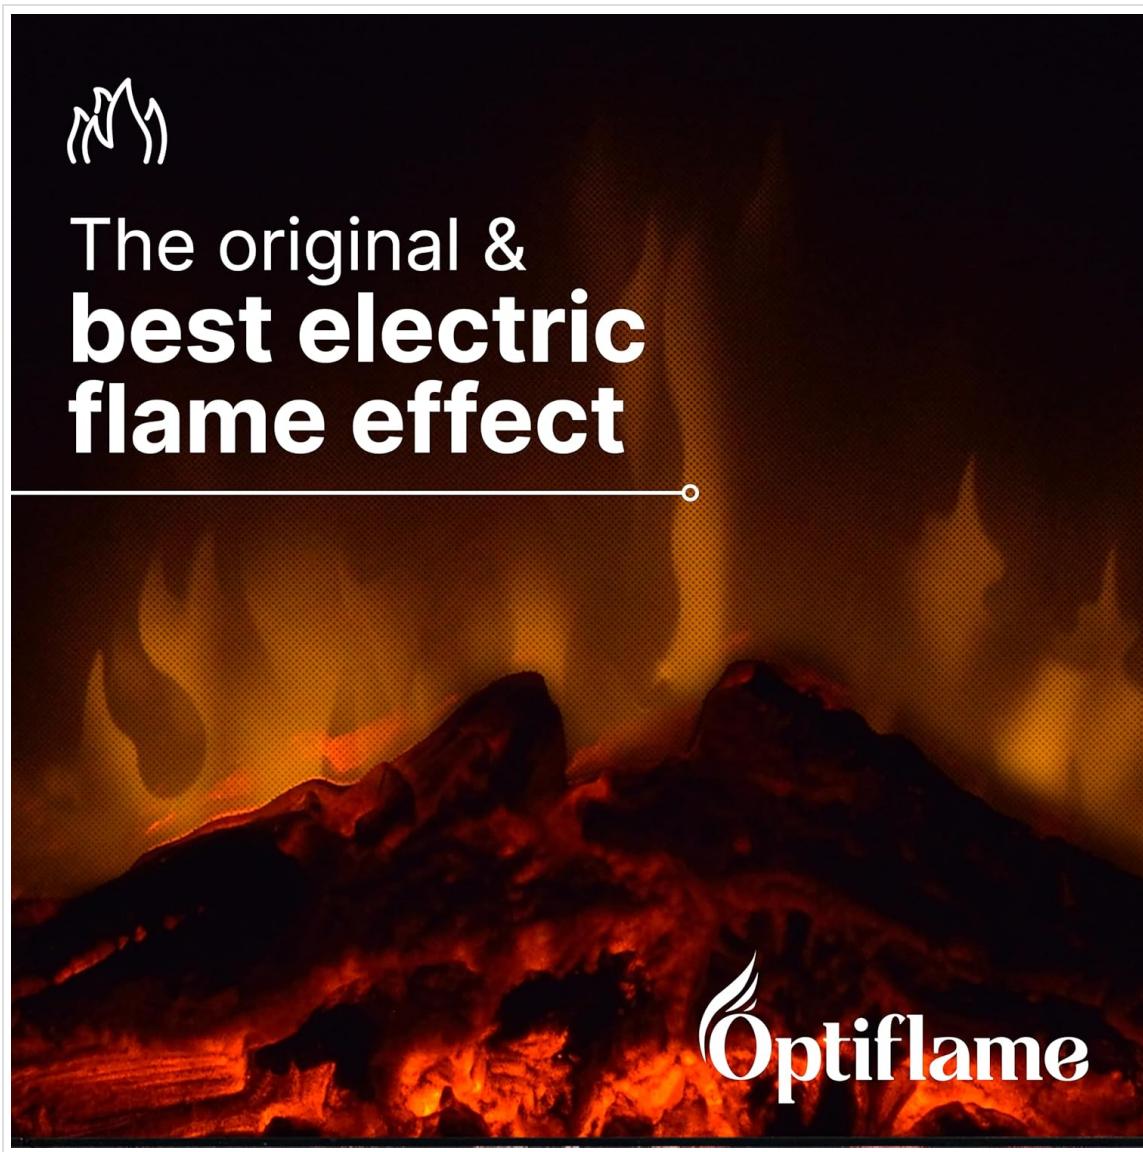


Figure 1: Product Dimensions. This image illustrates the height, width, and depth of the electric stove for proper placement and clearance.

Power Connection

The stove operates on corded electric power. Ensure the power cord is fully extended and plug it into a suitable electrical outlet. The appliance is fitted with a plug and is ready for use.



Dimensions



Figure 2: Quick Comfort Features. This image highlights the remote control, powerful fan-heating, and easy connection of the stove.

OPERATING INSTRUCTIONS

Controls Overview

The controls for the electric stove are discreetly located behind the opening door. A remote control is also provided for convenience.



Easy-Setup Stove



The Club is a classic, medium-sized stove with easy plug-and-play setup, perfect for any space.

Figure 3: Remote and Controls. This image details the manual controls and the remote control for the stove, indicating the thermostatic knob and heat setting switches.

Powering On/Off

1. To turn the stove on or off, use the ON/OFF switch located behind the door or the corresponding button on the remote control.

Flame Effect

The Optiflame log effect provides a realistic flame display, which can be used independently of the heat source. The illusion of dying embers is maintained even when the unit is switched off.



Figure 4: Optiflame Log Effect. This image displays the realistic flame and ember effect of the electric stove.

Heat Settings

The stove features a 2kW fan heater with two heat settings:

- **1kW Heat Output:** Activate switch 'I' behind the door.
- **2kW Heat Output:** Activate switch 'II' behind the door. This provides the full 2000 Watts of heat output.

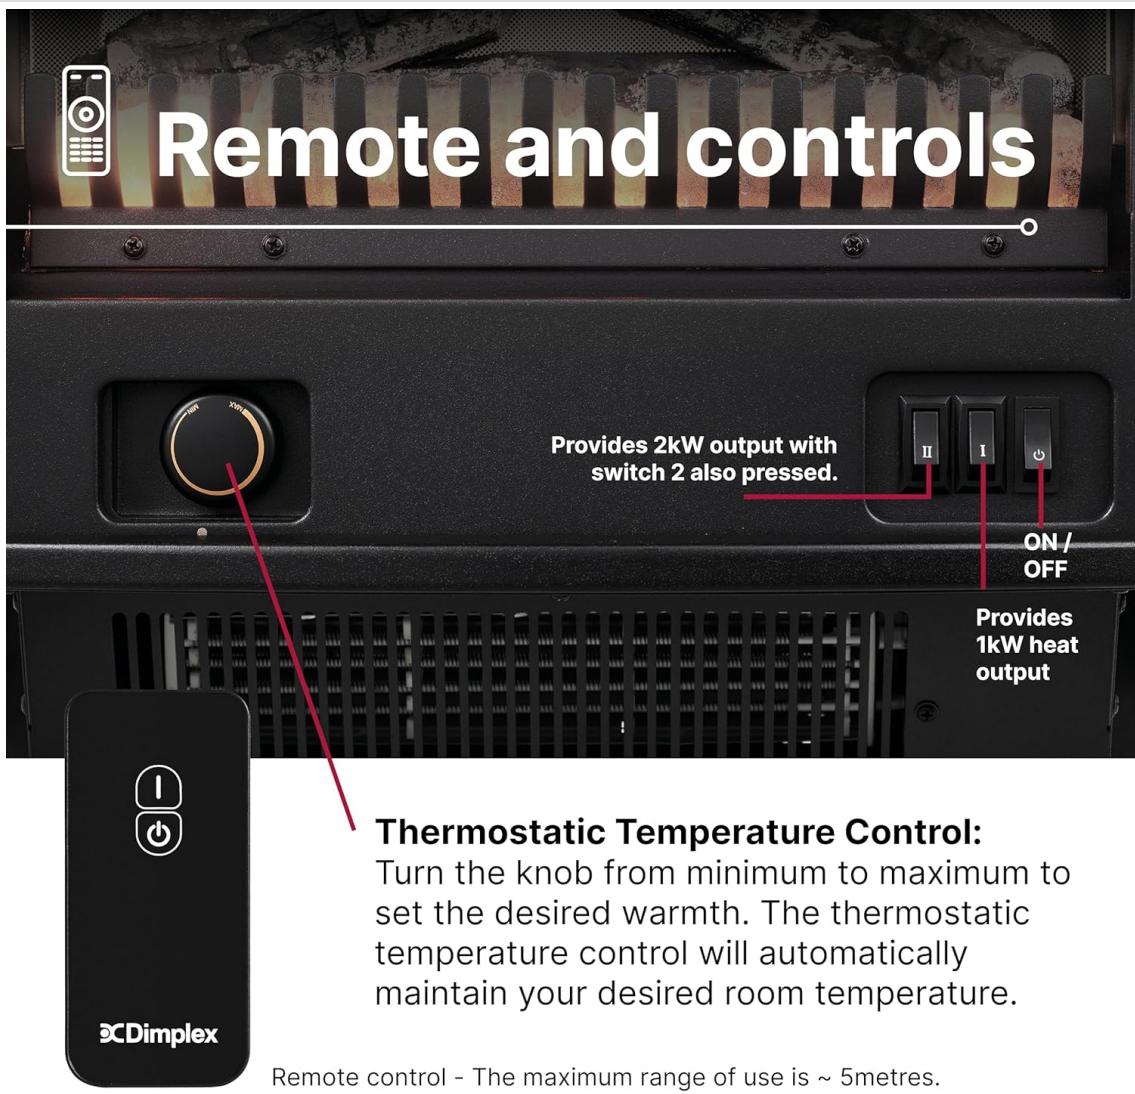


Figure 5: 2kW Heat Output. This image illustrates the powerful fan heating capability of the stove.

Thermostatic Temperature Control

To set the desired room temperature:

1. Turn the thermostatic control knob (located behind the door, as shown in Figure 3) from minimum to maximum.
2. The stove will automatically adjust its heat output to maintain your selected room temperature.



Figure 6: Energy Saving Features. This image highlights the LED lights for flame effect, low wattage option for flame-only use, and thermostatic control for efficient heating.

MAINTENANCE

Cleaning

- Always disconnect the appliance from the power supply before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or polishes as these may damage the finish.
- Periodically check the air inlet and outlet openings for dust or debris and clean if necessary to ensure proper airflow.

Light Bulb Replacement (if applicable)

The flame effect uses LED lights, which are designed for long life and typically do not require replacement. If an issue arises, consult a qualified technician.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power to the unit.	Power cord not plugged in; circuit breaker tripped; wall outlet faulty.	Ensure the power cord is securely plugged into a working outlet. Check your household circuit breaker. Test the outlet with another appliance.
No heat output.	Heat settings not selected; thermostatic control set too low; thermal cut-out activated.	Ensure heat switches 'I' or 'II' are engaged. Adjust the thermostatic control to a higher setting. If the unit has overheated, unplug it, allow it to cool for 10-15 minutes, then plug it back in.
Flame effect not working.	Flame effect switch off; LED fault.	Ensure the main power switch is on. If the flame effect still does not work, contact customer support.
Remote control not working.	Battery depleted or incorrectly inserted; remote out of range.	Replace the CR2032 battery in the remote control, ensuring correct polarity. Operate the remote within approximately 5 meters of the stove.

SPECIFICATIONS

Brand	DIMPLEX
Model Name	YOOQLE
Item Model Number	X-061454
Power Source	Corded Electric
Product Dimensions (D x W x H)	13.39" x 20.08" x 23.5" (510 x 340 x 597 mm)
Material	Cast Iron
Finish Type	Matt Black
Installation Type	Freestanding
Heat Output	2000 Watts (2kW)
Special Feature	Flame Effect, Thermostatic Control
Included Components	Remote Control
Item Weight	16.7 Kilograms / 36.7 pounds
Remote Control Battery	1 x CR2032 (included)
GTIN	05011139046369

WARRANTY AND SUPPORT

Warranty Information

This DIMPLEX product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official DIMPLEX website for detailed terms and conditions. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, spare parts, or any questions regarding your DIMPLEX YOOQLE X-061454 Electric Stove, please contact DIMPLEX customer support. Contact details can typically be found on the DIMPLEX website or on your product packaging.

You can also visit the [DIMPLEX Store on Amazon](#) for more product information and support resources.

© 2025 DIMPLEX. All rights reserved.

This manual is subject to change without notice.