

[Manuals.plus](#) /

› [Camco](#) /

› Camco EZ Level RV Leveling System (Model 25505) Instruction Manual

## Camco 25505

# Camco EZ Level RV Leveling System Instruction Manual

Model: 25505

## 1. PRODUCT OVERVIEW

---

The Camco EZ Level is an electronic RV leveling system designed to simplify the process of leveling your recreational vehicle. It provides visual feedback through illuminated indicator lights, allowing for precise adjustments on both the front-to-back and side-to-side axes simultaneously.

Key features include:

- **Simultaneous-Axis Leveling:** Guides leveling on both axes at once.
- **Illuminated Indicator Lights:** Green lights indicate a level position, while red lights signify a low side.
- **Energy-Saving Automatic Shut-Off:** Powers off after 10 minutes of inactivity to conserve battery life.
- **Pre-Installed On/Off Switch:** For user-friendly operation.
- **Compact Design:** Easy to store when not in use.



Image: Camco EZ Level RV Leveling System with green indicator lights and an RV in the background.

## 2. SETUP AND INSTALLATION

---

Before initial use, ensure three AA batteries are installed in the unit. Batteries are not included.

1. **Battery Installation:** Locate the battery compartment on the underside of the EZ Level. Open the compartment, insert three AA batteries, ensuring correct polarity, and close the compartment securely.
2. **Placement:** Place the EZ Level on a flat, stable surface on the floor in the middle of your RV.
3. **Orientation:** Ensure the four legs of the unit are oriented to point towards the front, back, left, and right sides of the RV.
4. **Power On:** Press the start button located in the center of the unit to power it on. The indicator lights will activate.

The advertisement features a top-down view of the Camco EZ Level device, which is a black, four-armed sensor unit with glowing green indicator lights on each arm and a central button. The device is set against a dark blue background with a subtle wave pattern. In the upper right corner, there is an inset photograph of a white motorhome parked in a grassy area at dusk, with its interior lights on and a ladder extended. The Camco logo is prominently displayed in the top left corner.

# CAMCO®

## EZ LEVEL

# RV Leveling System

Image: Top-down view of the Camco EZ Level showing its four arms and central button, with X and Y axes indicating leveling directions.

### 3. OPERATING INSTRUCTIONS

---

The Camco EZ Level provides real-time visual feedback to guide your RV leveling process.

1. **Initial Reading:** After powering on, observe the indicator lights. Red lights signify that the corresponding side of the RV is low and requires adjustment. Green lights indicate a level position for that axis.
2. **Adjusting Level:** Use your RV's existing leveling system (e.g., leveling blocks, hydraulic jacks) to raise the low sides of the RV as indicated by the red lights.
3. **Achieving Level:** Continue making adjustments until all four indicator lights on the EZ Level turn green. This indicates that your RV is level both front-to-back and side-to-side.
4. **Automatic Shut-Off:** The EZ Level will automatically power off after approximately 10 minutes of inactivity to conserve battery life. You can manually turn it off by pressing the center button again.

**The fastest,  
most convenient  
way to level  
your RV**



**Levels  
front-to-back  
& side-to-side**


Image: Close-up of the Camco EZ Level showing red and green indicator lights, illustrating low and level states.



**Green = level**

**Red = low side**

**No light = not level**

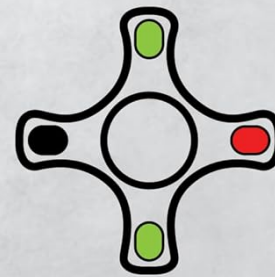

**Easy-to-see  
illuminated  
indicators**

Image: Close-up of the Camco EZ Level with a red light on one arm, indicating a low side, and green lights on others.

## Official Product Videos

Your browser does not support the video tag.

Video: Product Overview of the Camco EZ Level, demonstrating its features and how it indicates leveling status.

Your browser does not support the video tag.

Video: Demonstration of the Camco 25505 EZ Level in use, showing how to achieve a level RV.

## 4. MAINTENANCE

- **Battery Replacement:** Replace the three AA batteries when the indicator lights become dim or the unit fails to power on.
- **Cleaning:** Clean the exterior of the EZ Level with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners, as these may damage the unit.
- **Storage:** Store the EZ Level in a dry, cool place away from direct sunlight and extreme temperatures when not in use. Its compact size allows for easy storage.

# Energy-saving shutoff

Automatically powers down when idle



Image: Close-up of the Camco EZ Level's power button and a battery icon, highlighting the energy-saving shutoff feature.

## 5. TROUBLESHOOTING

| Problem                       | Possible Cause                                           | Solution                                                                                                             |
|-------------------------------|----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| Unit does not power on.       | Dead or incorrectly installed batteries.                 | Check battery orientation and replace with fresh AA batteries. Ensure the power button is pressed firmly.            |
| Indicator lights are dim.     | Low battery power.                                       | Replace all three AA batteries.                                                                                      |
| Inaccurate leveling readings. | Unit not placed on a flat, stable surface within the RV. | Relocate the EZ Level to a central, flat area of the RV floor. Ensure no objects are interfering with its placement. |
| Unit turns off too quickly.   | Automatic shut-off engaged (normal operation).           | The unit is designed to shut off after 10 minutes of inactivity. Press the center button to reactivate if needed.    |

## 6. SPECIFICATIONS

- **Model Number:** 25505
- **Product Dimensions:** 12.6 x 8.3 x 2.5 inches
- **Item Weight:** 9.1 ounces
- **Power Source:** 3 x AA Batteries (not included)

## 7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Camco website or contact Camco customer service directly. Keep your purchase receipt for warranty claims.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00DW954UC>

More documents and user manuals: <https://manuals.plus/>