

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Sagemcom](#) /
- › [Sixty Cordless Telephone and Answer Machine, Red User Manual](#)

## Sagemcom Sixty

# Sagemcom Sixty Cordless Telephone and Answer Machine

Model: Sixty

Brand: Sagemcom

## PRODUCT OVERVIEW

The Sagemcom Sixty Cordless Telephone and Answer Machine combines modern technology with a classic design. Its unique aesthetic, smooth finish, and touchscreen functionality make it a distinctive addition to any environment. Designed for user comfort, the Sixty offers a range of features including hands-free mode, extended battery life, and an intuitive interface for easy communication.



Image: The Sagemcom Sixty Cordless Telephone and Answer Machine in red, showcasing its unique retro-modern design with a circular dial and digital display.



Image: Side view of the Sagemcom Sixty Cordless Telephone, highlighting its sleek profile and the cradle design.

## SETUP GUIDE

---

### 1. Unpacking

Carefully remove all components from the packaging. Ensure you have the base unit, handset, power adapter, and telephone line cord.

### 2. Connecting the Base Unit

1. Connect the power adapter to the 'DC IN' port on the back of the base unit and plug the other end into a wall outlet.
2. Connect one end of the telephone line cord to the 'LINE' port on the base unit and the other end to your telephone wall jack.

### 3. Battery Installation and Charging

1. Open the battery compartment on the handset.
2. Insert the supplied rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment.
4. Place the handset on the base unit. The display will indicate charging. Allow the handset to charge for at least 16 hours before first use to ensure optimal battery performance.

## OPERATING INSTRUCTIONS

---

### Making and Receiving Calls

- **To Make a Call:** Lift the handset or press the **Call** button. Dial the number using the touchscreen keypad.
- **To Receive a Call:** Lift the handset or press the **Call** button when the phone rings.

- **To End a Call:** Place the handset back on the base unit or press the **End Call** button.

## Using the Touchscreen

The Sixty features a responsive touchscreen for navigation and input. Tap icons or numbers to select functions or dial. Swipe to scroll through lists or menus.

## Hands-Free Mode

During a call, press the **Speaker** button to activate hands-free mode. Press it again to return to handset mode.

## Phonebook Management

- **Adding a Contact:** Navigate to the Phonebook menu, select 'Add New Contact', enter the name and number using the touchscreen, and save. The phonebook can store up to 150 names.
- **Searching for a Contact:** Access the Phonebook and use the search function or scroll through the list.
- **Editing/Deleting a Contact:** Select the desired contact from the Phonebook and choose the 'Edit' or 'Delete' option.

## Answering Machine Functions

The integrated answering machine has a recording capacity of 10 minutes.

- **Activating/Deactivating:** Access the Answering Machine menu to turn it on or off.
- **Playing Messages:** Select 'Play Messages' from the Answering Machine menu.
- **Recording Outgoing Message:** Follow the prompts in the Answering Machine menu to record a personalized outgoing message.

## MAINTENANCE

---

### Cleaning Your Phone

To clean the phone, wipe it with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the surface. Ensure the phone is disconnected from power before cleaning.

### Battery Care

- Always use the supplied rechargeable batteries.
- If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- Dispose of old batteries responsibly according to local regulations.

## TROUBLESHOOTING

---

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
No dial tone	Check if the telephone line cord is securely connected to both the base unit and the wall jack. Ensure the power adapter is plugged in.
Handset not charging	Ensure the handset is correctly placed on the base unit. Clean the charging contacts on both the handset and base unit with a dry cloth. Verify the power adapter is working.
Poor sound quality	Move closer to the base unit. Check for interference from other electronic devices. Ensure the telephone line cord is not damaged.
Display is blank	Check if the handset battery is charged. If not, place it on the base unit to charge. Ensure the power adapter is connected to the base unit.
Cannot make or receive calls	Verify that the telephone line is active. Check all cable connections. Restart the base unit by unplugging and replugging the power adapter.





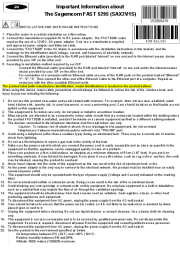
## TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Sagemcom
Model	Sixty
Color	Red
Telephone Type	Cordless
Phone Talk Time	Up to 10 Hours
Standby Time	Up to 120 Hours
Recording Capacity (Answering Machine)	10 Minutes
Phonebook Capacity	150 Names
ASIN	B00DX64LPI
First Available Date	April 15, 2014

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Sagemcom website. Keep your proof of purchase for any warranty claims.

## Related Documents - Sixty

	<p><a href="#">Guía Rápida de Instalación del Teléfono DECT Sagemcom SIXTY</a></p> <p>Guía completa para la instalación y uso del teléfono DECT Sagemcom SIXTY, cubriendo configuración, características, seguridad e información de garantía.</p>
	<p><a href="#">Sagemcom FAST 5285 Router: Safety, Installation, and FCC Compliance</a></p> <p>Essential safety, installation, and FCC compliance information for the Sagemcom FAST 5285 wireless router, including usage instructions and regulatory statements.</p>
	<p><a href="#">Sagemcom Fiber Box X6 Safety Instructions</a></p> <p>Comprehensive safety instructions and guidelines for the Sagemcom Fiber Box X6, covering installation, usage, maintenance, and regulatory compliance.</p>
	<p><a href="#">Sagemcom Fiber Box X6 Safety Instructions</a></p> <p>Comprehensive safety instructions for the Sagemcom Fiber Box X6, covering installation, usage, electrical safety, environmental conditions, and disposal guidelines.</p>
	<p><a href="#">Sagemcom FAST 5295 Router: Installation and Safety Instructions</a></p> <p>Provides essential installation and safety guidelines for the Sagemcom FAST 5295 router, covering placement, connections, and important precautions for safe operation.</p>

Comprehensive guide for installing and safely using the FAST 399 extender, including setup, safety precautions, and FCC compliance information.