

[Manuals.plus](#) /

› [Logitech](#) /

› Logitech Z600 Bluetooth Speakers User Manual

Logitech Z600

Logitech Z600 Bluetooth Speakers User Manual

Model: Z600

1. INTRODUCTION

The Logitech Z600 Bluetooth Speakers are designed to provide high-quality audio for your PC, Mac computer, tablet, and smartphone. Featuring a sleek design and versatile connectivity options, these speakers integrate seamlessly into any modern living space.



Figure 1: Logitech Z600 Bluetooth Speakers

2. WHAT'S IN THE BOX

Ensure all items are present before proceeding with setup:


- Logitech Z600 Bluetooth Speakers (Left and Right)
- Power Adapter

- 3.5mm Audio Cable
- USB Bluetooth Transceiver
- User Documentation

3. SETUP INSTRUCTIONS

3.1 Power Connection

1. Connect the power adapter to the right speaker.
2. Plug the power adapter into a wall outlet.
3. Connect the left speaker to the right speaker using the integrated cable.

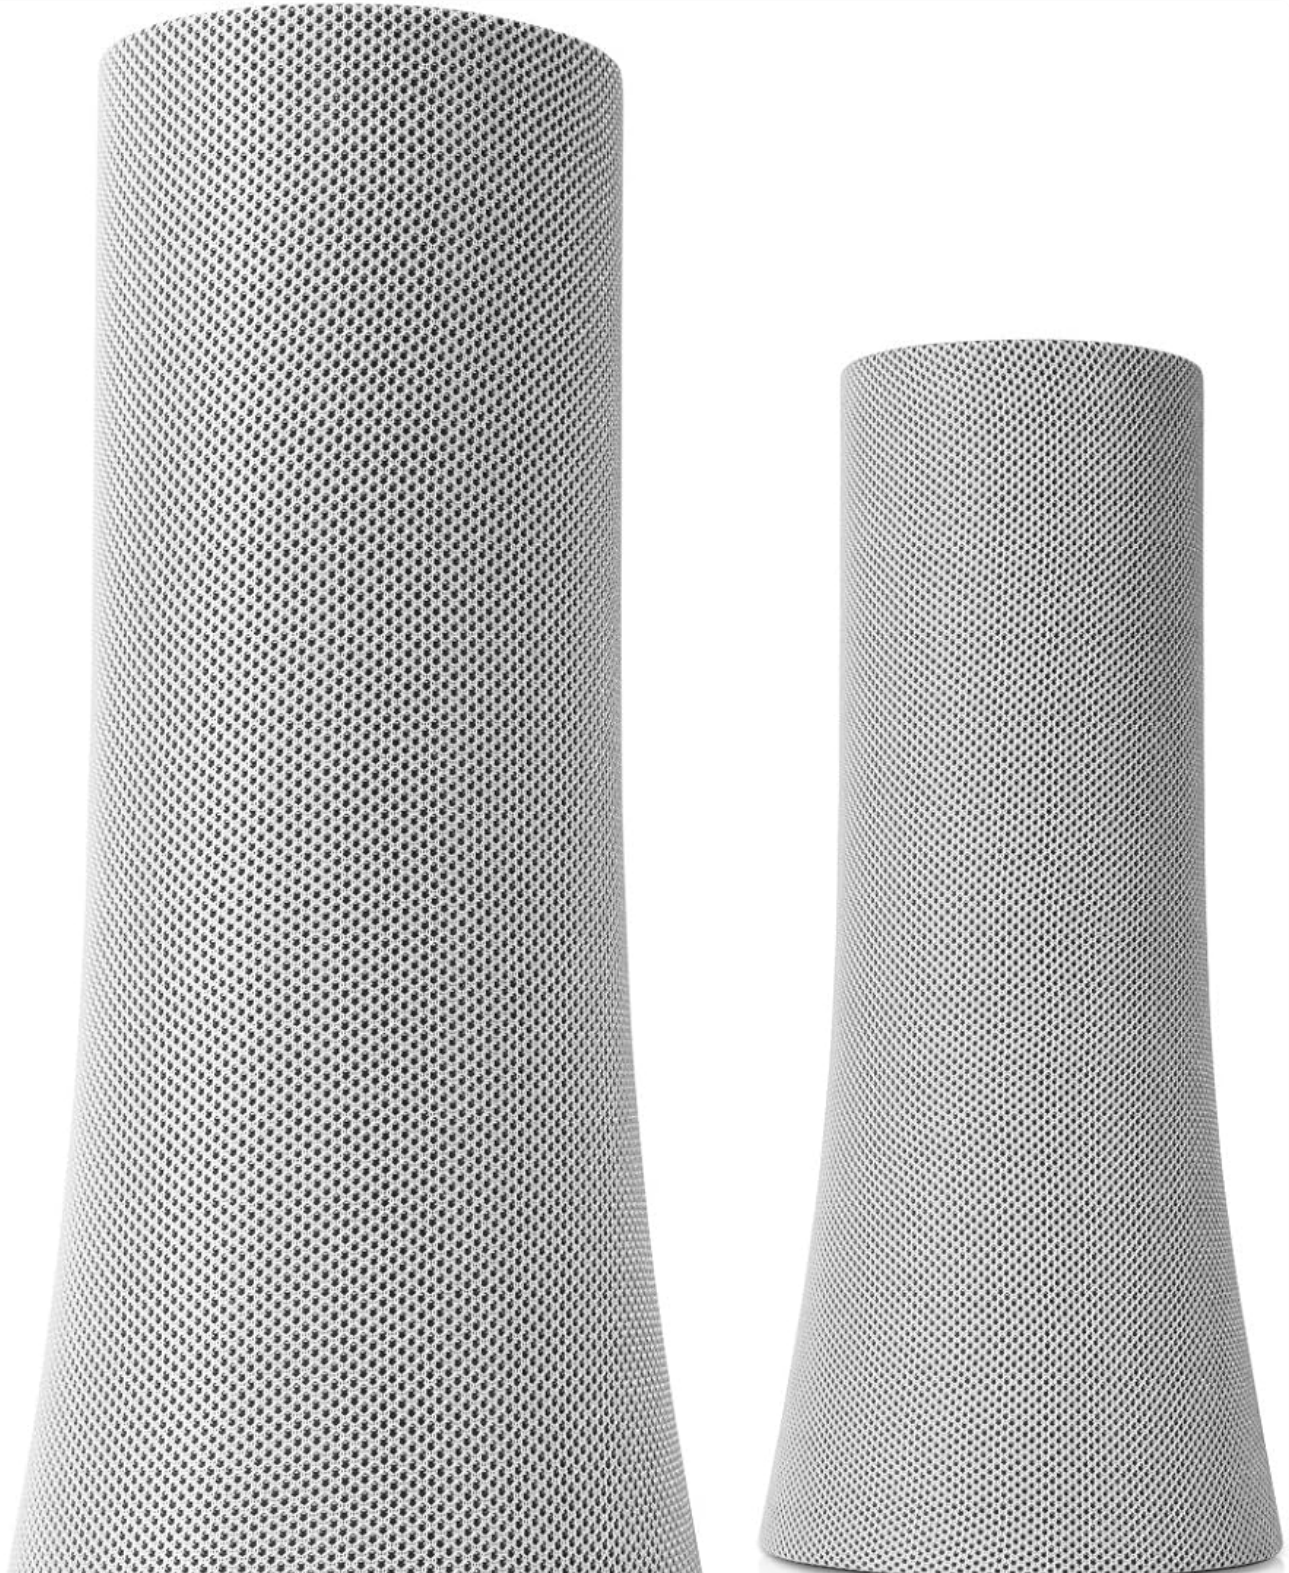

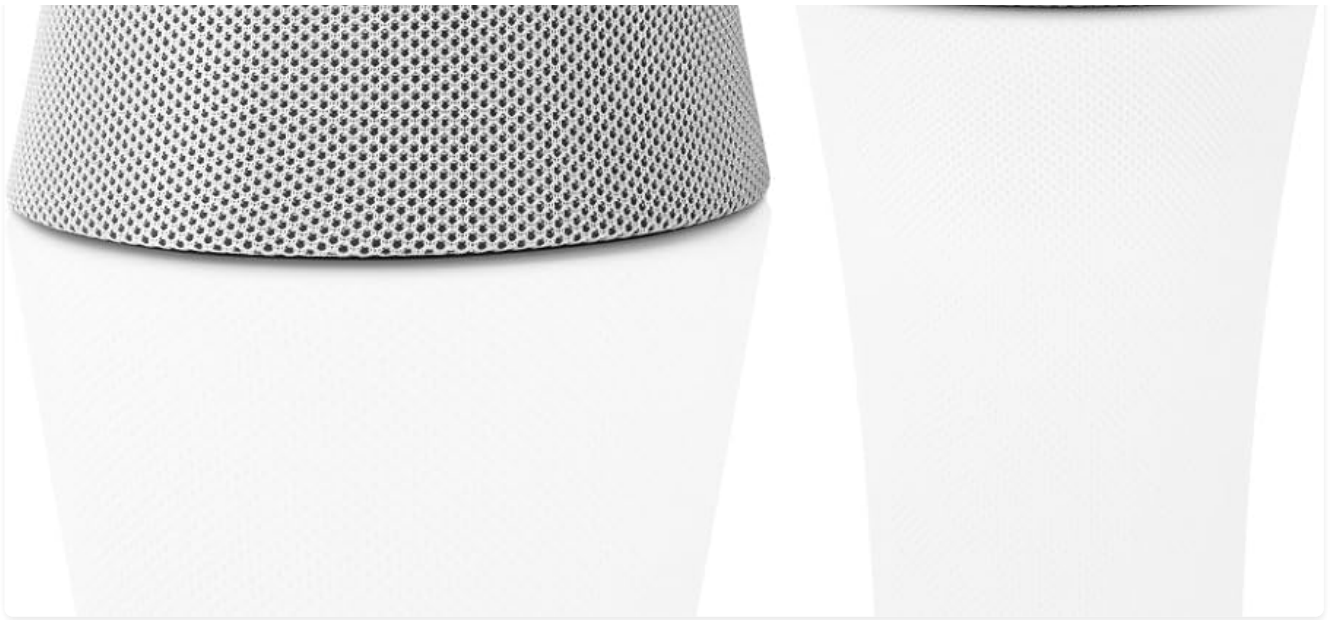


Figure 2: Rear connections of the Logitech Z600 Speakers

3.2 Bluetooth Connection (Wireless)

The Z600 speakers can connect wirelessly to Bluetooth-enabled devices such as smartphones, tablets, and computers.

1. Ensure the speakers are powered on.
2. On your device (smartphone, tablet, or computer), enable Bluetooth and search for available devices.
3. Select "Logitech Z600" from the list of devices to pair.
4. For computers without built-in Bluetooth, use the included USB Bluetooth transceiver. Plug the transceiver into an available USB port on your computer. The computer should automatically detect and install the necessary drivers.



Figure 3: USB Bluetooth Transceiver in use

3.3 Wired Connection (3.5mm Auxiliary Input)

For devices without Bluetooth or for a direct connection, use the 3.5mm audio cable.

1. Connect one end of the 3.5mm audio cable to the auxiliary input port on the right speaker.
2. Connect the other end of the 3.5mm audio cable to the headphone jack or audio output port on your device (e.g., TV, iPod, game console).



Figure 4: Speakers set up with a laptop

4. OPERATING THE SPEAKERS

4.1 Power On/Off

Press the power button located on the right speaker to turn the speakers on or off.

4.2 Volume Control

The entire top panel of the right speaker functions as a touch-sensitive volume control. Gently glide your finger clockwise to increase volume or counter-clockwise to decrease volume.



Figure 5: Touch volume control on the right speaker

4.3 Switching Between Devices

The Z600 speakers allow for easy switching between connected Bluetooth devices. Simply pause audio on one device and begin playback on another paired device. The speakers will automatically switch the audio source.

4.4 Sound Performance

The speakers feature 3 high-performance drivers per speaker, delivering clear mids, highs, and rich bass for a room-filling sound experience.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Logitech Z600 speakers, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker surfaces. Avoid abrasive cleaners or solvents that may damage the finish.
- **Placement:** Place speakers on a stable, flat surface to prevent accidental falls. Ensure adequate ventilation around the speakers.
- **Storage:** When not in use for extended periods, store the speakers in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your Logitech Z600 speakers, refer to the following common solutions:

- **No Power:** Ensure the power adapter is securely connected to both the speaker and a working wall outlet.
- **No Sound:**
 - Check that the speakers are powered on and the volume is not muted or set too low.
 - Verify that the audio source (Bluetooth or 3.5mm cable) is correctly connected and playing audio.
 - If using Bluetooth, ensure the speakers are paired with the correct device and that the device's volume is up.
- **Bluetooth Disconnection/Reconnection Issues:**
 - Try unpairing and re-pairing the speakers with your device.
 - Ensure your device is within the Bluetooth range (typically up to 10 meters or 33 feet) and there are no significant obstructions.
 - If using the USB Bluetooth transceiver, ensure it is firmly plugged into a working USB port.
- **Distorted Sound:**
 - Reduce the volume on both the speakers and your audio source.
 - Check for interference from other electronic devices.
 - If using a wired connection, try a different 3.5mm audio cable.

7. PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

This video provides a brief overview of the Logitech Z600 Bluetooth Speakers, highlighting their design and key features. It demonstrates the speakers' aesthetic appeal and wireless capabilities.

8. SPECIFICATIONS

Feature	Detail
Brand	Logitech
Model Name	Z600
Model Number	980-000658
Speaker Maximum Output Power	10 Watts

Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm)
Audio Output Mode	Stereo
Speaker Type	Bookshelf
Controller Type	Button, Touch
Color	White
Control Method	Touch
Number of Audio Channels	2.0
Wireless Technology	Bluetooth
Audio Driver Type	Dynamic Driver
Item Weight	4.34 Pounds
Compatible Devices	Personal Computer, Smartphone, Tablet
Power Source	Corded Electric

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Logitech Z600 Bluetooth Speakers come with a Limited Warranty. Please refer to the warranty card included in your product packaging or visit the official Logitech website for detailed terms and conditions.

9.2 Customer Support

For further assistance, technical support, or to register your product, please visit the Logitech support website or contact their customer service. Contact information can typically be found on the Logitech official website or in your product documentation.

© 2023 Logitech. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question