



[Manuals.plus](#) /

› [REV](#) /

› REV PrimaLuxe Recessed Light Switch User Manual

REV PrimaLuxe

REV PrimaLuxe Recessed Light Switch User Manual

Model: PrimaLuxe (0511256992)



1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your REV PrimaLuxe recessed light switch. Please read these instructions carefully before installation and operation, and retain them for future reference. The REV PrimaLuxe switch is designed for surface mounting and can function as a toggle switch or an ON/OFF switch for a single consumer. It features a plastic cover and frame in white, suitable for dry indoor environments (IP20).



Image 1.1: Front view of the REV PrimaLuxe recessed light switch.

2. SAFETY INSTRUCTIONS

WARNING: Electrical installation must only be carried out by qualified professionals in accordance with current national and local installation regulations. Failure to do so may result in electric shock, fire, or serious injury. Contact an authorized specialized electrical establishment for installation.

- Ensure the main power supply is disconnected before any installation, maintenance, or repair work.
- This switch is designed for dry indoor use only (IP20 rating). Do not install in damp or wet environments.
- Do not exceed the specified electrical ratings (10 A, 230 VAC).
- Keep out of reach of children.
- Do not attempt to modify or disassemble the switch beyond what is described in this manual.

3. PRODUCT FEATURES

- **Type:** Two-way toggle switch
- **Current Rating:** 10 A
- **Voltage Rating:** 230 VAC
- **Material:** Plastic cover and frame
- **Color:** White
- **Protection Class:** IP20 (for dry indoor use)
- **Mounting:** Surface mounting

4. PACKAGE CONTENTS

The REV PrimaLuxe switch package typically includes the following components:

- 1 x REV PrimaLuxe Switch Mechanism
- 1 x Switch Cover
- 1 x Mounting Frame



5. SETUP AND INSTALLATION

Important: Ensure power is OFF at the main circuit breaker before proceeding with installation.

1. **Prepare the Installation Area:** Ensure the mounting surface is clean, dry, and flat.
2. **Separate Components:** Carefully separate the switch cover, mounting frame, and switch mechanism.
3. **Wiring:** Connect the electrical wires to the terminals on the switch mechanism. Refer to the wiring diagram below for correct connections. The switch supports 2-way wiring.



Image 5.1: Rear view of the switch mechanism with wiring terminals. L1 indicates the live input, and the arrows indicate output terminals for two-way switching.

4. **Mount the Mechanism:** Secure the switch mechanism into the wall box or surface mount box using appropriate screws.
5. **Attach the Frame:** Place the mounting frame over the secured switch mechanism.
6. **Install the Cover:** Snap the switch cover onto the mounting frame. Ensure it is securely seated.

7. **Restore Power:** Once installation is complete and all components are securely in place, restore power at the main circuit breaker.

6. OPERATING INSTRUCTIONS

The REV PrimaLuxe switch operates as a standard toggle switch. Press the upper or lower part of the rocker switch to turn the connected light or appliance ON or OFF.



Image 6.1: Example of the REV PrimaLuxe switch installed in a living space.

7. MAINTENANCE

The REV PrimaLuxe switch requires minimal maintenance.

- **Cleaning:** To clean the switch, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as this can damage the plastic or electrical components.
- **Inspection:** Periodically inspect the switch for any signs of damage, loose connections, or discoloration. If any issues are observed, disconnect power and consult a qualified electrician.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light/Appliance does not turn ON.	<ul style="list-style-type: none"> No power to the switch. Loose wiring connection. Faulty bulb/appliance. Faulty switch. 	<ul style="list-style-type: none"> Check circuit breaker. Disconnect power and check wiring connections (consult electrician). Test with a known working bulb/appliance. Replace the switch (consult electrician).
Switch feels loose or wobbly.	<ul style="list-style-type: none"> Mounting screws are loose. Frame/cover not properly seated. 	<ul style="list-style-type: none"> Disconnect power and tighten mounting screws. Ensure frame and cover are securely snapped into place.
Switch is hot to the touch.	<ul style="list-style-type: none"> Overload or short circuit. Loose wiring connection. 	<ul style="list-style-type: none"> Immediately disconnect power. Do not use the switch. Consult a qualified electrician.

If troubleshooting steps do not resolve the issue, contact a qualified electrician for assistance.

9. SPECIFICATIONS

Specification	Value
Model Number	0511256992
Brand	REV
Product Dimensions (L x W x H)	8.5 x 8.5 x 4.7 cm
Weight	86 grams
Material	Plastic
Color	White
Voltage	230 Volts
Power	2300 Watts
Current Intensity	10 A
Switch Type	2-way (Toggle)
Mounting Type	Surface Mount
Operating Mode	ON-OFF
Protection Rating	IP20 (Dry Indoor Use)

Specification	Value
Certifications	CE

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official REV website or contact your retailer. Keep your purchase receipt as proof of purchase.

Manufacturer: REV Ritter GmbH

