

Wessel-Werk EBK360kit

Wessel Werk EBK 360 Power Nozzle with Integrated Wand for Central Vacuum Systems

Instruction Manual - Model: EBK360kit

Introduction	Safety Information	Package Contents	Setup	Operating Instructions	Maintenance
	Troubleshooting	Specifications		Warranty & Support	

1. INTRODUCTION

Thank you for choosing the Wessel Werk EBK 360 Power Nozzle with Integrated Wand. This high-performance attachment is designed to enhance your central vacuum system, providing efficient and thorough cleaning for various floor surfaces. Its robust construction and thoughtful features ensure a superior cleaning experience.

This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your EBK 360 Power Nozzle and Wand. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INFORMATION

- Always adhere to the following safety precautions to prevent injury or damage to the product:
- Ensure the central vacuum system is turned off and unplugged from its power source before attaching or detaching the power nozzle or performing any maintenance.
 - Do not operate the power nozzle if it is damaged or not functioning correctly. Contact customer support for assistance.
 - Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts, such as the brush roll.
 - Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
 - Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
 - The power nozzle operates at 350 watts. Ensure your central vacuum system and electrical connections are compatible with this power requirement.

- Use only as described in this manual. Use only manufacturer's recommended attachments.

3. PACKAGE CONTENTS

Your Wessel Werk EBK 360 Power Nozzle with Integrated Wand package includes the following components:

- EBK 360 Power Nozzle
- Integrated Telescopic Wand



Image: The EBK 360 Power Nozzle and its integrated telescopic wand, shown as separate components.

4. SETUP

Follow these steps to set up your EBK 360 Power Nozzle and Wand for use with your central vacuum system:

1. **Assemble the Wand and Nozzle:** The integrated telescopic wand features a quick disconnect mechanism. Align the wand with the connection point on the power nozzle and push firmly until it clicks into place. Ensure a secure connection.

2. **Connect to Central Vacuum Hose:** Insert the open end of the integrated wand into your central vacuum hose handle. Ensure the electrical pins (if applicable to your hose) align and connect properly to power the nozzle.
3. **Adjust Wand Length:** The telescopic wand allows for adjustable length. Press the release button (if present) and extend or retract the wand to a comfortable operating height. Release the button to lock it in position.





Image: The EBK 360 Power Nozzle with its integrated telescopic wand fully assembled and ready for connection to a central vacuum hose.

5. OPERATING INSTRUCTIONS

Once assembled and connected to your central vacuum system, your EBK 360 Power Nozzle is ready for use:

- **Power On/Off:** The power nozzle is typically activated via a switch on your central vacuum hose handle. Ensure the hose is properly connected to a powered inlet.
- **Height Adjustment:** The EBK 360 features adjustable height settings to optimize cleaning performance on different carpet pile heights and bare floors. Locate the height adjustment control on the nozzle head and select the appropriate setting. Lower settings are for low-pile carpets and bare floors, while higher settings are for thick carpets.
- **LED Headlight:** The integrated LED bright headlight illuminates the cleaning path, making it easier to spot dirt and debris, especially in dimly lit areas or under furniture.
- **Floor Protection:** The power nozzle is equipped with 4 soft rubber wheels that prevent marring or scratching of delicate bare floors.



Image: A detailed view of the EBK 360 Power Nozzle head, highlighting the height adjustment controls and the bright LED headlight.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your power nozzle. Always disconnect the power nozzle from the central vacuum hose and ensure the central vacuum system is off before performing any maintenance.

- **Brush Roll Cleaning:** Periodically inspect the brush roll for tangled hair, threads, or debris. Use scissors to carefully cut away any entangled material.
- **Belt Inspection:** The power nozzle utilizes an extra-wide cogged belt with fiber glass cords designed for durability and to prevent belt slip. While designed for long life, periodically check the belt for any signs of wear, cracking, or

damage. The belt's enclosure ensures debris-free operation.

- **Nozzle Head Cleaning:** Wipe the exterior of the power nozzle with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.



Image: An underside view of the power nozzle, showing the durable cogged belt and its protective enclosure, designed for efficient power transfer to the brush roll.

7. TROUBLESHOOTING

If you encounter issues with your EBK 360 Power Nozzle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Power Nozzle does not turn on or brush roll stops.	No power from central vacuum inlet; loose electrical connection; brush roll jammed; motor overheating.	Ensure central vacuum system is on and hose is securely connected to a powered inlet. Check electrical connection between wand and hose. Clear any obstructions from the brush roll. If motor overheats, turn off and allow to cool for 20-30 minutes before resuming use.
Reduced cleaning performance.	Brush roll tangled; incorrect height setting; worn belt.	Clean the brush roll of any debris. Adjust the height setting to match the floor type. Inspect the drive belt for wear and replace if necessary.
Wand does not lock securely into hose.	Incompatible hose; locking mechanism issue.	Verify your central vacuum hose is compatible with the EBK 360's integrated wand. Some systems may require a specific adapter or have a different locking mechanism. Ensure the wand is fully inserted and the locking button (if present) engages.

If the problem persists after attempting these solutions, please contact Wessel-Werk customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Wessel-Werk
Model	EBK360kit
Style	EBK 360 Power Nozzle and Wand
Power Consumption	350 watts
Included Components	Nozzle, Brush
Special Features	LED Bright Headlight, 4 Soft Rubber Wheels, Quick Disconnect Wand, Integrated Telescopic Wand
Item Weight	10.1 pounds
Product Dimensions	9 x 14 x 30 inches
UPC	773822298640

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts for your Wessel Werk EBK 360 Power Nozzle and Wand, please contact Wessel-Werk customer service directly. Refer to the product packaging or the official Wessel-Werk website for the most current contact information.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question