

[Manuals.plus](#) /

› [SUPERIOR](#) /

› Replacement Remote Control User Manual for ECOFLAM ALPHA 12

SUPERIOR ALPHA 12

SUPERIOR Replacement Remote Control User Manual

For ECOFLAM ALPHA 12 Devices

INTRODUCTION

This manual provides detailed instructions for the SUPERIOR replacement remote control, designed for seamless operation with your ECOFLAM ALPHA 12 device. Please read this manual carefully before using the remote control to ensure proper functionality and longevity.

PRODUCT OVERVIEW



This image displays the front of the SUPERIOR replacement remote control. It features a clear LCD screen at the top, showing temperature readings (e.g., 26°C, 28°C), time (e.g., 8:00, 18:08), and various mode indicators. Below the screen are several control buttons, including a prominent orange power button, mode selection, fan speed, and temperature adjustment buttons. The bottom part of the remote shows the 'SUPERIOR AirCo Universal A/C Remote' branding.

The SUPERIOR replacement remote control is a universal device pre-programmed for compatibility with the ECOFLAM ALPHA 12. It offers essential functions for controlling your heating system.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.

- 3. Insert two 1.5V (LR03-AAA) batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
- 4. Close the battery compartment cover securely.

2. Initial Pairing/Programming

This remote control is typically pre-programmed for the ECOFLAM ALPHA 12. No complex setup is usually required. Simply insert the batteries and point the remote towards your ECOFLAM ALPHA 12 device. If the remote does not respond, ensure there are no obstructions between the remote and the device, and that the batteries are correctly installed and charged.

OPERATING INSTRUCTIONS

The remote control provides intuitive access to the primary functions of your ECOFLAM ALPHA 12 device. While the remote may feature buttons for various modes (e.g., Cool, Fan) due to its universal design, only functions relevant to your ECOFLAM ALPHA 12 (primarily heating) will be active.

- **Power Button ():** Press to turn the ECOFLAM ALPHA 12 device ON or OFF.
- **Temperature Adjustment (▲ / ▼):** Use these buttons to increase or decrease the desired temperature setting for your ECOFLAM ALPHA 12.
- **Mode Button:** Cycle through available operating modes. For ECOFLAM ALPHA 12, this will primarily be the heating mode. Other modes displayed on the remote's screen (e.g., Cool, Fan) may not be applicable or active for your specific device.
- **Timer Functions:** If supported by your ECOFLAM ALPHA 12, use the timer buttons to set scheduled ON/OFF times. Refer to your ECOFLAM ALPHA 12's original manual for specific timer programming details.
- **Display:** The LCD screen shows the current temperature, set temperature, time, and active mode indicators.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's range decreases, the display dims, or it stops responding. Always replace both batteries simultaneously with new 1.5V (LR03-AAA) batteries. Do not mix old and new batteries or different battery types.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries; Obstruction between remote and device; Remote out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Move closer to the ECOFLAM ALPHA 12 device.
Display is dim or blank	Low batteries.	Replace batteries.
Certain functions do not work	Function not supported by ECOFLAM ALPHA 12; Remote not fully compatible with all features.	Verify the function is available on your ECOFLAM ALPHA 12. This remote is designed for basic control.

SPECIFICATIONS

- **Brand:** SUPERIOR
- **Compatible Device:** ECOFLAM ALPHA 12
- **Battery Type:** 2 x 1.5V (LR03-AAA) Alkaline batteries
- **Connectivity Technology:** Infrared
- **Maximum Range:** 10 meters
- **Special Feature:** Universal compatibility
- **Number of Buttons:** 3 (as per product specifications, though visual appearance may vary)

WARRANTY

This SUPERIOR replacement remote control comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance or if you encounter issues not covered in this manual, please contact your retailer or the SUPERIOR customer support. When contacting support, please have your product model (ECOFLAM ALPHA 12 replacement remote) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

