Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Lemax /
- > Lemax Christmas Village Santa's Cabin (Model 35554) Instruction Manual

Lemax 35554

Lemax Christmas Village Santa's Cabin (Model 35554) Instruction Manual

Model: 35554 | Brand: Lemax

INTRODUCTION

Thank you for purchasing the Lemax Christmas Village Santa's Cabin. This beautifully crafted porcelain lighted building is designed to enhance your Christmas village display with festive illumination and intricate details. This manual provides essential information for the safe and proper setup, operation, and maintenance of your new collectible.



Image 1: Front view of the Lemax Christmas Village Santa's Cabin, showcasing Santa seated outside, surrounded by

SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or damage to the product.

- This product is for indoor use only. Do not expose to water or moisture.
- Use only the provided 4.5V AC adaptor. Using an incorrect adaptor may damage the product and void the warranty.
- Keep the product and adaptor away from heat sources, open flames, and direct sunlight.
- Do not attempt to open or modify the product or adaptor. There are no user-serviceable parts inside.
- Handle the porcelain building with care as it is fragile and can break if dropped or mishandled.
- Ensure the power cord is routed safely to prevent tripping hazards or damage.
- Unplug the adaptor from the wall outlet when not in use or before cleaning.

PACKAGE CONTENTS

Verify that all items listed below are present and in good condition upon opening the package.

- 1 x Lemax Christmas Village Santa's Cabin (Porcelain Lighted Building)
- 1 x 4.5V AC Adaptor

SETUP

Follow these steps to set up your Santa's Cabin:

- 1. **Unpack:** Carefully remove the Santa's Cabin and the 4.5V AC adaptor from their packaging. Retain packaging for future storage.
- 2. **Placement:** Choose a stable, flat, and dry surface for your Christmas village display. Ensure there is a nearby electrical outlet.
- 3. **Connect Adaptor:** Locate the power input jack on the back or base of the Santa's Cabin. Insert the small plug from the 4.5V AC adaptor into this jack.
- 4. **Power On:** Plug the 4.5V AC adaptor into a standard electrical wall outlet. The lights on the cabin should illuminate.



Image 2: Side view of the Lemax Christmas Village Santa's Cabin, highlighting the detailed porcelain craftsmanship and the illuminated elements. This view shows the chimney and side window.

OPERATING INSTRUCTIONS

The Lemax Santa's Cabin features a simple on/off control.

- **Power On:** Once the 4.5V AC adaptor is plugged into a wall outlet, the lights on the cabin will turn on automatically.
- Power Off: To turn off the lights, simply unplug the 4.5V AC adaptor from the wall outlet.
- Control Switch: This model is equipped with an On/Off switch, typically located on the base or back of the unit. Use this switch to toggle the lights without unplugging the adaptor.

MAINTENANCE

Proper care will ensure the longevity and appearance of your Santa's Cabin.

- Cleaning: To clean the surface of the porcelain building, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the finish or electrical components.
- **Storage:** When not in use, store the Santa's Cabin in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure it is unplugged and the adaptor is stored safely.
- Handling: Always handle the building by its base to minimize stress on delicate features.

TROUBLESHOOTING

If you encounter any issues with your Santa's Cabin, refer to the following common problems and solutions:

Problem	Possible Cause	Solution	
Lights do not turn on.	 Adaptor not properly connected. Adaptor not plugged into outlet. Outlet is not functioning. On/Off switch is in the "Off" position. 	 Ensure the adaptor plug is fully inserted into the cabin's power jack. Plug the adaptor firmly into a working electrical outlet. Test the outlet with another device. Toggle the On/Off switch to the "On" position. 	
Lights flicker or are dim.	Loose connection.Power supply issue.	 Check all connections for tightness. Ensure the adaptor is securely plugged into a stable power source. 	
Physical damage (e.g., broken pieces).	 Impact during handling or shipping. 	 Carefully inspect the item upon receipt. For significant damage, contact the retailer or manufacturer for assistance. Small detached pieces may be reattached with appropriate adhesive for porcelain. 	

SPECIFICATIONS

Model Number	35554		
Brand	Lemax		
Product Type	Porcelain Lighted Building		
Power Source	4.5V AC Adaptor (Included)		
Current Draw	Approx. 100mA at 4.5V DC		
Dimensions (D x W x H)	6.1"D x 7.56"W x 8.15"H (approx. 15.5 cm D x 19.2 cm W x 20.7 cm H)		
Material	Porcelain		
Item Weight	4.47 pounds (2.03 Kilograms)		
Recommended Use	Indoor Home Decoration		

WARRANTY INFORMATION

Lemax products are manufactured with quality and care. For specific warranty details, please refer to the documentation included with your purchase or visit the official Lemax website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions or require further assistance with your Lemax Christmas Village Santa's Cabin, please contact Lemax customer support through their official website or the retailer from whom you purchased the product.

Lemax Official Website: www.lemaxcollection.com

Related Documents - 35554



Lemax Thicket Falls Cabin Operating Instructions

User manual for the Lemax Thicket Falls Cabin, providing setup, operation, and maintenance instructions for this decorative Christmas item. Includes details on smoke function, water tank, and wick replacement.



Wall-mounted LFP Battery User Manual

User manual for the Wall-mounted LFP Battery, detailing product parts, size, installation steps, product details, parallel connection diagram, warnings, storage conditions, and technical data.



Menards Christmas Decor Sale: Trees, Lights, Ornaments & More - November 1-10, 2018

Shop the Menards Christmas Decor Sale from November 1-10, 2018. Find great deals on artificial Christmas trees, indoor and outdoor lights, ornaments, inflatables, wreaths, garlands, and festive home decor.



StarTech.com 10 ft 2-in-1 Universal USB KVM Cable (SVUSB2N1 10) - Product Specifications

Detailed specifications for the StarTech.com SVUSB2N1_10, a 10 ft 2-in-1 Universal USB KVM Cable. This cable ensures crystal clear display and reliable connections, preventing tangles for a neat workspace. It is compatible with various KVM switches from manufacturers like Aten, Belkin, TrippLite, Cables to go, and IOGear. Features include a coaxial video cable, bonded design, and lifetime warranty. Technical specifications cover connectors, cable length, color, and package contents. RoHS compliant.