

[Manuals.plus](#) /

› [My Fan Parts](#) /

› UC9020 Four-Speed Slide Fan Control User Manual

My Fan Parts UC9020

UC9020 Four-Speed Slide Fan Control User Manual

Model: UC9020 | Brand: My Fan Parts

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your My Fan Parts UC9020 Four-Speed Slide Fan Control. This device is designed to provide convenient control over your ceiling fan's speed settings, offering four distinct speeds and an off position. Please read this manual thoroughly before installation and use to ensure proper function and safety.

SAFETY INFORMATION

WARNING: Risk of Electric Shock. Turn off power at the circuit breaker or fuse box before installation or servicing.

- Always disconnect power before working with electrical wiring.
- Installation should be performed by a qualified electrician or a person with a thorough understanding of electrical wiring and building codes.
- Ensure all wiring connections are secure and comply with local and national electrical codes.
- Do not exceed the maximum wattage rating of 150 watts for this control.
- This control is designed for indoor use only.

PACKAGE CONTENTS

- 1 x UC9020 Four-Speed Slide Fan Control
- Mounting Screws (typically included with wall controls)

SETUP AND INSTALLATION

Follow these steps for safe and proper installation of your fan control:

1. **Turn Off Power:** Locate the circuit breaker or fuse that supplies power to the fan circuit and turn it OFF. Verify power is off at the switch location using a voltage tester.

2. **Remove Existing Switch:** Carefully remove the existing wall switch or blank plate from the wall box.
3. **Identify Wires:** Identify the line (hot) wire, load wire (to fan), and ground wire. If you are unsure, consult a qualified electrician.
4. **Wire the Control:** Connect the wires from the wall box to the UC9020 fan control according to the wiring diagram provided with the product (standard wiring typically involves connecting line to line, load to load, and ground to ground). Ensure all connections are tight and secure.
5. **Mount the Control:** Gently push the wired control into the wall box. Secure it with the provided mounting screws.
6. **Install Wall Plate:** Attach the decorative wall plate over the control.
7. **Restore Power:** Turn the power back ON at the circuit breaker or fuse box.



This image displays the My Fan Parts UC9020 Four-Speed Slide Fan Control. It is a white rectangular wall plate with a central vertical slide mechanism. The slide features markings for four fan speeds (1, 2, 3, 4) and an off position, indicated by a horizontal line. A fan blade icon is present at the top of the slide area. The control is designed to be mounted flush with a wall, secured by two visible screw holes at the top and bottom.

OPERATING INSTRUCTIONS

The UC9020 fan control features a simple slide mechanism for adjusting fan speed:

- **To Turn On:** Slide the control upwards from the bottom (off) position.
- **Adjust Speed:** Continue sliding the control upwards to increase the fan speed. The numbers 1, 2, 3, and 4 indicate increasing speeds, with 4 being the highest.
- **To Turn Off:** Slide the control downwards to the lowest position, indicated by a horizontal line.

MAINTENANCE

The UC9020 fan control requires minimal maintenance:

- **Cleaning:** To clean the surface of the control, wipe it with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- **Inspection:** Periodically inspect the control for any signs of damage or loose connections. If any issues are found, turn

off power and consult a qualified electrician.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	No power to the control; loose wiring; faulty fan motor.	Check circuit breaker. Verify wiring connections. Test fan directly if possible.
Fan speeds are incorrect or inconsistent.	Incorrect wiring; incompatible fan motor; control malfunction.	Review wiring diagram. Ensure fan is compatible with solid-state controls. Contact support if issues persist.
Control feels hot.	Overload (fan wattage exceeds 150W); faulty wiring.	Immediately turn off power. Verify fan wattage. Check wiring for shorts. Do not use if overheating.

SPECIFICATIONS

Feature	Detail
Part Number	UC9020
Item Weight	5 ounces
Product Dimensions	1.76 x 1.76 x 4.12 inches
Color	White
Material	Plastic
Wattage	150 watts
Item Package Quantity	1
Switch Type	1-way
Mounting Type	Wall Mount
Switch Style	Slide Switch

WARRANTY AND SUPPORT

For warranty information or technical support, please contact My Fan Parts customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the manufacturer's website or contact their support line. Contact details are typically found on the product packaging or the brand's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question