

[Manuals.plus](#) /

› [ZLINE](#) /

› ZLINE KZ-30 Range Hood User Manual

ZLINE KZ-30

ZLINE KZ-30 Range Hood User Manual

Model: KZ-30

INTRODUCTION

Thank you for choosing the ZLINE KZ-30 Range Hood. This manual provides essential information for the safe installation, operation, and maintenance of your new range hood. Please read this manual thoroughly before installation and use, and keep it for future reference.



SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before operating the appliance.
- Ensure proper installation by a qualified technician in accordance with all applicable codes and standards.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not use this unit with any solid-state speed control device.
- To reduce the risk of fire, use only metal ductwork.
- Clean grease laden surfaces frequently. Grease accumulating on the fan or filters may ignite.
- Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite.
- Always turn hood ON when cooking at high heat or when flaming food.
- Use appropriate size cookware. Always use cookware appropriate for the size of the surface element.

WHAT'S IN THE BOX

Verify that all components are present before beginning installation.

- ZLINE KZ-30 Range Hood Unit
- Installation Guide
- Installation Kit (hardware, mounting brackets, etc.)

SETUP AND INSTALLATION

The ZLINE KZ-30 Range Hood is designed for wall-mount installation. It can be configured for ducted or ductless (recirculating) operation with optional charcoal filters.

Pre-Installation Checklist:

- Ensure adequate structural support in the wall for mounting.
- Verify electrical supply (110v 60hz) is available at the installation location.
- If ducting, ensure proper ductwork (6-inch air outlet) is in place or planned.
- If recirculating, ensure optional activated charcoal filters are acquired.

Installation Steps (Summary):

1. **Prepare the Area:** Clear the cooking area and ensure power is off at the circuit breaker.
2. **Mounting Bracket Installation:** Securely attach the mounting bracket to the wall studs at the appropriate height above the cooking surface. Refer to the detailed installation guide for precise measurements.
3. **Ductwork Connection (if applicable):** Connect the 6-inch ducting to the range hood's air outlet. Ensure all connections are sealed to prevent air leaks.
4. **Electrical Connection:** Connect the range hood to the household electrical supply. This should be performed by a qualified electrician.
5. **Hood Body Installation:** Carefully lift and secure the range hood body onto the wall mounting bracket.

6. **Chimney Installation:** Install the decorative chimney sections, ensuring they are properly aligned and secured.
7. **Filter Installation:** Insert the stainless steel baffle filters into their designated slots.
8. **Final Check:** Restore power and test all functions of the range hood.

For detailed, step-by-step instructions and diagrams, please refer to the included Installation Guide and Kit.

OPERATING INSTRUCTIONS

The ZLINE KZ-30 features 4-speed touch-sensitive electronic controls and directional halogen lighting.

Control Panel Functions:

- **Power Button:** Turns the range hood ON/OFF.
- **Fan Speed Buttons (1-4):** Select desired fan speed. Speed 1 is the lowest, Speed 4 is the highest (760 CFM).
- **Light Button:** Controls the halogen directional lights. Press once to turn ON, press again to turn OFF.
- **Timer/Auto-Shut-Off:** Activates the timer function for automatic shut-off after a set period. Refer to the full manual for specific timer settings.

General Operation Tips:

- Turn on the range hood a few minutes before cooking to establish airflow.
- Use lower fan speeds for light cooking and higher speeds for heavy smoke or odors.
- Allow the hood to run for a few minutes after cooking to clear residual smoke and odors.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your range hood.

Cleaning the Baffle Filters:

The stainless steel baffle filters are dishwasher-safe for easy cleaning.

1. Remove the baffle filters by pulling the release latch and sliding them out.
2. Place filters in a dishwasher or wash by hand with hot, soapy water.
3. Ensure filters are completely dry before re-installing.
4. Clean filters regularly, depending on cooking frequency and type.

Exterior Cleaning:

- Wipe stainless steel surfaces with a clean cloth and a non-abrasive stainless steel cleaner.
- Clean the glass canopy with a glass cleaner and a soft cloth.
- Avoid using abrasive cleaners or scouring pads, which can scratch surfaces.

Light Bulb Replacement:

The unit uses 2-20W Halogen Directional Lights. Refer to the full manual for specific instructions on replacing bulbs.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Hood not operating	No power supply; Circuit breaker tripped; Control panel issue.	Check power connection; Reset circuit breaker; Contact customer support if issue persists.
Poor suction	Clogged filters; Improper ducting; Obstruction in ductwork; Incorrect fan speed.	Clean or replace filters; Check ductwork for kinks or blockages; Ensure appropriate fan speed is selected.
Excessive noise	Loose parts; Improper installation; Obstruction in fan; Ductwork issues.	Check for loose screws or components; Verify proper installation; Clear any obstructions; Inspect ductwork.
Lights not working	Burnt out bulbs; Loose connection.	Replace halogen bulbs; Check light connections.

If you encounter problems not listed here or if solutions do not resolve the issue, please contact ZLINE customer support.

SPECIFICATIONS

Feature	Detail
Model	KZ-30
Material	#430 Brushed Stainless Steel
Dimensions (L x W x H)	30 x 20 x 5.5 inches (Hood only)
Hood + Chimney Height	26.3 to 40 inches
Airflow Displacement (CFM)	760 CFM (1290 m3h)
Noise Level	56 dB
Controls	4-Speed Touch Sensitive Electronic Controls
Lighting	2 x 20W Halogen Directional Lights
Filters	Stainless Steel Dishwasher-Safe 3-layer Baffle Filters
Air Outlet	6 inches
Voltage	110v 60hz
Certification	CE, GS, and CCC Safety Approvals (USA and Canada)
Installation Type	Wall Mount
Ventilation Type	Ducted or Recirculation (with optional charcoal filters)
Item Weight	50 Pounds

WARRANTY AND SUPPORT

ZLINE provides a limited warranty for its products. Please refer to the warranty card included with your product or visit the official ZLINE website for detailed warranty terms and conditions.

For technical assistance, parts, or customer service, please contact ZLINE customer support. Have your model number

(KZ-30) and purchase date ready when contacting support.

Manufacturer: Z Line Kitchen and Bath LLC

© 2023 ZLINE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00E3C4H8C>

More documents and user manuals: <https://manuals.plus/>