

Manuals.plus /

- › BRIGHT STAR /
- › Brightstar BR100B Universal TV Remote Instruction Manual

## BRIGHT STAR BR100B

# Brightstar BR100B Universal TV Remote Instruction Manual

Model: BR100B | Brand: BRIGHT STAR

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your Brightstar BR100B Universal TV Remote. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience.



*Image: A collection of Brightstar BR100B Universal TV Remotes, showcasing their design and quantity.*

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely. Some models may include a small set screw to lock the battery cover; if present, tighten it gently.

### 2. Programming the Remote (Code Search Method)

The Brightstar BR100B remote is designed for universal compatibility with most televisions. Follow these steps to program your remote:

1. Turn on the television you wish to control manually.
2. Point the remote control at the television.
3. Press and hold the **"SET UP"** button until the indicator light on the remote turns on and remains lit.
4. While holding the **"SET UP"** button, press the **"POWER"** button once. The indicator light should blink.
5. Release both buttons. The indicator light should now be solid.
6. Repeatedly press the **"POWER"** button (approximately every 2 seconds) until your television turns off. This indicates that the remote has found a compatible code.
7. Once the television turns off, immediately press the **"ENTER"** button to save the code. The indicator light will turn off.
8. Test the remote's functions (e.g., power, volume, channel) to ensure it controls your television correctly. If not, repeat the programming steps.

*Note: For some newer TV models, a compatible code may not be available.*

## OPERATING INSTRUCTIONS

---

Once programmed, your Brightstar BR100B Universal TV Remote operates like a standard television remote. Here are the basic functions:

- **POWER:** Turns the television on or off.
- **NUMBER BUTTONS (0-9):** Used to directly enter channel numbers.
- **CH +/-:** Changes channels up or down sequentially.
- **VOL +/-:** Adjusts the volume level up or down.
- **MUTE:** Silences the television audio.
- **ENTER:** Confirms selections or channel entries.
- **DIRECTIONAL PAD (Up/Down/Left/Right):** Navigates menus and selections.

Ensure a clear line of sight between the remote's infrared emitter and the television's IR receiver for optimal performance.

## MAINTENANCE

---

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or the indicator light does not illuminate during button presses. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote does not operate the TV.	Batteries are dead or incorrectly installed. Remote is not programmed to the TV. No clear line of sight to the TV's IR receiver.	Replace batteries, ensuring correct polarity. Repeat the programming steps (Code Search Method). Ensure no obstructions between the remote and the TV.
Remote only controls some functions.	Incorrect code programmed or limited compatibility for specific TV models.	Repeat the programming steps to search for a more compatible code. Some advanced functions may not be supported by all universal remotes.
Indicator light does not turn on.	Dead batteries.	Replace batteries.

## SPECIFICATIONS

---

- **Model:** BR100B
- **Brand:** BRIGHT STAR
- **Special Feature:** Universal TV Remote
- **Color:** Black
- **Max Number of Supported Devices:** 1 (Television)
- **Compatible Devices:** Television
- **Power Source:** 2 x AA Batteries (not included)
- **Manufacturer:** Brightstar®
- **Date First Available:** July 22, 2013

*Note: Package dimensions and item weight provided in product listings typically refer to bulk packaging (e.g., 50-pack) and not individual remote units.*

## WARRANTY INFORMATION

---

Specific warranty details for the Brightstar BR100B Universal TV Remote are typically provided at the point of purchase or within the product packaging. Please refer to your purchase documentation for information regarding warranty coverage, duration, and claims procedures. For additional protection, extended warranty plans may be available from third-party providers.

## SUPPORT

---

For further assistance or inquiries regarding your Brightstar BR100B Universal TV Remote, please contact the manufacturer or your retailer. You may also visit the official BRIGHT STAR Store on Amazon for product updates and additional resources.

