

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ingenuity](#) /

› [Ingenuity Soothe 'n Delight Portable Baby Swing Instruction Manual \(Cozy Kingdom, Model 60194\)](#)

Ingenuity 60194

Ingenuity Soothe 'n Delight Portable Baby Swing Instruction Manual

MODEL: 60194 (COZY KINGDOM)

1. Important Safety Information

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Never leave child unattended.
- Always use the restraint system.
- This product is intended for infants from 0 to 9 months, weighing between 6 lbs (2.7 kg) and 20 lbs (9 kg).
- Do not use this product once your child can sit up unaided or attempts to climb out.
- Do not move or lift the product with the child inside.
- Ensure the product is placed on a flat, level surface.



Figure 1: Always secure the five-point harness to ensure your child's safety.

Read all instructions before assembly and use of the product. Keep instructions for future reference.

2. Product Overview

The Ingenuity Soothe 'n Delight Portable Baby Swing provides a comfortable and soothing environment for your infant. Designed for portability and ease of use, it features multiple swing speeds, calming music, and a convenient timer function.



Figure 2: The Ingenuity Soothe 'n Delight Portable Baby Swing.

Key Features:

- **6-Speed TrueSpeed™ Technology:** Maintains consistent swing speed as baby grows.
- **Music & Timer:** Soothing melodies with volume control and timer settings (15, 30, 45 minutes) with auto-shutoff at 60 minutes.
- **Compact Fold:** Folds easily for storage and travel.
- **Plush Comfort:** Soft headrest, seat pad, and pillow for ultimate comfort.
- **Removable Toy Bar:** Includes 2 plush toys for engagement.
- **Recline Positions:** Adjustable seat recline for baby's comfort.

3. Setup and Assembly

Assembly is required for this product. Please refer to the detailed instructions provided in the separate assembly guide included in your product packaging. Ensure all components are securely fastened before use.

Battery Installation:

1. Locate the battery compartment on the control unit.
2. Unscrew and remove the battery compartment cover.
3. Insert 4 C batteries (not included) according to the polarity indicators (+/-).
4. Replace the cover and secure with the screw.



Figure 3: Proper installation of 4 C batteries in the control unit.

4. Operating Instructions

Control Panel Functions:



6 swing speeds

Figure 4: The swing's control panel for various functions.

- **Power Button:** Press to turn the swing ON or OFF.
- **Swing Speed:** Use the '+' and '-' buttons to select one of 6 swing speeds. The indicator lights will show the current speed setting.
- **Music:** Press the music note button to cycle through melodies. Use the volume buttons to adjust the sound level.
- **Timer:** Press the clock button to set the swing timer for 15, 30, or 45 minutes. The swing will automatically shut off after 60 minutes if no timer is set.

Adjusting Recline:

The seat offers multiple recline positions for your child's comfort. Locate the recline adjustment mechanism (typically a button or lever near the seat hinge) and adjust to the desired position. Ensure it locks securely into place.



Figure 5: Adjusting the seat recline for optimal comfort.

Toy Bar:

The toy bar can be easily removed or rotated for convenient access to your child or to provide less distraction. Simply unclip or pivot the bar as needed.

5. Maintenance

Cleaning Instructions:

- **Fabrics:** Wash fabrics with cold water on a gentle cycle. Do not use bleach. The seat pad can be placed in a dryer on low heat; air dry the headrest flat.
- **Toys and Frame:** Wipe toys and the frame clean with a damp cloth and mild soap. Air dry thoroughly.

6. Troubleshooting

- **Swing Not Operating:** Check if the batteries are correctly installed and not depleted. Replace with fresh C batteries if necessary.
- **Music Not Playing/Low Volume:** Ensure the volume is turned up and batteries are fresh.
- **Inconsistent Swing Speed:** The TrueSpeed™ technology is designed to adapt to your baby's weight. If the speed is still inconsistent, check battery levels.
- **Folding Issues:** Ensure all components are properly aligned and unlocked before attempting to fold the swing. Do not force the folding mechanism.

7. Specifications

Attribute	Value
Brand	Ingenuity
Model Number	60194
Color/Pattern	Cozy Kingdom
Product Dimensions	28.74"D x 22.64"W x 26.77"H (73.0 cm D x 57.51 cm W x 68.0 cm H)
Item Weight	6.96 pounds (3.16 kg)
Material	50% Metal, 35% Plastic, 15% Fabric
Age Range	0-9 Months
Weight Capacity	6-20 lbs (2.7-9 kg)
Batteries Required	4 C batteries (not included)

ingenuity™

Weight Range:
6-20 lb / 3-9 kg

Max Age:
9 mos.



Figure 6: Product dimensions and weight limits.

8. Portability and Storage

The Ingenuity Soothe 'n Delight Portable Baby Swing is designed for easy folding, making it convenient for storage or travel. To fold, ensure the seat is in the upright position and follow the folding instructions in your assembly guide. The compact design allows it to be stored in small spaces or transported easily.



Figure 7: Folding the swing for portability.





Figure 8: The swing in its compact folded state.

9. Warranty and Support

This product comes with a 9-month warranty. For warranty claims, product support, or additional assistance, please contact Ingenuity customer service through their official website or the contact information provided in your product packaging.

© 2026 Ingenuity. All rights reserved.