

Tupperware Mini Hourglass Salt and Pepper Shakers

Tupperware Mini Hourglass Salt and Pepper Shakers User Manual

Model: Mini Hourglass Salt and Pepper Shakers

[Introduction](#) [Product Overview](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the proper use and care of your Tupperware Mini Hourglass Salt and Pepper Shakers. Please read these instructions carefully before first use to ensure optimal performance and longevity of your product.

2. PRODUCT OVERVIEW



Figure 2.1: A pair of clear, hourglass-shaped Tupperware shakers with bright pink, airtight lids, designed for salt, pepper, or other spices.

The Tupperware Mini Hourglass Salt and Pepper Shakers are designed for convenient storage and dispensing of various spices. Standing approximately 4 inches tall, these shakers feature airtight seals to maintain freshness and prevent clumping. Their compact size makes them ideal for use at home, in the office, during travel, or in recreational vehicles.

Key Features:

- Mini Hourglass design, approximately 4 inches tall.
- Airtight sheer containers with green color seals for freshness.
- Dishwasher safe for easy cleaning.
- Small, convenient, and personal size for various settings.
- Versatile for salt, pepper, and other favorite spices.

3. SETUP

Before first use, it is recommended to wash the shakers thoroughly.

1. **Unpack:** Remove the shakers from their packaging.
2. **Wash:** Wash both the shaker body and the lid with warm, soapy water, or place them in the dishwasher.
3. **Dry:** Ensure all parts are completely dry before filling.
4. **Fill:** Remove the lid by gently pulling it off. Fill the shaker with your desired spice (salt, pepper, etc.). Do not overfill.
5. **Seal:** Replace the lid firmly to ensure an airtight seal.

4. OPERATING INSTRUCTIONS

Using your Tupperware Mini Hourglass Shakers is straightforward.

- **Dispensing:** To dispense spices, simply invert the shaker over your food and gently shake. The small openings in the lid are designed for controlled dispensing.
- **Airtight Seal:** The airtight seal helps keep contents fresh and prevents moisture from clumping spices. Always ensure the lid is securely fastened when not in use.
- **Customization:** The clear body allows you to easily identify contents. You can write on the outside of the shaker with a permanent marker to label spices. If you wish to change the label, nail polish remover can be used to clean the marker off.

5. MAINTENANCE

Proper maintenance will extend the life of your shakers.

Cleaning:

- The shakers are **dishwasher safe**. Place them on the top rack for best results.
- Alternatively, wash by hand with warm water and mild dish soap.
- Use a small brush or toothpick to clear any spice residue from the lid openings if necessary.
- Ensure shakers are completely dry before refilling to prevent moisture from affecting spices.

Storage:

Store shakers in a cool, dry place away from direct sunlight when not in use or when storing spices for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Spices clumping inside.	Moisture ingress; improper sealing.	Ensure lid is securely fastened. Store in a dry environment. Ensure spices are dry before filling.
Difficulty dispensing spices.	Lid openings are clogged.	Clean lid openings with a small brush or toothpick. Ensure spices are not too coarse for the openings.
Lid feels loose.	Lid not properly aligned or sealed.	Press down firmly on the lid until it clicks into place, ensuring it is evenly seated.

7. SPECIFICATIONS

Brand	Tupperware
Model Name	Mini Hourglass Salt and Pepper Shakers
Material	Plastic
Color	Pink (Lids), Clear (Body)
Product Dimensions	Approximately 4" L x 4" W x 4" H (each shaker)
Item Weight	1.8 ounces (total for set)
Manufacturer	Tupperware
UPC	556548456316, 885161601064

8. WARRANTY & SUPPORT

Warranty Information:

The Tupperware Mini Hourglass Salt and Pepper Shakers are covered by **Tupperware's Lifetime Warranty**. This warranty covers any product that proves to be defective due to faulty material or workmanship, or that fails to perform as specified when used under normal non-commercial use and care for the lifetime of the product.

For specific details regarding warranty claims, please refer to the official Tupperware website or contact Tupperware customer service directly.

Customer Support:

For further assistance, questions, or to report any issues not covered in this manual, please visit the official Tupperware website or contact their customer support. Contact information can typically be found on the Tupperware packaging or their official website.

Note: Always refer to the latest information provided by Tupperware for the most accurate and up-to-date support details.