


[manuals.plus](#) /› [JVC](#) /› [JVC HR-VP58U 4 Head Hi-Fi Stereo VCR Instruction Manual](#)

## JVC HR-VP58U

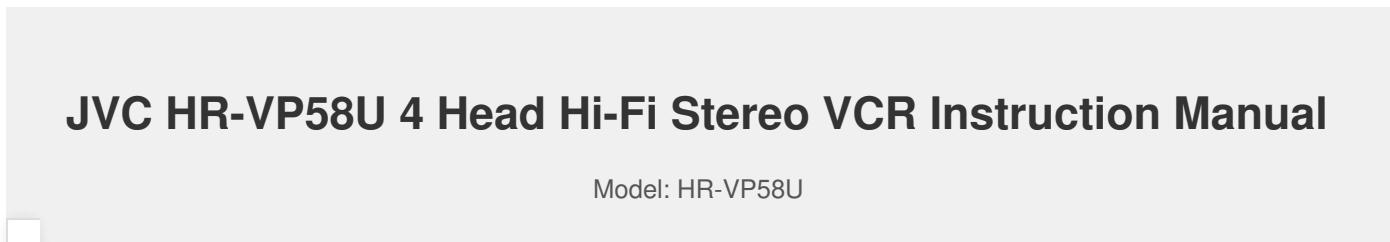

### 1. INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, maintenance, and troubleshooting of your JVC HR-VP58U 4 Head Hi-Fi Stereo VCR. Please read this manual thoroughly before using the unit to ensure optimal performance and safety. Keep this manual for future reference.

### 2. IMPORTANT SAFETY INFORMATION

**WARNING:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Do not remove the cover. Refer servicing to qualified personnel only.

- Ensure the power supply voltage matches the rating on the unit.
- Do not block ventilation openings.
- Avoid placing the unit near heat sources or in direct sunlight.
- Do not expose the unit to dripping or splashing liquids.
- Unplug the unit during lightning storms or when unused for long periods.

### 3. PACKAGE CONTENTS

Verify that your package contains the following items:

- JVC HR-VP58U VCR Unit
- Remote Control
- Power Cord (attached)
- Audio/Video Cables (RCA type, typically red, white, yellow)
- Instruction Manual (this document)

### 4. PRODUCT OVERVIEW

#### 4.1 Front Panel



**Figure 1:** Front view of the JVC HR-VP58U VCR with its remote control. The VCR features a power button, tape slot, and front audio/video input jacks.



**Figure 2:** Detailed view of the JVC HR-VP58U VCR's front panel, showing playback controls (Play, Rewind, Fast Forward, Stop/Eject, Pause) and the remote control.

The front panel provides access to essential controls and input jacks for convenient operation. Key features include:

- **POWER Button:** Turns the VCR on or off.
- **Tape Slot:** Insert VHS tapes for playback or recording.
- **VIDEO (MONO) L-AUDIO-R Jacks:** Front panel audio/video input for temporary connections (e.g., camcorder).
- **Playback Controls:** Buttons for Play, Stop/Eject, Rewind, Fast Forward, and Pause.
- **Display:** Shows current channel, time, and operational status.

## 4.2 Rear Panel



Figure 3: Rear panel of the JVC HR-VP58U VCR, displaying the power cord, serial number, and various audio/video input/output ports.



Figure 4: Close-up of the rear audio (red/white RCA), video (yellow RCA), RF OUT, and ANT. IN connections on the JVC HR-VP58U VCR.

The rear panel houses all necessary connections for integrating the VCR into your home entertainment system.

- **ANT. IN:** Connects to your antenna or cable TV signal.
- **RF OUT:** Connects to your TV's antenna input (typically for older TVs).
- **AUDIO OUT (L/R) & VIDEO OUT:** RCA jacks (red, white, yellow) for connecting to your TV or audio receiver.
- **AUDIO IN (L/R) & VIDEO IN:** RCA jacks (red, white, yellow) for connecting external devices for recording.

- **CH3/CH4 Switch:** Selects the RF output channel for your TV.

## 5. SETUP

---

### 5.1 Connecting to a Television

There are two primary methods for connecting your VCR to a television:

#### 1. Using RCA Audio/Video Cables (Recommended for best quality):

- Connect the yellow VIDEO OUT jack on the VCR to the yellow VIDEO IN jack on your TV.
- Connect the white AUDIO OUT (L) jack on the VCR to the white AUDIO IN (L) jack on your TV.
- Connect the red AUDIO OUT (R) jack on the VCR to the red AUDIO IN (R) jack on your TV.
- Select the corresponding Video Input (e.g., Video 1, AV1) on your TV.

#### 2. Using an RF Coaxial Cable (for older TVs or limited inputs):

- Connect your antenna or cable TV signal to the ANT. IN jack on the VCR.
- Connect an RF coaxial cable from the RF OUT jack on the VCR to the ANT. IN jack on your TV.
- Set the CH3/CH4 switch on the VCR's rear panel to either 3 or 4.
- Tune your TV to the corresponding channel (3 or 4) to receive the VCR's signal.

### 5.2 Power Connection

Plug the attached power cord into a standard AC wall outlet (120V, 60Hz).

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Basic Playback

1. Turn on your TV and select the correct input source (AV input or Channel 3/4).
2. Press the **POWER** button on the VCR or remote control to turn on the unit.
3. Insert a VHS tape into the tape slot. The VCR will automatically load the tape.
4. Press the **PLAY** button on the VCR or remote control to begin playback.
5. Use the **REW** (Rewind) and **FF** (Fast Forward) buttons to navigate the tape.
6. Press the **PAUSE** button to temporarily stop playback. Press again to resume.
7. Press the **STOP/EJECT** button to stop playback and eject the tape.

### 6.2 Recording

The JVC HR-VP58U allows for recording from various sources.

1. Insert a recordable VHS tape with the erase protection tab intact.
2. **To record from TV:** Select the desired TV channel on the VCR.
3. **To record from external device (e.g., camcorder):** Connect the device to the front or rear AUDIO IN/VIDEO IN jacks. Select the appropriate input source on the VCR (e.g., Line 1, L1).
4. Press the **REC** (Record) button. Recording will begin immediately.
5. Press the **STOP** button to end recording.

*Refer to the remote control section for advanced recording features like timer recording.*

### 6.3 Remote Control Functions

The included remote control provides full functionality for your VCR. Familiarize yourself with its buttons for convenient operation.

- **POWER:** Turns the VCR on/off.
- **SHUTTLE PLUS:** For variable speed playback and search.
- **MENU/OK:** Accesses and confirms menu selections.
- **CH +/-:** Changes channels or navigates menus.
- **TV/VCR:** Switches between TV and VCR modes.
- **REC/STOP/PLAY/PAUSE/FF/REW:** Standard transport controls.
- **TIMER:** Accesses timer recording settings.
- **DISPLAY:** Shows on-screen display information.

## 7. MAINTENANCE

---

### 7.1 Cleaning the Unit

- Wipe the exterior of the VCR with a soft, dry cloth.
- Do not use liquid or aerosol cleaners, as they may damage the finish or internal components.
- For stubborn dirt, slightly dampen the cloth with water, then wipe dry immediately.

### 7.2 Tape Head Cleaning

Over time, tape heads can accumulate dirt, leading to poor picture or sound quality. Use a dry-type VHS head cleaning cassette periodically (e.g., every 50-100 hours of use) according to the cleaning cassette's instructions. Avoid wet-type cleaners unless specifically recommended, as they can cause damage if used improperly.

## 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No power	Power cord unplugged; outlet not active.	Check power cord connection; test outlet with another device.
No picture/sound during playback	Incorrect TV input selected; A/V cables loose or incorrect; dirty tape heads.	Select correct TV input; check all cable connections; use a head cleaning cassette.
Tape will not play or eject	Tape jammed; VCR malfunction.	Do not force the tape. Power cycle the VCR. If issue persists, seek professional service.
Poor picture quality (snowy, distorted)	Dirty tape heads; worn-out tape; weak signal.	Clean tape heads; try a different tape; check antenna/cable connection.
Remote control not working	Dead batteries; obstruction; remote sensor blocked.	Replace batteries; remove obstructions; ensure clear line of sight to VCR sensor.

## 9. SPECIFICATIONS

---

- **Model:** HR-VP58U
- **Heads:** 4-Head Hi-Fi Stereo
- **Video System:** NTSC

- **Power Supply:** AC 120V, 60Hz
- **Dimensions (W x H x D):** Approximately 19.72 x 8.82 x 13.82 inches (based on package dimensions, actual unit may vary slightly)
- **Weight:** Approximately 8.98 pounds
- **Audio:** Hi-Fi Stereo
- **Inputs:** Front A/V (RCA), Rear A/V (RCA), RF (Coaxial)
- **Outputs:** Rear A/V (RCA), RF (Coaxial)

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. If you encounter any issues with the product, it is recommended to contact the seller directly for assistance before attempting repairs.

*Note: This product is a JVC HR-VP58U VCR. For specific support related to this model, please have your model number and serial number ready when contacting support.*