

[Manuals.plus](#) /

› [ADLER EUROPE](#) /

› ADLER EUROPE AD1225 Glass and Stainless Steel Kettle Instruction Manual - 1.7 Liters

ADLER EUROPE AD 1225

ADLER EUROPE AD1225 Glass and Stainless Steel Kettle Instruction Manual

INTRODUCTION

Thank you for choosing the ADLER EUROPE AD1225 Electric Kettle. This manual provides important information regarding the safe operation, maintenance, and care of your new appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the kettle base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off," then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- Ensure the lid is securely closed before operating.

- This appliance is for household use only.

PRODUCT OVERVIEW

The ADLER EUROPE AD1225 kettle features a durable glass body with stainless steel accents and an integrated blue LED illumination that activates during boiling.



Figure 1: ADLER EUROPE AD1225 Electric Kettle. This image shows the overall design of the kettle, highlighting its glass body, stainless steel base, and black handle.

Components:

1. Glass Kettle Body with Water Level Indicator (MIN 0.5L / MAX 1.7L)
2. Lid
3. Handle
4. Power Switch (ON/OFF)
5. 360-degree Rotational Power Base with Cord Winder
6. Integrated Blue LED Illumination
7. Anti-Calc Filter (located in the spout)

SETUP AND FIRST USE

Unpacking:

- Carefully remove the kettle and all accessories from the packaging.
- Remove any promotional stickers or labels.
- Inspect the appliance for any damage. Do not use if damaged.

Before First Use:

To ensure cleanliness and remove any manufacturing residues, it is recommended to perform the following steps:

1. Fill the kettle with clean water up to the MAX (1.7L) mark.
2. Place the kettle securely on its power base.
3. Plug the power base into a suitable electrical outlet.
4. Press the power switch to turn the kettle ON. The blue LED will illuminate.
5. Allow the water to boil completely. The kettle will automatically shut off.
6. Carefully pour out the boiled water.
7. Repeat this process two more times.

Your kettle is now ready for regular use.

OPERATING INSTRUCTIONS

Filling the Kettle:

- Remove the kettle from its power base.
- Open the lid.
- Fill the kettle with the desired amount of fresh water. Ensure the water level is between the MIN (0.5L) and MAX (1.7L) marks on the water level indicator. Do not overfill or underfill.
- Close the lid securely.



Figure 2: Empty kettle showing MIN and MAX water level indicators. Always fill water between these marks.

Boiling Water:

- Place the filled kettle firmly onto its power base.
- Ensure the power base is plugged into a grounded electrical outlet.
- Press the power switch located on the handle downwards to the "ON" position.

ADLER

EUROPE



Figure 3: Activating the power switch. The switch is located on the handle for easy access.

- The blue LED illumination will light up, indicating that the kettle is heating the water.



Figure 4: Kettle in operation with water boiling and blue LED illuminated. The blue light indicates the heating process.

- Once the water reaches boiling point, the kettle will automatically switch off, and the blue LED will extinguish.
- You can remove the kettle from its base to pour the hot water.
- To re-boil, simply repeat the process.

Automatic Shut-off and Boil-Dry Protection:

The kettle is equipped with an automatic shut-off feature that activates once the water has boiled. It also includes boil-dry protection, which automatically turns off the heating element if the kettle is accidentally switched on without sufficient water. If boil-dry protection activates, allow the kettle to cool down for a few minutes before refilling with water and operating again.

MAINTENANCE AND CLEANING

WARNING: Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.

Exterior Cleaning:

- Wipe the exterior of the kettle with a soft, damp cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.
- Ensure no water enters the electrical components.

Interior Cleaning and Descaling:

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. Regular descaling is recommended to maintain performance and prolong the life of your kettle.

- Fill the kettle with a mixture of water and white vinegar (e.g., 1 part vinegar to 2 parts water) or a commercial descaling solution, ensuring the mixture covers the heating element.
- Bring the mixture to a boil.
- Allow the solution to soak in the kettle for at least 30 minutes, or longer for heavy scale buildup.
- Pour out the solution and rinse the interior thoroughly with fresh water several times.
- If necessary, repeat the process until all limescale is removed.
- The anti-calc filter in the spout can be removed for cleaning if needed. Rinse it under running water.

Storage:

When not in use, store the kettle in a clean, dry place. The power cord can be neatly wound around the cord winder located under the power base.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in. Power switch not engaged. Boil-dry protection activated. No power at outlet.	Ensure the power base is securely plugged into a working outlet. Press the power switch firmly to the "ON" position. Allow the kettle to cool down for several minutes, then refill with water and try again. Check the circuit breaker or try another outlet.

Problem	Possible Cause	Solution
Kettle switches off before boiling.	Limescale buildup. Lid not closed properly.	Descale the kettle as per the "Maintenance and Cleaning" section. Ensure the lid is securely closed.
Water leaks from the kettle.	Overfilled. Lid not properly sealed.	Do not fill above the MAX mark. Ensure the lid is closed and sealed correctly.
Blue LED does not light up.	Kettle not heating. LED malfunction.	Check if the kettle is heating water. If not, refer to "Kettle does not heat up" solutions. If the kettle heats but the LED does not light, contact customer support.

TECHNICAL SPECIFICATIONS

- **Model:** AD 1225
- **Brand:** ADLER EUROPE
- **Capacity:** 1.7 Liters
- **Power:** 2000 Watts
- **Voltage:** 230 Volts
- **Material:** Glass, Stainless Steel
- **Special Features:** Automatic Shut-off, Boil-Dry Protection, Blue LED Illumination, 360-degree Rotational Base, Hidden Heating Element, BPA-Free
- **Dimensions (L x W x H):** 18.5L x 22l x 25H cm
- **GTIN/UPC:** 123636542161
- **ASIN:** B00EA0FEZW

WARRANTY AND SUPPORT

This ADLER EUROPE AD1225 Electric Kettle comes with a **2-year manufacturer's warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

The warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

For technical support, warranty claims, or service inquiries, please contact your retailer or the ADLER EUROPE customer service department. Contact information can typically be found on the manufacturer's website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00EA0FEZW>

More documents and user manuals: <https://manuals.plus/>