

WMF 0414090011

WMF LONO 900W Toaster Instruction Manual

Model: 0414090011

1. INTRODUCTION

Thank you for choosing the WMF LONO 900W Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read these instructions thoroughly before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the toaster is placed on a stable, heat-resistant surface, away from flammable materials.
- Do not operate the toaster near water or other liquids.
- Never insert metal objects into the toaster slots.
- Unplug the toaster from the power outlet when not in use, before cleaning, or if a malfunction occurs.
- Do not touch hot surfaces. Use handles or knobs.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not cover the toaster during operation.
- Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials. They must be supervised when in use.

3. PRODUCT OVERVIEW

The WMF LONO Toaster is designed for efficient and even toasting of bread slices. It features two wide slots, adjustable browning control, and various functions for optimal results.



Image 1: The WMF LONO 900W Toaster, showcasing its sleek stainless steel and black design with two toasting slots.

Key Components:

- **Toasting Slots:** Two wide slots for various bread types.
- **Carriage Lever:** Lowers bread into the toaster and initiates the toasting cycle.
- **Browning Control Dial:** Adjusts the desired level of toast browning (settings 1-7).
- **Control Buttons:** Defrost, Reheat, and Cancel functions.
- **Removable Crumb Tray:** Collects crumbs for easy cleaning.
- **Integrated Warming Rack:** For warming rolls and pastries.



Image 2: Close-up view of the toaster's control panel, showing the browning control dial and the defrost, reheat, and cancel buttons.



Image 3: The removable crumb tray of the WMF LONO Toaster, shown partially pulled out for cleaning.



Image 4: The WMF LONO Toaster with its integrated warming rack extended, holding two bread rolls for warming.

4. SETUP

1. Unpack the toaster and remove all packaging materials.
2. Place the toaster on a clean, dry, stable, and heat-resistant surface. Ensure there is adequate ventilation around the appliance.
3. Before first use, operate the toaster without bread for a few cycles at the highest browning setting to burn off any manufacturing residues. This may produce a slight odor, which is normal. Ensure the area is well-ventilated.
4. Allow the toaster to cool down completely after the initial burn-off cycles.

5. OPERATING INSTRUCTIONS

5.1. Toasting Bread

1. Plug the toaster into a suitable power outlet (220-240V, 50/60Hz).

2. Place up to two slices of bread into the toasting slots.
3. Select your desired browning level using the browning control dial (1 for light, 7 for dark).
4. Press the carriage lever down until it locks into place. The toasting cycle will begin, and the indicator light will illuminate.
5. Once the selected browning level is reached, the toast will automatically pop up, and the toaster will switch off.



Image 5: Two slices of bread placed inside the toasting slots of the WMF LONO Toaster, ready for operation.

5.2. Defrost Function

Use this function to toast frozen bread.

- Place frozen bread into the slots.
- Select your desired browning level.
- Press the carriage lever down, then press the **Defrost** button (snowflake icon). The defrost indicator light will illuminate.
- The toaster will automatically adjust the toasting time to account for defrosting.

5.3. Reheat Function

Use this function to warm up already toasted bread without further browning.

- Place cold, toasted bread into the slots.
- Press the carriage lever down, then press the **Reheat** button (wavy lines icon). The reheat indicator light will illuminate.
- The toaster will briefly warm the bread and then automatically pop it up.

5.4. Cancel Function

To stop the toasting cycle at any time, press the **Cancel** button (circle with diagonal line icon). The toast will pop up immediately.

5.5. Using the Warming Rack

The integrated warming rack is ideal for warming rolls, croissants, or pastries.

1. Gently push the warming rack lever upwards until the rack is fully extended.
2. Place the items to be warmed on the rack.
3. Set the browning control to a low setting (e.g., 1 or 2).
4. Press the carriage lever down to start the warming cycle.
5. Monitor the items closely to prevent burning. Press the Cancel button when warmed to your preference.
6. After use, push the warming rack lever downwards to retract the rack.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. Always unplug the toaster and allow it to cool completely before cleaning.
2. **Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Empty the crumbs and wipe the tray clean with a damp cloth. Ensure it is dry before reinserting.
3. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the stainless steel finish.
4. Never immerse the toaster in water or any other liquid.
5. Do not attempt to clean the inside of the toasting slots with any tools or your fingers.

7. TROUBLESHOOTING








- **Toaster does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check if the carriage lever is fully pressed down and locked.
- **Bread is unevenly toasted:** This can sometimes occur due to variations in bread type or thickness.

Try adjusting the browning level.

- **Smoke coming from toaster:** Unplug immediately. This usually indicates crumbs or food particles are burning inside. Allow to cool, then clean the crumb tray thoroughly. If food is stuck in the slots, unplug and carefully remove it with non-metallic tongs.
- **Carriage lever does not stay down:** Ensure the toaster is plugged in. The lever will not latch if the toaster is not receiving power. If it still doesn't latch, there might be a mechanical issue; contact customer support.

8. SPECIFICATIONS

| | |
|------------------------|---|
| Brand | WMF |
| Model Number | 0414090011 |
| Product Type | Toaster |
| Power Consumption | 900 W |
| Voltage | 220 - 240 V / 50/60 Hz |
| Number of Slices | 2 |
| Browning Levels | 7 |
| Color | Silver/Black |
| Material | Cromargan Stainless Steel |
| Dimensions (L x W x H) | 12.6 x 9.06 x 7.68 inches (32 x 23 x 19.5 cm approx.) |
| Item Weight | 3.49 pounds (1.59 kg) |

| | |
|---|--|
| <div><div>WMF Lono</div><div></div><div><div><div><div>DE Gebrauchsanleitung Crêperie</div><div>EN Operating Manual Crêpe Maker</div><div>FR Guide d'emploi Crêpière</div><div>ES Instrucciones de uso Crêpera</div><div>IT Istruzioni per l'uso Crêpera</div><div>RU Инструкция по эксплуатации Crêpera</div></div><div><div>4</div><div>54</div><div>55</div><div>56</div><div>57</div><div>58</div></div><div><div>31</div><div>34</div><div>35</div><div>41</div><div>42</div><div>43</div></div></div></div></div> | <div>WMF Lono Crêperie Operating Manual</div> <div>Comprehensive operating manual for the WMF Lono Crêperie, covering safety instructions, setup, usage, cleaning, and care for making sweet and savory crepes. Includes technical specifications and basic recipe.</div> |
| <div><div>WMF</div><div>TABLE GRILL WITH GLASS LID LONO</div><div></div><div><div>DE Gebrauchsanleitung Tischgrill</div><div>EN Operating Manual Table Grill</div><div>FR Guide d'emploi Grill à table</div><div>ES Instrucciones de uso Grill de mesa</div><div>IT Istruzioni per l'uso Grill da tavolo</div><div>RU Инструкция по эксплуатации Табличного гриля</div></div></div> | <div>WMF Lono Table Grill with Glass Lid: Operating Instructions & Guide</div> <div>Discover the WMF Lono table grill with glass lid. This comprehensive guide covers setup, operation, safety precautions, cleaning, and technical details for optimal grilling performance in your home.</div> |
| <div><div></div><div><div>MARQUE: WMF</div><div>REFERENCE: LONO - WMFAL3130011</div><div>CODEC: 4155837</div></div><div></div><div></div></div> | <div>Manuel d'utilisation Bouilloire Électrique WMF Lono / Lineo</div> <div>Guide complet pour les bouilloires électriques WMF Lono et Lineo. Ce manuel détaille la sécurité, l'utilisation, l'entretien et le dépannage, incluant les spécifications techniques et les modèles.</div> |
| <div><div>WMF Lono</div><div></div><div><div><div><div>DE Gebrauchsanleitung Milk & Choc</div><div>EN Operating Manual Milk & Choc</div><div>FR Guide d'emploi Milk & Choc</div><div>ES Instrucciones de uso Milk & Choc</div><div>IT Istruzioni per l'uso Milk & Choc</div><div>RU Инструкция по эксплуатации Молочного шоколада</div></div><div><div>4</div><div>54</div><div>55</div><div>56</div><div>57</div><div>58</div></div><div><div>61</div><div>62</div><div>63</div><div>64</div><div>65</div><div>66</div></div></div></div></div> | <div>WMF Lono Milk & Choc Operating Manual - Froth Milk & Make Hot Chocolate</div> <div>Comprehensive operating manual for the WMF Lono Milk & Choc, detailing its features, programs for frothing milk (hot/cold), heating milk, and preparing hot chocolate. Includes safety instructions, cleaning guide, and troubleshooting tips.</div> |
| <div><div>WMF</div><div>TOASTER MASTER</div><div></div><div><div>DE Gebrauchsanleitung Toaster</div><div>EN Operating Manual Toaster</div><div>FR Guide d'emploi Grill</div><div>ES Instrucciones de uso Grill</div><div>IT Istruzioni per l'uso Grill</div><div>RU Инструкция по эксплуатации Тостера</div></div></div> | <div>WMF Master Toaster: Operating Instructions and User Guide</div> <div>Learn how to safely operate and maintain your WMF Master Toaster. This guide covers setup, features, safety precautions, cleaning, and technical specifications for optimal use.</div> |