

[manuals.plus](#) /› [Timex](#) /› [Timex T121B Digital Alarm Clock User Manual](#)

Timex T121B

Timex T121B Digital Alarm Clock User Manual

Model: T121B

1. PRODUCT OVERVIEW

The Timex T121B Digital Alarm Clock is designed for simplicity and reliability, featuring a large, easy-to-read LED display. It includes a 24-hour "set and forget" alarm with auto-repeat and auto-shutoff functions. The alarm offers a graduated wake-up sound, starting softly and increasing in volume. For convenience during power interruptions, the clock is equipped with a battery backup system (requires 2 AAA batteries, not included) to maintain time and alarm settings. LED indicators show PM, alarm set status, and low battery warnings.



Image: Front view of the Timex T121B Digital Alarm Clock, displaying the time 10:09 PM.

2. WHAT'S IN THE BOX

- Timex T121B Alarm Clock with 0.7-inch Red Display (Black)
- 120V Universal Power Adapter (Corded Electric)



Image: The Timex T121B Digital Alarm Clock shown inside its retail packaging, highlighting its electric power source.

3. SETUP

3.1 Power Connection

1. Unpack the Timex T121B alarm clock and its power adapter.
2. Insert the small end of the 120V universal power adapter into the DC input jack located on the back of the alarm clock.
3. Plug the larger end of the power adapter into a standard 120V AC wall outlet. The clock display will illuminate.

3.2 Battery Backup Installation

The battery backup feature ensures that time and alarm settings are retained during power outages. This clock requires two "AAA" batteries (not included).

1. Locate the battery compartment on the bottom of the alarm clock.
2. Open the battery compartment cover.
3. Insert two fresh "AAA" batteries, observing the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Image: Rear view of the Timex T121B Digital Alarm Clock, illustrating the location of the battery compartment and power input.

4. OPERATING INSTRUCTIONS

4.1 Setting the Time

1. Press and hold the **TIME SET** button (usually located on the top or back) until the hour digits begin to flash.
2. Press the **HOUR** button repeatedly to adjust the hour. Observe the PM indicator if setting a PM time.
3. Press the **MINUTE** button repeatedly to adjust the minutes.
4. Press the **TIME SET** button again to confirm and save the time.

4.2 Setting the Alarm

1. Press and hold the **ALARM SET** button until the alarm hour digits begin to flash.
2. Press the **HOUR** button to adjust the alarm hour.
3. Press the **MINUTE** button to adjust the alarm minutes.
4. Press the **ALARM SET** button again to confirm the alarm time.
5. To activate or deactivate the alarm, press the **ALARM ON/OFF** button. An alarm indicator light will appear on the display when the alarm is active.

4.3 Snooze Function

When the alarm sounds, press the large **SNOOZE/DIMMER** bar located on the top of the clock. This will temporarily silence the alarm for approximately 9 minutes. The alarm will sound again after the snooze period ends.

4.4 Alarm Reset (Set and Forget)

To turn off the alarm for the current day and automatically reset it for the next day at the same time, press the **ALARM RESET** button (often labeled with a bell icon). This feature is part of the 24-hour "set and forget" functionality.

Alarm Reset Button Turns Off Alarm and Automatically Resets It for the Next Day



Sure Alarm Battery Backup

Image: The Timex T121B Digital Alarm Clock highlighting the Alarm Reset Button, which silences the alarm and prepares it for the next day.

4.5 Display Dimmer Control

To adjust the brightness of the LED display, repeatedly press the **SNOOZE/DIMMER** bar (when the alarm is not sounding). This will cycle through different brightness levels to suit your preference.

TIMEX®

Digital Alarm Clock
with Battery Backup



Dimmer
Control



Large
Display

Image: The Timex T121B Digital Alarm Clock illustrating its dimmer control and large display features.

4.6 Alarm Sound Adjustment

The alarm features a graduated wake-up sound. It starts softly and gradually increases in volume to ensure you wake up. There is also a switch to select between soft or loud alarm buzzer settings, typically located on the side or back of the unit.



Loud
Alarm



Wake to Choice of Soft or Loud Alarm Buzzer

Image: The Timex T121B Digital Alarm Clock positioned on a nightstand next to a sleeping person, emphasizing its loud alarm capability.

5. MAINTENANCE

5.1 Cleaning

To clean the alarm clock, gently wipe the exterior surfaces with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid spraying liquids directly onto the unit.

5.2 Battery Replacement

If the "BATT LOW" indicator appears on the display, it is time to replace the AAA backup batteries. Follow the instructions in Section 3.2 to replace them. Ensure the clock remains plugged into AC power during battery replacement to avoid losing time and alarm settings.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|---|---|
| Clock display is blank. | No AC power. | Ensure the power adapter is securely plugged into both the clock and a working wall outlet. Check the outlet with another device. |
| Alarm does not sound. | Alarm not set or deactivated. | Verify the alarm indicator light is on. Re-set the alarm time following Section 4.2. |
| Time/Alarm settings lost after power outage. | Backup batteries are dead or not installed. | Install or replace two fresh AAA batteries as per Section 3.2. |
| Display is too bright/dim. | Dimmer setting needs adjustment. | Press the SNOOZE/DIMMER bar repeatedly to cycle through brightness levels (Section 4.5). |

7. SPECIFICATIONS

Brand: Timex

Model Number: T121B

Display Type: Digital LED (0.7-inch Red Display)

Color: Black

Power Source: Corded Electric (120V Universal Power Adapter)

Battery Backup: Requires 2 x AAA batteries (not included)

Product Dimensions: 5.52"W x 2.36"H

Item Weight: 6.7 ounces

Features: 24-hour Set and Forget Alarm, Auto-Repeat, Auto-Shutoff, Graduated Wake-up Alarm Sound, Snooze Function, Display Dimmer Control, PM Indicator, Alarm Set Indicator, Low Battery Warning.

8. WARRANTY AND SUPPORT

This Timex T121B Digital Alarm Clock comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and claims, please refer to the warranty information provided with your purchase or contact Timex customer support.

For additional support, you may refer to the official User Manual PDF:[Timex T121B User Manual \(PDF\)](#).

Your browser does not support the video tag.

Video: An official product video showcasing the features and design of the Timex T121B Digital Alarm Clock.

© 2023 Timex. All rights reserved.