

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Timex](#) /

› [Timex T121U Alarm Clock User Manual](#)

Timex T121U

Timex T121U Alarm Clock User Manual

Model: T121U | Brand: Timex

1. INTRODUCTION

Thank you for purchasing the Timex T121U Alarm Clock. This compact and user-friendly digital alarm clock features a clear 0.7-inch red LED display, an alarm function, and operates on battery power for convenience. This manual provides comprehensive instructions to help you set up, operate, and maintain your new alarm clock.

2. IMPORTANT SAFETY INFORMATION

- **Indoor Use Only:** This product is designed for indoor use. Do not expose to rain or moisture.
- **Battery Safety:** Use only the specified battery type (1 AA battery, not included). Ensure correct polarity when inserting batteries. Remove batteries if the unit will not be used for an extended period. Do not mix old and new batteries or different types of batteries.
- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol sprays.
- **Placement:** Place the clock on a stable, flat surface. Avoid placing near heat sources, direct sunlight, or in areas with excessive dust or vibration.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

- Timex T121U Alarm Clock with 0.7" Red Display (Purple)

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Timex T121U Alarm Clock.



Figure 4.1: Front and Top View of the Timex T121U Alarm Clock. Note the red digital display and the buttons for Time, Hour, Min, ALM, Set/Reset, and Snooze located on the top panel.



Large Display



Sure Alarm
Battery Backup



Loud
Alarm

Figure 4.2: Back View of the Timex T121U Alarm Clock (black variant shown for illustration). This view highlights the battery compartment and the power input port.

Controls and Features:

- **TIME Button:** Used to enter time setting mode.
- **HOUR Button:** Adjusts the hour during time or alarm setting.
- **MIN Button:** Adjusts the minute during time or alarm setting.
- **ALM Button:** Used to enter alarm setting mode.
- **SET/RESET Button:** Confirms settings or resets functions.
- **SNOOZE Button:** Temporarily silences the alarm for a short period.
- **0.7-inch Red LED Display:** Shows time, alarm status, and other indicators.
- **Battery Compartment:** Located on the back for 1 AA battery (for backup power).

5. INITIAL SETUP

5.1 Powering the Unit

1. Insert 1 AA battery (not included) into the battery compartment on the back of the clock. Ensure correct polarity (+ and -). This battery provides backup power in case of a power outage.
2. Connect the AC power adapter (if included, or use a standard USB power adapter if the clock has a USB power input) to the DC IN port on the back of the clock and then plug it into a standard wall outlet. The display will light up.

5.2 Setting the Time

1. Press and hold the **TIME** button until the hour digits begin to flash.
2. Press the **HOUR** button repeatedly to adjust the hour. Pay attention to the PM indicator if setting a 12-hour format.
3. Press the **MIN** button repeatedly to adjust the minutes.
4. Once the desired time is set, press the **SET/RESET** button to confirm and exit time setting mode.

6. OPERATING INSTRUCTIONS

6.1 Setting the Alarm

1. Press and hold the **ALM** button until the alarm hour digits begin to flash.
2. Press the **HOUR** button repeatedly to adjust the alarm hour.
3. Press the **MIN** button repeatedly to adjust the alarm minutes.
4. Once the desired alarm time is set, press the **SET/RESET** button to confirm and exit alarm setting mode. The alarm indicator light (usually an icon or 'ALM') will illuminate on the display, indicating the alarm is active.

6.2 Activating/Deactivating the Alarm

- To activate the alarm, ensure the alarm indicator light is on. If it's off, press the **ALM** button once briefly to toggle it on.
- To deactivate the alarm, press the **ALM** button once briefly to toggle the alarm indicator light off.

6.3 Snooze Function

When the alarm sounds, press the large **SNOOZE** button located on the top of the clock. The alarm will temporarily

stop and sound again after a few minutes (typically 9-10 minutes). You can repeat this function multiple times.

6.4 Stopping the Alarm

To stop the alarm completely after it sounds (without snoozing), press the **SET/RESET** button. The alarm will reset for the next day at the set time, provided the alarm function remains active.

7. CARE AND MAINTENANCE

- Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- Battery Replacement:** If the display dims or the backup function fails during a power outage, replace the AA battery in the compartment on the back.
- Storage:** If storing the clock for an extended period, remove the battery to prevent leakage.

8. TROUBLESHOOTING

If you experience issues with your alarm clock, please refer to the following table for common problems and solutions.

Problem	Possible Cause / Solution
Clock display is blank or dim.	<ul style="list-style-type: none">Ensure the AC power adapter is securely plugged into the clock and the wall outlet.Check if the power outlet is functional.If using battery backup, the battery might be drained. Replace the AA battery.
Alarm does not sound.	<ul style="list-style-type: none">Verify that the alarm function is activated (alarm indicator light is on).Ensure the alarm time is set correctly (AM/PM).Check if the volume setting (if applicable) is not set to minimum.
Time or alarm cannot be set.	<ul style="list-style-type: none">Ensure you are pressing and holding the correct button (TIME or ALM) until digits flash.Press the SET/RESET button to confirm changes.
Display segments are faded or missing.	<ul style="list-style-type: none">This could indicate a low battery. Replace the AA battery.If the issue persists after replacing the battery and checking power, contact customer support.

9. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	T121U
Brand	Timex
Display Type	Digital LED
Display Color	Red
Display Size	0.7 inches
Color (Product)	Purple
Power Source	Electrical (with 1 AA battery for backup)
Product Dimensions	5.52"W x 2.36"H
Item Weight	9.4 ounces
Alarm Function	Yes
Snooze Function	Yes

10. WARRANTY AND SUPPORT

Timex products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Timex website. Keep your purchase receipt as proof of purchase.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Timex customer service through their official website or the contact information provided on your product packaging.

Online Support: www.timex.com

© 2023 Timex. All rights reserved.

Related Documents - T121U

	<p><u>Timex T231Y Large Display AM/FM Clock Radio User Manual</u></p> <p>User manual for the Timex T231Y Large Display AM/FM Clock Radio, detailing setup, alarm functions, radio operation, aux-in audio, sleep mode, dimmer, battery care, safety precautions, troubleshooting, and warranty information.</p>
	<p><u>Timex T235Y Jumbo Display AM/FM Clock Radio User Manual</u></p> <p>User manual for the Timex T235Y Jumbo Display AM/FM Clock Radio, detailing setup, alarm functions, radio operation, sleep mode, dimmer settings, battery care, safety instructions, and troubleshooting.</p>
	<p><u>TIMEX T108 Cordless Alarm Clock with Jumbo Display User Manual and Instructions</u></p> <p>Comprehensive user manual for the TIMEX T108 Cordless Alarm Clock with Jumbo Display, detailing setup, time, date, and alarm settings, maintenance, safety guidelines, and regulatory information.</p>
	<p><u>Timex T2312 AM/FM Dual Alarm Clock Radio User Manual</u></p> <p>User manual for the Timex T2312 AM/FM Dual Alarm Clock Radio with battery backup. Includes setup, operation, alarm settings, radio functions, and troubleshooting.</p>
	<p><u>Timex AM/FM Clock Radio with Digital Tuning Model T231 Operating Instructions</u></p> <p>This document provides operating instructions for the Timex AM/FM Clock Radio with Digital Tuning, Model T231. It covers setting the time, setting alarms, radio operation, preset station memory, and care and maintenance.</p>
	<p><u>Timex TW500 Dual Alarm FM Clock Radio with Wireless Charging - User Manual</u></p> <p>Comprehensive user manual for the Timex TW500 Dual Alarm FM Clock Radio, detailing setup, features like wireless and USB charging, FM radio, alarm functions, troubleshooting, and safety instructions.</p>