

Lemax 45003

Lemax Spooky Town Witch's Lair with Adaptor

MODEL: 45003

Introduction

Thank you for purchasing the Lemax Spooky Town Witch's Lair with Adaptor. This animated and illuminated collectible is designed to enhance your Halloween village display. This manual provides essential information for the safe setup, operation, and maintenance of your new decoration.

The Witch's Lair is part of the renowned Lemax Spooky Town Series, known for its intricate details and engaging features. Please read these instructions carefully before use to ensure proper function and longevity of your product.

Safety Information

- **Indoor Use Only:** This product is intended for indoor decorative use only. Do not expose to water or moisture.
- **Electrical Safety:** Always use the provided power adaptor. Ensure the power outlet matches the adaptor's voltage requirements. Disconnect power before cleaning or when not in use.
- **Placement:** Place the unit on a stable, flat surface to prevent tipping. Keep away from heat sources, open flames, and direct sunlight.
- **Not a Toy:** This product is a decorative item and not intended for children. Keep out of reach of small children and pets.
- **Ventilation:** Do not cover the unit or block any ventilation openings.

Package Contents

Please verify that all components are present in your package:

- 1 x Witch's Lair Animated Building
- 1 x Power Adaptor

Setup

1. **Unpacking:** Carefully remove the Witch's Lair and all components from the packaging. Retain packaging for future storage.

2. **Placement:** Select a flat, stable, and dry surface for your Witch's Lair. Ensure there is enough space around the unit for its animated features to operate freely.
3. **Power Connection:** Locate the power input jack on the back or base of the Witch's Lair. Insert the small plug from the power adaptor into this jack.
4. **Power On:** Plug the power adaptor into a standard electrical outlet. The unit should illuminate and begin its animated sequence.



Image: The Lemax Spooky Town Witch's Lair (Model 45003) with its detailed exterior and animated features. This image shows the overall design of the collectible building.

Operating Instructions

The Witch's Lair is designed for continuous operation once connected to power. It features:

- **Illumination:** Internal lights illuminate the building, creating a spooky glow.
- **Animated Features:** The unit includes animated elements such as a witch figure that appears to fly around the house and another witch rising through a trap door on the roof.
- **Sound Effects:** The Witch's Lair may include integrated sound effects to enhance the spooky atmosphere.

To operate, simply ensure the power adaptor is securely connected to both the unit and a working electrical outlet. There are no additional controls for animation or sound volume on the unit itself.

Maintenance

- **Cleaning:** To clean the Witch's Lair, disconnect it from the power source. Use a soft, dry cloth to gently wipe away

dust. Do not use liquid cleaners, abrasives, or solvents, as these may damage the finish or electronic components.

- **Storage:** When not in use, disconnect the power adaptor and store the unit in its original packaging or a suitable protective container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handling:** Handle the unit with care to avoid damaging delicate parts, especially the animated figures.

Troubleshooting

If your Witch's Lair is not functioning as expected, please refer to the following common issues and solutions:

- **Unit does not light up or animate:**
 - Ensure the power adaptor is securely plugged into both the unit and a working electrical outlet.
 - Check the power outlet by plugging in another device.
 - Verify that the power adaptor is the correct one supplied with the unit.
- **Animations are slow or stop intermittently:**
 - Ensure there are no obstructions preventing the animated figures from moving freely.
 - Check for any debris or dust accumulation around moving parts.
 - Confirm the unit is on a level surface.
- **No sound or distorted sound:**
 - Ensure the unit is receiving adequate power.
 - If the unit has a volume control (not typical for this model), ensure it is adjusted correctly.

If these steps do not resolve the issue, please contact customer support.

Specifications

Model Number	45003
Brand	Lemax
Product Type	Animated and Illuminated Collectible Building
Power Source	Power Adaptor (included)
Package Dimensions	11.2 x 9.7 x 8.1 inches
Item Weight	4.1 pounds
ASIN	B00EBX195C

Warranty Information

This product is covered by a manufacturer's limited warranty. Please refer to the original product packaging or contact Lemax customer support for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or inquiries regarding your Lemax Spooky Town Witch's Lair, please visit the official Lemax website or refer to the contact information provided on your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question