

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Remington](#) /

› [Remington Pro-Air D5210 Ionic Hair Dryer User Manual](#)

Remington D5210

Remington Pro-Air D5210 Ionic Hair Dryer User Manual

Model: D5210

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Keep away from water. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
 - Always unplug this appliance immediately after using.
 - Do not use while sleeping or unconscious.
 - Do not use if the cord or plug is damaged.
 - Allow the hair dryer to cool down before storing.
 - Keep out of reach of children.

PRODUCT OVERVIEW

The Remington Pro-Air D5210 is a powerful and lightweight ionic hair dryer designed for fast and efficient drying with a smooth, frizz-free finish. It features ceramic and ionic technology for even heat distribution.



Image: The Remington Pro-Air D5210 hair dryer, a sleek black device with a concentrator nozzle attached.

Key Features:

- **Powerful 2200W Motor:** For fast drying performance.
- **Ceramic and Ionic Technology:** Helps to reduce frizz and create a smooth, shiny finish.
- **Ergonomic Design:** Lightweight and comfortable to handle.
- **Multiple Heat and Speed Settings:** 3 heat settings and 2 speed settings for versatile styling.
- **Cool Shot Function:** To set your style.
- **Removable Rear Grille:** For easy cleaning and maintenance.
- **Attachments:** Includes a concentrator nozzle.

SETUP

Before first use, ensure the hair dryer is clean and free from any packaging materials.

Attaching Accessories:

1. Ensure the hair dryer is unplugged and cool.
2. To attach the concentrator nozzle, align it with the front of the hair dryer and push it firmly into place.
3. To remove, gently pull the nozzle off.



Image: Close-up of the concentrator nozzle, showing its shape and how it attaches to the hair dryer.

OPERATING INSTRUCTIONS

Plug the hair dryer into a suitable power outlet. The hair dryer features controls on the handle for power, speed, and heat settings.



Image: Close-up of the hair dryer's handle, showing the three control buttons for heat, speed, and cool shot.

Power On/Off and Speed Settings:

- Locate the speed switch on the handle.
- Slide the switch to the '0' position to turn the appliance off.
- Slide to 'I' for low speed or 'II' for high speed.

Heat Settings:

- Locate the heat switch on the handle.
- Slide the switch to select your desired heat level:

- **Low Heat:** For gentle drying and styling.
- **Medium Heat:** For normal drying.
- **High Heat:** For fast drying of thick or wet hair.

Cool Shot Function:

- Press and hold the cool shot button (often marked with a snowflake icon) to deliver a burst of cool air.
- This helps to set your hairstyle and add shine.

Drying Tips:

- For best results, towel-dry hair to remove excess water before using the hair dryer.
- Use the concentrator nozzle for precise styling and smoothing.
- Finish with the cool shot to lock in your style.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your hair dryer.

Cleaning the Rear Grille:

1. Ensure the appliance is switched off and unplugged from the power outlet.
2. Allow the hair dryer to cool completely.
3. Gently twist or pull off the removable rear grille (refer to product diagram if available).
4. Use a soft brush or vacuum cleaner to remove any dust, lint, or hair buildup from the grille and the air intake filter.
5. Replace the rear grille by aligning it and twisting or pushing it back into place until it clicks securely.

General Cleaning:

- Wipe the exterior of the hair dryer with a damp cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the appliance in water or any other liquid.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------------------|---|--|
| Hair dryer does not turn on. | Not plugged in; power outlet not working; internal fault. | Check power connection; try a different outlet; contact customer support. |
| Airflow is weak or inconsistent. | Rear grille is blocked with lint/hair. | Clean the removable rear grille as described in the Maintenance section. |
| Hair dryer overheats and shuts off. | Air intake/outlet blocked; prolonged use on high heat. | Unplug and allow to cool for 10-15 minutes. Clean the rear grille. Ensure proper ventilation during use. |
| Unusual noise or smell. | Internal component issue. | Immediately unplug the appliance. Do not use. Contact customer support. |

SPECIFICATIONS

- **Model Number:** D5210
- **Power:** 2200 Watts
- **Speed Settings:** 2
- **Heat Settings:** 3
- **Special Feature:** Ionic, Ceramic, Cool Shot
- **Included Components:** Concentrator Nozzle
- **Dimensions (L x W x H):** 28 x 12 x 24 cm (approx.)
- **Weight:** 560 grams (approx.)
- **Power Source:** Corded Electric
- **Color:** Black

PRODUCT VIDEO



Video: A demonstration of the Remington Pro-Air D5210 hair dryer, showcasing its features and operation. (Note: Video source is a placeholder and may not play.)

WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please refer to the warranty card included with your product or visit the official Remington website. Keep your proof of purchase for any warranty claims.

Official Remington Website: www.remingtonproducts.com