

[manuals.plus](#) /› [Panasonic](#) /› [Panasonic Portable Bidet Handy Toilette DL-P300-A Instruction Manual](#)

## Panasonic DL-P300-A

# Panasonic Portable Bidet Handy Toilette DL-P300-A Instruction Manual

Model: DL-P300-A

## 1. PRODUCT OVERVIEW

The Panasonic Portable Bidet Handy Toilette DL-P300-A is designed for personal hygiene, offering convenience and cleanliness while traveling or for everyday use. This compact device provides two cleaning speeds for a customized experience.

### Key Features:

- Two adjustable cleaning speeds (HI/LO).
- Adapter for connecting to larger volume containers (e.g., standard plastic bottles).
- Battery-operated for portability (requires 2 AAA batteries).
- Compact and lightweight design.





Image 1.1: The Panasonic Portable Bidet DL-P300-A main unit, showcasing its compact design and control buttons.

## 2. PACKAGE CONTENTS

Verify that all components are present in the package:

- Panasonic Portable Bidet Main Unit
- Nozzle
- Bottle Adapter
- Carrying Pouch (may vary by region)
- 2 AAA Batteries (may be included or sold separately)

### 3. SETUP

#### 3.1 Battery Installation

1. Locate the battery compartment cover on the bottom of the main unit.
2. Twist or slide the cover to open it.
3. Insert two (2) AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

#### 3.2 Attaching the Nozzle

1. Gently pull out the nozzle from its stored position within the main unit.
2. Ensure the nozzle is fully extended and securely attached.



Image 3.1: Illustration of how to attach or extend the bidet nozzle for use.

#### 3.3 Filling the Water Reservoir / Attaching a Bottle

The bidet can be used with its internal reservoir or by attaching an external water bottle.

- **Internal Reservoir:** Open the water inlet cap and fill the internal reservoir with clean, lukewarm water. Close the cap securely.
- **External Bottle:** For larger water volume, attach the provided adapter to a standard plastic water bottle. Then, connect the main bidet unit to the adapter. Ensure a tight seal to prevent leaks.



国内・国外ほとんどのペットボトルを  
取り付け可能。



Image 3.2: The portable bidet unit connected to an external water bottle using the provided adapter.

#### 4. OPERATING INSTRUCTIONS

1. Ensure the bidet is properly set up with water and batteries.
2. Position the nozzle as desired for cleaning.

3. Press the "HI" button for a strong spray or the "LO" button for a gentle spray.
4. Release the button to stop the water flow.
5. After use, retract the nozzle and empty any remaining water from the reservoir or bottle.

*Note: For optimal performance and hygiene, use clean, lukewarm water. Avoid using hot water above 40°C (104°F) or cold water below 5°C (41°F).*

## 5. MAINTENANCE

### 5.1 Cleaning the Unit

- After each use, rinse the nozzle and the internal reservoir with clean water.
- Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the unit is dry before storing.

### 5.2 Storage

- Store the bidet in a cool, dry place, away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the batteries to prevent leakage.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water spray or weak spray	<ul style="list-style-type: none"> <li>• Low battery power.</li> <li>• Insufficient water in reservoir/bottle.</li> <li>• Nozzle or water intake clogged.</li> <li>• Loose connection to external bottle.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries with new AAA batteries.</li> <li>• Refill the reservoir or external bottle.</li> <li>• Clean the nozzle and check the water intake screen for debris.</li> <li>• Ensure the bottle adapter is securely attached.</li> </ul>
Device does not turn on	<ul style="list-style-type: none"> <li>• Batteries incorrectly installed or depleted.</li> <li>• Battery contacts are dirty.</li> </ul>	<ul style="list-style-type: none"> <li>• Check battery polarity and replace if necessary.</li> <li>• Clean battery contacts with a dry cloth or cotton swab.</li> </ul>
Water leakage	<ul style="list-style-type: none"> <li>• Reservoir cap not closed properly.</li> <li>• External bottle not securely attached to adapter.</li> <li>• Damaged seals.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the water inlet cap is tightly sealed.</li> <li>• Verify the external bottle is screwed on correctly and tightly.</li> <li>• If seals are damaged, contact customer support.</li> </ul>

## 7. SPECIFICATIONS

Feature	Detail
Model Number	DL-P300-A
Brand	Panasonic

Feature	Detail
Power Source	2 x AAA Batteries
Item Weight	Approximately 8.2 ounces (230g)
Color	Blue
Spray Modes	HI (High), LO (Low)
Country of Origin	Japan
First Available Date	November 1, 2013

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Panasonic website. Keep your proof of purchase for warranty claims.

**Contact Panasonic:** <https://na.panasonic.com/us/support>

© 2024 Panasonic Corporation. All rights reserved.