

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for Power ACOUSTIK PD931NB

Redi-Remote RTPD931NB

Redi-Remote Replacement Remote Control User Manual

Model: RTPD931NB for Power ACOUSTIK PD931NB

Your reliable replacement for seamless control.

1. INTRODUCTION

This manual provides essential information for the proper use and care of your Redi-Remote Replacement Remote Control. This remote is a custom-built replacement specifically designed to be compatible with Power ACOUSTIK PD931NB units. It is not an original Power ACOUSTIK remote but offers full functionality for the specified model.

The Redi-Remote is designed for straightforward operation, requiring no complex programming. Simply insert the batteries, and it is ready for use with your Power ACOUSTIK PD931NB unit.

2. PRODUCT OVERVIEW



This image displays the full view of the Redi-Remote replacement remote control. The upper section features power, volume, channel, and numeric buttons, while the lower section, accessible by sliding down the cover, contains navigation, playback, and specific function buttons for the Power ACOUSTIK PD931NB unit.

The remote control features a two-part design. The upper section provides primary controls, while the lower section, covered by a sliding panel, reveals additional functions for advanced control.

3. SETUP AND BATTERY INSTALLATION

Your Redi-Remote requires 4 AAA batteries for operation. These batteries are included with your purchase.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

3.2 Initial Use

Once batteries are installed, the remote is ready for immediate use. No programming or pairing is required. Simply point the remote at your Power ACOUSTIK PD931NB unit and begin operating.

4. OPERATING INSTRUCTIONS

The remote control is divided into an upper primary control section and a lower advanced control section, accessible by sliding down the cover.

4.1 Upper Section Controls

- **PWR (Power):** Turns the unit on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Changes the display mode or shows on-screen information.
- **VOL +/- (Volume):** Increases or decreases the audio volume.
- **MUTE:** Mutes or unmutes the audio output.
- **CH +/- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the main menu of the unit.
- **RECALL:** Recalls the previously viewed channel or function.
- **Numeric Keypad (0-9, 100):** Directly enters channel numbers or other numerical inputs.
- **ENT (Enter):** Confirms a selection or entered number.

4.2 Lower Section Controls (Slide Down)

To access these buttons, gently slide down the lower cover of the remote control.

- **OP/CL (Open/Close):** Opens or closes the disc tray.
- **NAVI/P (Navigation/Program):** Used for navigation within menus or programming functions.
- **ANGLE:** Changes the viewing angle for compatible content.
- **EQ/LOUD (Equalizer/Loudness):** Adjusts audio equalizer settings or activates loudness enhancement.
- **#/AUDIO:** Switches audio tracks or languages.
- ***/MENU:** Accesses a secondary menu or special functions.

- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms a selection.
- **SUB T/RDM (Subtitle/Random):** Controls subtitles or activates random playback.
- **Play/Pause (▶ |||):** Starts or pauses playback.
- **Stop (■):** Stops playback.
- **Rewind (◀):** Rewinds playback.
- **Fast Forward (▶▶):** Fast forwards playback.
- **Previous (◀):** Skips to the previous track/chapter.
- **Next (▶):** Skips to the next track/chapter.
- **TITLE:** Accesses the disc title menu.
- **AST/PBC (Auto Search/Program Playback Control):** Initiates auto search or controls program playback.
- **A-B/RPT (A-B Repeat):** Repeats a specific section of audio/video.
- **END CALL:** Ends a call (if unit supports phone functions).
- **ANSWER CALL:** Answers an incoming call (if unit supports phone functions).
- **DISP/ST (Display/Stereo):** Toggles display information or stereo mode.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace all 4 AAA batteries when the remote's response becomes sluggish or stops working. Always replace with new, high-quality batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the remote or subjecting it to strong impacts, as this can damage internal components.

6. TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote and the Power ACOUSTIK unit's infrared sensor.
 - Make sure you are within the effective operating range of the unit.
- **Buttons not working:**
 - Clean the remote's surface, especially around the buttons, to remove any dirt or residue that might be preventing proper contact.
 - Ensure the remote is pointed directly at the unit.
- **Remote works intermittently:**

- This often indicates low battery power. Replace the batteries.
- Ensure a clear line of sight to the unit.

If the issue persists after trying these steps, please refer to the support information provided by the seller or manufacturer.

7. SPECIFICATIONS

Feature	Detail
Model Number	RTPD931NB
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Compatible Devices	Power ACOUSTIK PD931NB Car Stereo
Special Feature	No Programming Required

8. WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product data. For any warranty-related inquiries or technical support, please contact the seller or the manufacturer, Redi-Remote, directly through their official channels. Please retain your proof of purchase for any support claims.

© 2024 Redi-Remote. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00EJ1317K>

More documents and user manuals: <https://manuals.plus/>