

[Manuals.plus](#) /

› [Madison Park](#) /

› Madison Park Hayden Slipper Accent Chair Instruction Manual

Madison Park FPF18-0052

Madison Park Hayden Slipper Accent Chair Instruction Manual

Model: FPF18-0052

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before assembly. For your safety and ease, assembly by two or more adults is recommended. Keep these instructions for future reference. Do not discard any packaging content until assembly is complete to avoid accidentally discarding small parts or hardware. Ensure all parts and hardware are removed from the box before starting.

PRODUCT OVERVIEW

The Madison Park Hayden Slipper Accent Chair offers a blend of comfort and style. It features an armless design and an elegant back, upholstered in a vibrant fabric. The chair is supported by solid wood legs with a rich espresso finish and accented with silver nail head trim. High-density foam provides comfortable seating, making this chair a suitable addition to living rooms or bedrooms.



Image 1: Front view of the Madison Park Hayden Slipper Accent Chair, showcasing its multicolor fabric and nailhead trim.

Key Features:

- **Material:** 100% Polyester fabric with a solid wood frame (Select Hardwoods and Plywood).
- **Legs:** Birch legs with an Espresso Finish.
- **Cushion:** High-density foam for superior support. Initially firm, it will soften over time.
- **Design:** Armless slipper chair with an elegant shaped back.
- **Accents:** Individually placed silver nail heads around the bottom edge.
- **Dimensions:** 26.5" W x 30.75" D x 34" H.
- **Weight Capacity:** Maximum 250 lbs.



Image 2: The accent chair positioned in a living room with a view of the ocean, demonstrating its aesthetic appeal in a home setting.



Image 3: Diagram showing the key dimensions of the chair: 26.5 inches width, 30.75 inches depth, and 34 inches height.

ASSEMBLY INSTRUCTIONS

Please read all instructions carefully before beginning assembly. Ensure all parts are present and accounted for. Assembly by two or more adults is recommended for safety and ease.

Parts List:

Item	Description	Quantity
P1	FRONT LEGS	2
P2	BACK LEG	2
P3	PLASTIC WASHER	2
P4	BACK FRAME	1
P5	SEAT FRAME	1

Hardware List:

Item	Description	Quantity
H1	Bolts 5/16" x 1.5"	5
H2	Bolts 5/16" x 2.5"	4
H3	Lock Washers 5/16"	9
H4	Flat Washers 5/16"	9
H5	Allen Wrench	1



Image 4: Page 1 of the assembly instructions, detailing the parts and hardware required for assembly.

Assembly Procedure:

1. **Step 1:** Assemble the chair on a flat and soft surface, such as a carpet or cloth, to prevent scratching. To locate the hardware, turn the chair upside down. You will find the components beneath the fabric cover, secured by a zipper underneath the seat cushion. The legs and hardware box are located beneath this fabric cover.
2. **Step 2:** Attach the back frame (P4) to the seat frame (P5) using five H1 bolts, five H3 lock washers, and five H4 flat washers. Then, attach the front legs (P1) to the seat frame (P5) using four H2 bolts, four H3 lock washers, and four H4 flat washers. Use the H5 Allen wrench to tighten all connections.
3. **Step 3:** Attach the back legs (P2) into the holes on the bottom of the back frame (P4) through the plastic washer (P3). Ensure the back leg is tightened in the correct position.
4. **Step 4:** Turn the chair over and place it upright on a level surface. Assembly is complete.

Additional Note About Safety: Bolts may loosen during normal everyday use. They should be periodically inspected and re-tightened to prevent damage or injury. Always check to ensure that all hardware is kept tightened.



Image 5: Page 2 of the assembly instructions, illustrating the steps for attaching the back frame, front legs, and back legs.

CARE AND MAINTENANCE

- **Cleaning:** Spot clean only. Use a damp cloth and mild detergent for spills, then blot dry.
- **General Care:** Periodically check and re-tighten all bolts to ensure stability and prevent loosening from normal use.
- **Protection:** Avoid direct sunlight to prevent fading of the fabric. Keep away from excessive moisture.

SPECIFICATIONS

Feature	Detail
Brand	Madison Park
Model Name	Hayden
Model Number	FPF18-0052
Product Dimensions	30.75"D x 26.5"W x 34"H
Item Weight	31.3 pounds
Maximum Weight Recommendation	250 Pounds
Material Details	100% Polyester Fabric, Select Hardwoods and Plywood Frame, Birch Legs with Espresso Finish, High Density Foam Cushion
Color	Multicolor
Back Style	Tight Back
Special Features	Solid Wood Frame, Individually Placed Silver Nail Heads, Attached Cushion, Leg Assembly Required
UPC	675716464059
ASIN	B00EKCTZN2

TROUBLESHOOTING

- **Wobbling Chair:** Ensure all leg bolts are securely tightened. The front legs are equipped with adjustable levelers; adjust them as needed to stabilize the chair on uneven surfaces.
- **Missing Parts/Hardware:** Carefully check all packaging materials and the zippered compartment located under the seat cushion. If parts are still missing, please contact customer support.
- **Difficulty Assembling:** Review the assembly steps and diagrams thoroughly. Confirm that you are using the correct parts for each step. If assembly issues persist, consider seeking assistance from another adult.

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or to order replacement parts, please contact Madison Park customer service. Refer to your purchase receipt or the Madison Park official website for current contact details.

Please have your model number (FPF18-0052) and purchase date available when contacting support to expedite assistance.