

[Manuals.plus](#) /

› [Pyle](#) /

› Pyle Wireless Active PA Speaker System PSUFM1035A User Manual

Pyle PSUFM1035A

Pyle Wireless Active PA Speaker System PSUFM1035A User Manual

Model: PSUFM1035A

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Pyle Wireless Active PA Speaker System, model PSUFM1035A. Please read this manual thoroughly before using the product to ensure proper function and to maximize your listening experience.

Flashing DJ Lights

DYNAMIC DESIGN AND LIGHTING



Image: Front view of the Pyle Wireless Active PA Speaker System PSUFM1035A, showcasing its design and speaker configuration.

KEY FEATURES

- **1000 Watt Power Output:** Equipped with a 10-inch subwoofer and 3-inch tweeter for full-range stereo sound and powerful bass.
- **Bluetooth Connectivity:** Seamless wireless audio streaming from compatible devices such as smartphones, tablets, and PCs.
- **Multiple Inputs:** Includes USB flash drive and SD card reader (MP3 player function), 3.5mm AUX input, RCA, and two 1/4-inch microphone/guitar inputs.
- **FM Radio:** Built-in FM radio with a digital LCD channel display.
- **Flashing DJ Lights:** Multi-color flashing disco LED lights with an on/off switch for visual effects.
- **Top Control Panel:** Provides controls for guitar volume, bass, treble, main volume, echo, microphone volume, mode selection, and EQ switch.
- **Portability:** Features a 35mm stand mount for versatile placement.

Easy Controls & Connectivity



Bluetooth



SD Card Reader



Mic In



AUX In



FM Radio



USB



Image: Detailed view of the speaker's 10-inch subwoofer and 3-inch tweeter, highlighting the sound components.

SETUP

1. **Unpacking:** Carefully remove the speaker system and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the speaker on a stable, flat surface. Ensure adequate ventilation around the unit. The speaker can also be mounted on a standard 35mm speaker stand (not included).
3. **Power Connection:** Connect the power cord to the AC IN port on the rear of the speaker, then plug it into a standard wall outlet (110V/220V, selectable).
4. **Initial Power On:** Flip the POWER switch on the rear panel to the 'ON' position. The unit will power on, and the display will illuminate.

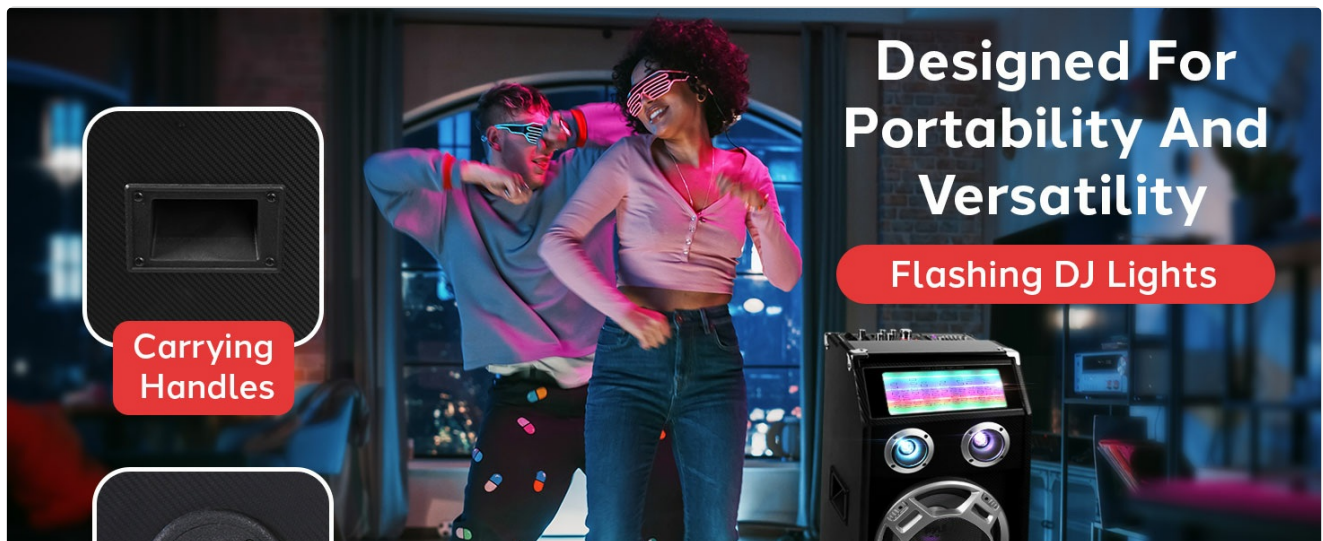


Image: Rear panel of the speaker, illustrating the AC power input and voltage selection switch.

OPERATING INSTRUCTIONS

Bluetooth Connectivity

1. Ensure the speaker is powered on.
2. Press the 'MODE' button on the top control panel or remote control until "BLUETOOTH" appears on the display.
3. Activate Bluetooth on your external device (smartphone, tablet, etc.) and search for available devices.

4. Select "PYLE SPEAKER" from the list of devices.
5. Once paired, the speaker will emit a confirmation tone, and you can begin streaming audio.



Image: Visual representation of the speaker's multiple input options, including Bluetooth, USB, SD, AUX, and Microphone.

USB/SD Card Playback

1. Insert a USB flash drive or SD card into the corresponding slot on the top control panel.
2. The speaker will automatically switch to USB/SD mode and begin playing compatible audio files (MP3). If not, press the 'MODE' button to select USB/SD.
3. Use the playback controls (Play/Pause, Next, Previous) on the panel or remote to manage your music.

FM Radio Operation

1. Press the 'MODE' button until "FM" appears on the display.
2. Press the Play/Pause button to initiate an automatic scan for FM stations. The speaker will save detected stations.
3. Use the Next/Previous buttons to navigate through the saved stations.

AUX Input

1. Connect your external audio device (e.g., MP3 player, CD player) to the 3.5mm AUX IN port or the RCA L/R inputs on the rear panel using an appropriate audio cable.
2. Press the 'MODE' button to select "AUX" or "RCA" mode.
3. Adjust the volume on both the speaker and your external device.

Microphone/Guitar Input

1. Plug your microphone or guitar into one of the 1/4-inch MIC/GUITAR inputs on the top control panel.
2. Adjust the 'MIC VOL' knob to control the microphone volume.
3. Use the 'ECHO' knob to add an echo effect to the microphone input.
4. Adjust the 'GUITAR VOL' knob for guitar input.

CONTROLS AND ADJUSTMENTS

The top control panel provides access to various audio adjustments and input selections:

- **MODE Button:** Cycles through input sources (Bluetooth, USB, SD, FM, AUX, RCA).
- **MASTER VOLUME:** Adjusts the overall output volume of the speaker.
- **BASS/TREBLE:** Controls the low and high frequency response of the audio.

- **MIC VOL:** Adjusts the volume of the connected microphone.
- **ECHO:** Controls the echo effect for the microphone input.
- **GUITAR VOL:** Adjusts the volume of the connected guitar.
- **7-Band EQ:** Provides fine-tuning of specific frequency ranges. Use the EQ ON/OFF switch to activate or deactivate.
- **LED DJ Lights:** On/Off switch for the multi-color flashing lights.

Connectivity



Image: Detailed view of the top control panel, showing the 7-band equalizer, volume knobs, and input selection buttons.

Your browser does not support the video tag.

Video: An official product video demonstrating the Pyle Floor-Standing Speaker (PSUFM1035A) in operation, showcasing its features and sound capabilities.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, preferably in its original packaging.
- **Ventilation:** Ensure that the speaker's ventilation openings are not blocked to prevent overheating.
- **Power Cord:** Regularly inspect the power cord for any damage. If damaged, discontinue use and contact customer support.

TROUBLESHOOTING

Problem	Solution
No power	Check if the power cord is securely connected and the power switch is ON. Verify the wall outlet is functioning.
No sound	Ensure the master volume is turned up. Check the volume on your connected audio source. Verify the correct input mode is selected. Check all audio cable connections.
Bluetooth pairing fails	Ensure the speaker is in Bluetooth mode. Make sure your device's Bluetooth is enabled and within range. Try unpairing and re-pairing the device.
USB/SD card not playing	Ensure the USB drive or SD card is inserted correctly. Verify that the audio files are in a compatible format (e.g., MP3). Try a different USB drive or SD card.

Problem	Solution
Remote control not working	Check and replace the batteries in the remote control. Ensure there are no obstructions between the remote and the speaker's IR receiver.



Image: The remote control included with the Pyle speaker system, used for convenient operation.

SPECIFICATIONS

- **Power Output:** 1000 Watts (Peak) / 500 Watts (RMS) at 4 Ohm
- **Speaker Type:** Active PA Speaker System
- **Subwoofer:** 10 inches
- **Tweeter:** 3 inches
- **Connectivity:** Bluetooth, USB, SD, AUX (3.5mm), RCA, 2 x 1/4" Microphone/Guitar
- **FM Radio:** Yes, with Digital LCD Display
- **EQ:** 7-Band Equalizer with ON/OFF Control
- **DJ Lights:** Multi-color Flashing LED Lights with ON/OFF Switch

- **Mounting:** 35mm Stand Mount
- **Dimensions (L x W x H):** 15.8 x 14 x 37.2 inches
- **Weight:** 43.44 Pounds
- **Enclosure Material:** Engineered Wood, Plastic
- **Input Voltage:** 110V/220V (Selectable)
- **Frequency Response:** 20Hz-20kHz
- **Crossover Frequency:** 3.2kHz
- **Woofer Magnet Weight:** 25 Oz

WHAT'S IN THE BOX

- Pyle Wireless Active PA Speaker System (PSUFM1035A)
- Remote Control
- Audio Cable
- Power Cable

WARRANTY AND SUPPORT

This product comes with a 90-day warranty. For technical support, service, or warranty claims, please contact Pyle customer service. Keep your purchase receipt as proof of purchase.

For further assistance, visit the official Pyle website or refer to the contact information provided with your product packaging.