

[Manuals.plus](#) /

› [Rosieres](#) /

› Rosieres RDH32 2-Burner Ceramic Hob - Ceramic Cooktop - Product Dimensions (WxD in cm): 28.6 / 50.6

Rosieres RDH32

Rosieres RDH32 2-Burner Ceramic Hob User Manual

Model: RDH32

1. INTRODUCTION

Thank you for choosing the Rosieres RDH32 2-burner ceramic hob. This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read this manual thoroughly before using the hob and keep it for future reference.



Figure 1: Rosieres RDH32 2-Burner Ceramic Hob. This image displays the sleek black ceramic surface with two circular heating zones and touch controls located at the bottom center.

2. SAFETY INFORMATION

For your safety and to ensure proper operation, always adhere to the following precautions:

- Read all instructions before using the appliance.
- This appliance is intended for domestic use only.
- Do not touch hot surfaces. Use handles or knobs.

- Supervise children closely when the appliance is in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure proper ventilation around the appliance.
- Always disconnect the appliance from the power supply before cleaning or maintenance.
- The hob surface remains hot after use due to residual heat. Exercise caution.
- Do not place metallic objects such as knives, forks, spoons, and lids on the hob surface as they can get hot.
- This appliance is equipped with anti-overheat safety and 6 levels of safety features.

3. PRODUCT FEATURES

The Rosieres RDH32 ceramic hob is designed with user convenience and safety in mind:

- **Sensitive Touch Controls:** Easy and precise control over cooking settings.
- **9 Cooking Positions:** Digital display for accurate power level selection.
- **Anti-Overshoot Safety:** Prevents overheating for enhanced safety.
- **6 Safety Levels:** Comprehensive safety mechanisms integrated.
- **2 Highlight Zones:** Efficient heating elements for quick cooking.
- **Independent Timer:** Activatable on both cooking zones for precise cooking times.
- **Zone Power:** Rear zone 1700W, Front zone 1200W.
- **Residual Heat Indicators:** Visual warning when the hob surface is still hot.

4. INSTALLATION (SETUP)

Proper installation is crucial for the safe and efficient operation of your ceramic hob. It is recommended that installation be performed by a qualified technician.

4.1. Unpacking

Carefully remove the hob from its packaging. Inspect for any damage during transit. Retain packaging materials for potential future transport or service.

4.2. Dimensions and Cut-out

Ensure your countertop has the correct cut-out dimensions for a flush fit. Refer to the diagram below for precise measurements.

- **Product Dimensions (LxP):** 28.6 cm x 50.6 cm
- **Built-in Dimensions (LxPxH):** 27 cm x 49 cm x 4.2 cm

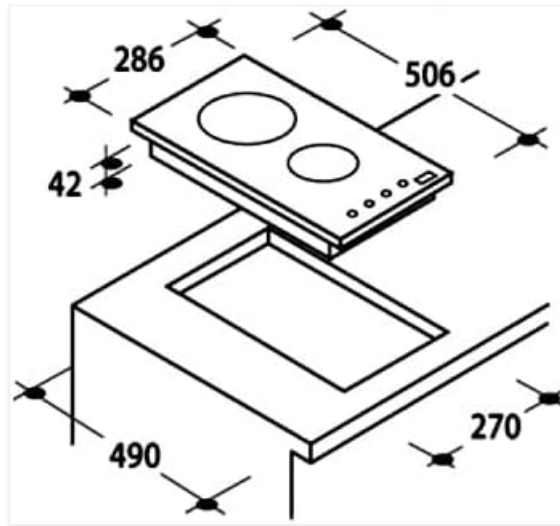


Figure 2: Installation Dimensions. This diagram illustrates the required cut-out dimensions for the countertop (270mm x 490mm) and the overall product dimensions (286mm x 506mm x 42mm height).

4.3. Electrical Connection

The appliance requires a mono 230V + T - 16 A electrical connection. Ensure the electrical supply meets these requirements and that the connection is made by a qualified electrician in accordance with local wiring regulations.

5. OPERATING INSTRUCTIONS

Your Rosieres RDH32 hob features intuitive touch controls for easy operation.

5.1. Turning On/Off

- To turn on the hob, press the **ON/OFF** touch control. The display will illuminate.
- To turn off the hob, press the **ON/OFF** touch control again.

5.2. Selecting a Cooking Zone and Power Level

- After turning on the hob, select the desired cooking zone by touching its corresponding control.
- Use the '+' and '-' touch controls to adjust the power level from 1 to 9. The selected power level will be shown on the digital display.

5.3. Using the Timer

The independent timer can be set for either cooking zone:

1. Select the cooking zone for which you want to set the timer.
2. Press the timer control (if available, otherwise use the general timer function).
3. Use the '+' and '-' controls to set the desired cooking duration.
4. The hob will automatically switch off the selected zone once the timer expires.

5.4. Residual Heat Indicator

After a cooking zone is switched off, a residual heat indicator (usually an 'H' on the display) will appear if the surface is still hot. Do not touch the surface until the indicator disappears.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your ceramic hob and ensure optimal performance.

- Always ensure the hob is cool and disconnected from the power supply before cleaning.
- For light soiling, wipe the ceramic surface with a damp cloth and mild detergent.
- For stubborn stains or burnt-on food, use a specialized ceramic hob cleaner and a scraper designed for ceramic surfaces.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals as they can scratch or damage the surface.
- Clean the control panel with a soft, damp cloth. Avoid excessive moisture.
- Periodically check the electrical cable for any signs of damage.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; power cord not properly connected; circuit breaker tripped.	Check power connection; reset circuit breaker; ensure power outlet is functional.
Cooking zone not heating.	Incorrect power level selected; pan not suitable for ceramic hob; safety cut-out activated.	Increase power level; ensure pan has a flat base and is centered; turn off and on again to reset.
Controls unresponsive.	Surface is wet or dirty; temporary electronic glitch.	Clean and dry the control panel; disconnect power for a few minutes and reconnect.
Display shows 'H'.	Residual heat indicator.	This is normal. The surface is still hot. Do not touch until 'H' disappears.

If the problem persists after attempting these solutions, please contact Rosieres customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Rosieres RDH32 ceramic hob:

Brand	Rosieres
Model Number	RDH32
Product Dimensions (LxWxH)	28.6 x 50.6 x 4.2 cm
Net Weight	3.8 kg
Installation Type	Drop-In
Special Features	Timer, Sensitive Controls, Anti-Overshoot Safety
Hob Type	Ceramic (Vitrocéramique)
Number of Heating Elements	2
Color	Black
Voltage	230 Volts
Total Installed Power	2900 Watts

Front Zone Power/Diameter	1200W / 145mm
Rear Zone Power/Diameter	1700W / 180mm
Surface Material	Ceramic Glass
Components Included	Cooktop unit only

9. WARRANTY AND SUPPORT

Rosieres products are manufactured to high quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Rosieres website.

For technical assistance, spare parts, or service inquiries, please contact Rosieres customer support. Information regarding spare parts availability is not provided in the product details.

You can typically find contact information on the manufacturer's official website or on your purchase receipt.

© 2023 Rosieres. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question