

EGLO 82813A Sendo

EGLO 82813A Sendo LED Dimmable Floor Lamp User Manual

Model: 82813A Sendo

1. INTRODUCTION

Thank you for purchasing the EGLO 82813A Sendo LED Dimmable Floor Lamp. This manual provides essential information for the safe assembly, operation, and maintenance of your new floor lamp. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

- **Electrical Safety:** Always disconnect the power supply before installation, cleaning, or maintenance. Ensure the lamp is plugged into a properly grounded outlet.
- **Bulb Requirements:** This lamp uses one A19 bulb, maximum 100-Watt (not included). Do not exceed the recommended wattage.
- **Indoor Use Only:** This product is UL approved for dry indoor locations. Do not use in wet or damp environments.
- **Assembly:** Assembly is required. Ensure all parts are securely fastened before connecting to power.
- **Handling:** Handle glass components with care to prevent breakage.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Light Fixture (includes base, pole, shade holder, and shade)
- Instruction Manual

Note: One A19 bulb (max 100W) is required and not included in the package.

4. ASSEMBLY INSTRUCTIONS

Please follow these steps carefully for proper assembly. It is recommended to assemble the lamp on a soft, clean surface to prevent scratches.

- 1. Unpack Components:** Carefully remove all parts from the packaging and lay them out.
- 2. Attach Pole to Base:** Screw the lower pole section into the lamp base until secure. Do not overtighten.
- 3. Connect Pole Sections:** If the pole comes in multiple sections, carefully screw them together, ensuring the electrical cord passes freely through.
- 4. Install Shade Holder:** Secure the shade holder to the top of the pole.
- 5. Attach Shade:** Place the crème fabric shade onto the shade holder and secure it according to the design (e.g., with a retaining ring).
- 6. Install Bulb:** Screw one A19 bulb (max 100W, not included) into the lamp socket.



Figure 4.1: Fully assembled EGLO Sendo Floor Lamp.

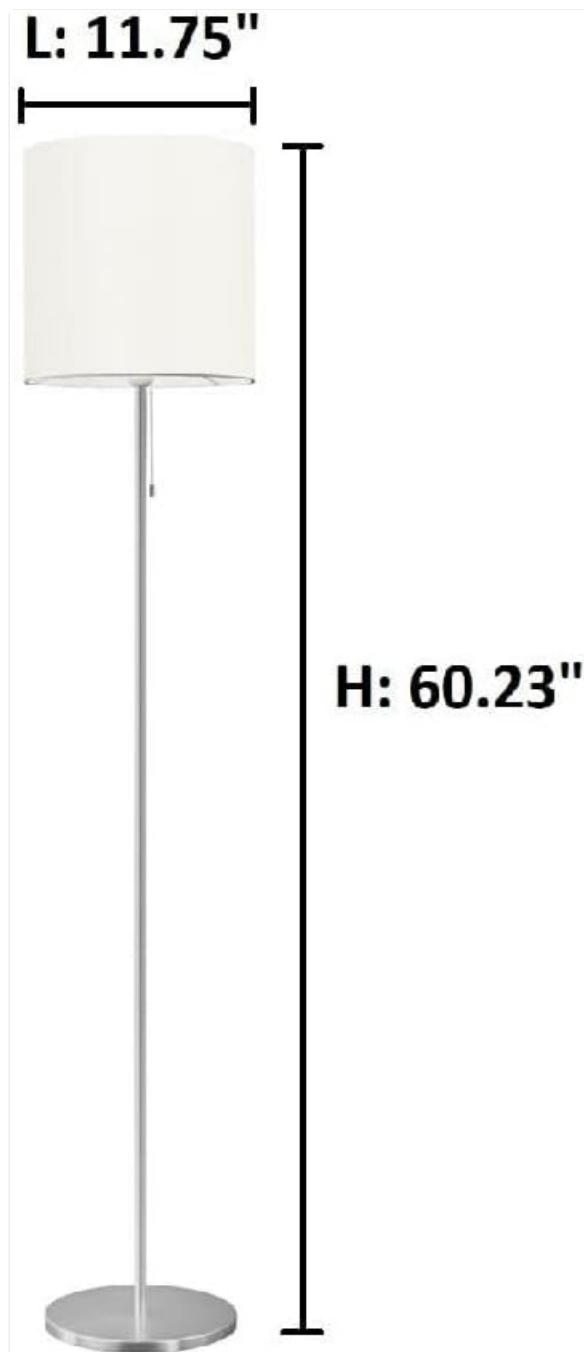


Figure 4.2: Lamp dimensions for reference during assembly and placement.

5. OPERATING INSTRUCTIONS

The EGLO 82813A Sendo Floor Lamp is designed for simple operation.

- 1. Power Connection:** Insert the power plug into a standard 120V AC wall outlet.
- 2. Turning On/Off:** The lamp features a push-button switch. Press the button to turn the lamp on or off.
- 3. Dimming Function:** This lamp is dimmable and features a touch sensor for control. If using a dimmable bulb, the touch sensor on the lamp allows for adjusting light intensity. Consult your bulb's instructions for specific dimming compatibility.



Figure 5.1: EGLO Sendo Floor Lamp in a living room setting.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lamp.

- **Cleaning:** Disconnect the lamp from power before cleaning. Use a soft, dry cloth to wipe the lamp base and pole. For the fabric shade, use a lint roller or a soft brush to remove dust. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled completely before attempting to replace it. Unscrew the old bulb and screw in a new A19 bulb (max 100W).
- **Inspection:** Periodically check the power cord for any signs of damage. If the cord is damaged, discontinue use and contact a qualified electrician or the manufacturer.

7. TROUBLESHOOTING

If you encounter issues with your EGLO Sendo Floor Lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power to the outlet.	Check the wall switch or circuit breaker. Test the outlet with another device.
Lamp does not turn on.	Bulb is loose or burnt out.	Unplug the lamp, then tighten or replace the bulb.
Lamp flickers.	Loose bulb or incompatible bulb.	Unplug the lamp, tighten the bulb. Ensure you are using a compatible A19 bulb. If dimming, ensure the bulb is dimmable.
Dimming function not working.	Non-dimmable bulb installed.	Replace with a dimmable A19 bulb.

8. SPECIFICATIONS

Feature	Detail
Model Name	Sendo
Model Number	82813A
Brand	EGLO
Product Dimensions	12"D x 12"W x 13"H (Shade Height: 57 Inches, Overall Size: 70-Inch)
Item Weight	8 Pounds
Base Material	Alloy Steel
Shade Material	Glass (Crème Fabric Shade mentioned in title, but specifications list Glass. Assuming fabric over glass or a specific component is glass.)

Feature	Detail
Shade Color	White
Finish Type	White / Brushed Aluminium
Bulb Base	E26
Light Source Type	A19
Maximum Compatible Wattage	100 Watts
Voltage	120 Volts
Control Method	Touch / Push Button Switch
Bulb Features	Dimmable (with compatible bulb)
Indoor/Outdoor Usage	Indoor
Certification	UL
Assembly Required	Yes

9. WARRANTY AND SUPPORT

EGLO products are manufactured to high-quality standards. For warranty information or technical support, please refer to the documentation included with your purchase or visit the official EGLO website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact EGLO customer service directly. Contact details can typically be found on the manufacturer's website or on the product packaging.