

[Manuals.plus](#) /

› [ADLER EUROPE](#) /

› Adler AD 1224 Electric Kettle User Manual

ADLER EUROPE AD 1224

Adler AD 1224 Electric Kettle User Manual

Model: AD 1224

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use may result in electric shock, fire, or serious injury.

- Do not immerse the kettle or its base in water or any other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not operate the kettle if the power cord, plug, or appliance itself is damaged. Contact authorized service personnel for repair.
- Keep the appliance out of reach of children.
- Always place the kettle on a stable, flat, heat-resistant surface.
- Do not fill the kettle above the maximum level indicator to prevent boiling water from overflowing.
- Do not open the lid while water is boiling.
- Unplug the kettle from the power outlet when not in use and before cleaning.
- This appliance is intended for household use only.

PRODUCT OVERVIEW

The Adler AD 1224 Electric Kettle is designed for efficient water heating. It features a 1.5-liter capacity, a water level indicator, and an automatic shut-off function for safety and convenience.

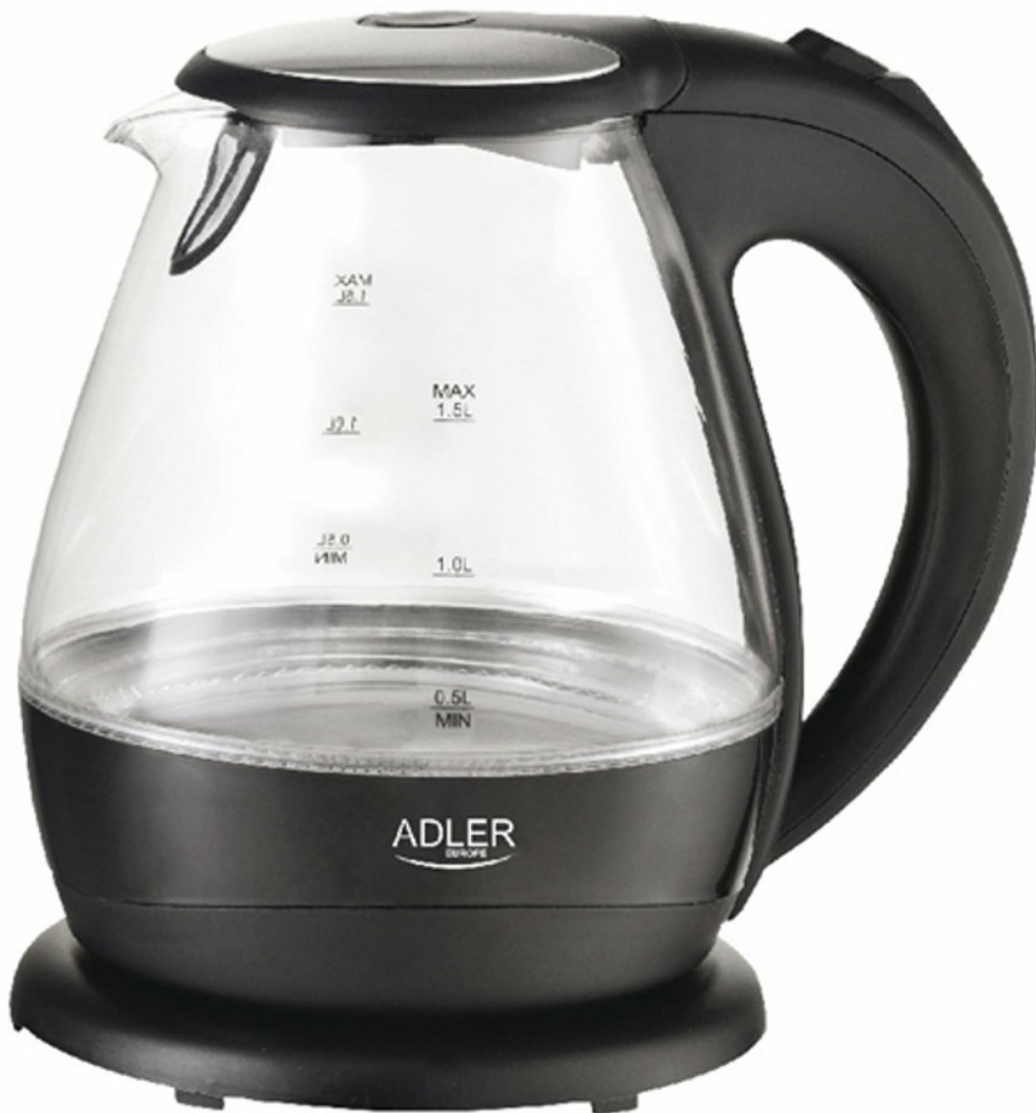


Figure 1: Top-down view of the Adler AD 1224 Electric Kettle with its lid open, revealing the transparent glass body, the stainless steel heating plate at the bottom, and the removable anti-calc filter integrated into the lid. The handle is visible on the right side.

- **Capacity:** 1.5 Liters (minimum 0.5 Liters)
- **Power:** 2000 Watts
- **Material:** Glass body, stainless steel heating element
- **Special Features:** Water level indicator, push-button lid, hinged lid, automatic shut-off, anti-calc filter.

SETUP

1. **Unpacking:** Carefully remove the kettle and its base from the packaging. Retain packaging for future storage or disposal.
2. **First Use Cleaning:** Before first use, fill the kettle with clean water up to the maximum level. Boil the water, then discard it. Repeat this process two to three times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, and stable surface, away from the edge of the countertop.
4. **Power Connection:** Plug the power cord into a suitable grounded electrical outlet (220 Volts).

OPERATING INSTRUCTIONS

- Filling the Kettle:** Press the button on the handle to open the hinged lid. Fill the kettle with the desired amount of water, ensuring it is between the minimum (0.5L) and maximum (1.5L) marks on the water level indicator. Close the lid securely.
- Placing on Base:** Place the kettle firmly onto its power base.
- Switching On:** Press the ON/OFF switch located on the handle or base. The indicator light will illuminate, signifying that the kettle is heating.
- Boiling:** The kettle will automatically switch off once the water has boiled. The indicator light will turn off.
- Pouring:** Carefully lift the kettle from its base and pour the hot water. Be cautious of steam escaping from the spout.
- Re-boiling:** If you need to re-boil water immediately after it has just boiled, wait a few seconds for the automatic shut-off mechanism to reset before pressing the switch again.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

- Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Interior Cleaning:** The interior can be cleaned with a soft brush or sponge. Do not use harsh chemicals.
- Anti-Calc Filter:** The kettle is equipped with an anti-calc filter. To clean it, open the lid and gently remove the filter. Rinse it under running water. If heavily scaled, soak it in a descaling solution (see descaling instructions). Reinsert the filter securely after cleaning.
- Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - Fill the kettle with a mixture of water and white vinegar (e.g., 1 part vinegar to 2 parts water) or a commercial descaling solution.
 - Bring the mixture to a boil and let it stand for at least 30 minutes, or longer if scaling is heavy.
 - Empty the kettle and rinse it thoroughly with fresh water several times to remove any residue and vinegar smell.
 - Repeat if necessary.
- Storage:** When not in use, store the kettle in a dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in. Power switch not pressed. Kettle not properly seated on base. No power at outlet.	Check if the plug is securely inserted into the outlet. Ensure the ON/OFF switch is pressed. Place the kettle correctly on the power base. Check the circuit breaker or try another outlet.
Kettle switches off before boiling.	Limescale buildup. Kettle is empty or underfilled.	Descale the kettle as per maintenance instructions. Ensure water level is above the minimum mark.
Water tastes strange or has particles.	New kettle residue. Limescale buildup.	Perform initial cleaning steps (boil and discard water several times). Descale the kettle.

SPECIFICATIONS

Brand	ADLER EUROPE
Model	AD 1224
Capacity	1.5 Liters
Power	2000 Watts
Voltage	220 Volts
Material	Glass (body), Stainless Steel (heating element), Rust-resistant
Color	Transparent/Black
Special Features	Low water level sensor, Push-button lid, Hinged lid, Water level indicator, Automatic ON/OFF

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in the product packaging or contact ADLER EUROPE customer support.

For technical assistance, spare parts, or service inquiries, please visit the official ADLER EUROPE website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Note: Unauthorized repairs or modifications to the appliance will void the warranty.