Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Wacom /
- Wacom Intuos Pen and Touch Medium Tablet (CTH680) User Manual

Wacom CTH680

Wacom Intuos Pen and Touch Medium Tablet (CTH680) User Manual

Model: CTH680

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your Wacom Intuos Pen and Touch Medium Tablet (CTH680). This device is designed to enhance digital creativity and productivity by offering a natural pen and multi-touch input experience for your computer.



Image: The Wacom Intuos Pen and Touch Medium Tablet (CTH680) with its accompanying pressure-sensitive pen, connected via USB.

SETUP

- 1. Connect the Tablet: Connect the Wacom Intuos tablet to your computer using the provided USB cable.
- Install Drivers: Insert the installation CD (if provided) or download the latest drivers from the official Wacom website. Follow the on-screen instructions to complete the driver installation. A system reboot may be required.
- 3. **Software Installation:** The tablet includes downloadable creative software such as Autodesk Sketchbook Express and ArtRage Studio. Refer to the included documentation or Wacom's website for instructions on how to access and install these applications.
- 4. **Optional Wireless Kit:** For wireless operation, a separate Wireless Accessory Kit is required. Install the kit according to its specific instructions.



Image: A user interacting with the Wacom Intuos tablet, demonstrating its use as a digital drawing canvas connected to a computer.

OPERATING THE TABLET

Pen Functionality

 Pressure Sensitivity: The battery-free, pressure-sensitive pen allows for varying line thickness and opacity based on the pressure applied.

- **Digital Eraser:** The pen includes a digital eraser for correcting mistakes naturally.
- **Customizable Buttons:** The pen features customizable buttons for quick access to frequently used functions.



Image: A hand holding the Wacom pen on the tablet surface, illustrating the pressure-sensitive input for varied effects.

Multi-Touch Gestures

The tablet supports multi-touch gestures, allowing you to navigate, scroll, and zoom your artwork using your fingers, similar to a trackpad.



Image: A hand demonstrating multi-touch gestures on the Wacom Intuos tablet, highlighting its ability to speed up tasks with touch and shortcut keys.

ExpressKeys

Four customizable ExpressKeys are located on the tablet, providing shortcuts for functions like undo, copy, or paste, enhancing workflow efficiency.

Left or Right-Handed Use

The tablet can be configured for both left-handed and right-handed users through the Wacom Tablet Properties software.

MAINTENANCE

- Cleaning: Use a soft, damp cloth to clean the tablet surface. Avoid harsh chemicals.
- **Pen Nib Replacement:** The pen nibs will wear down over time. Replacement nibs are typically stored in a compartment on the back of the tablet or within the pen holder. Use the included nib removal tool to replace them.
- Storage: When not in use, store the tablet and pen in a safe place to prevent damage.



Image: A Wacom pen being used to remove a nib from the tablet, illustrating the nib replacement process.

TROUBLESHOOTING

• Tablet Not Responding:

- Ensure the USB cable is securely connected to both the tablet and the computer.
- Verify that the Wacom drivers are correctly installed and up to date.
- · Restart your computer.

• Pen Not Working:

- Check if the pen nib is properly inserted.
- Ensure the pen is within the active area of the tablet.
- If using a wireless kit, check the battery level.
- **Driver Compatibility:** Some users have reported driver compatibility issues with older operating systems or after major OS updates. Always check the official Wacom website for the latest driver versions and compatibility information for your specific operating system.

· Lag or Delay:

- Ensure your computer meets the minimum system requirements for the tablet and any software you are using.
- Close unnecessary applications to free up system resources.
- Update your graphics drivers.

SPECIFICATIONS

Brand	Wacom
Model Number	CTH680

Item Weight	1.14 pounds
Product Dimensions	10.8 x 8.8 x 0.4 inches
Color	Silver and Black
Operating System Compatibility	Mac OS, Windows
Pressure Sensitivity	1024 Levels
Connectivity Technology	Wired (Optional Wireless Kit available separately)

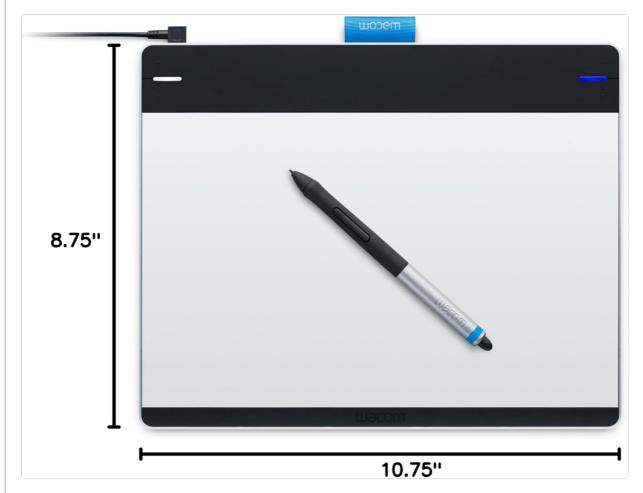


Image: The Wacom Intuos tablet displaying its physical dimensions.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official overview of the Wacom Intuos Pen and Touch Small Tablet, showcasing its features and creative applications. While the video title mentions "Small Tablet", the features are generally applicable to the Intuos Pen and Touch series.

WARRANTY AND SUPPORT

For detailed warranty information, product registration, and technical support, please visit the official Wacom website or contact Wacom customer service. Keep your purchase receipt and product serial number (found on the back of the tablet, as shown in the image below) for warranty claims.

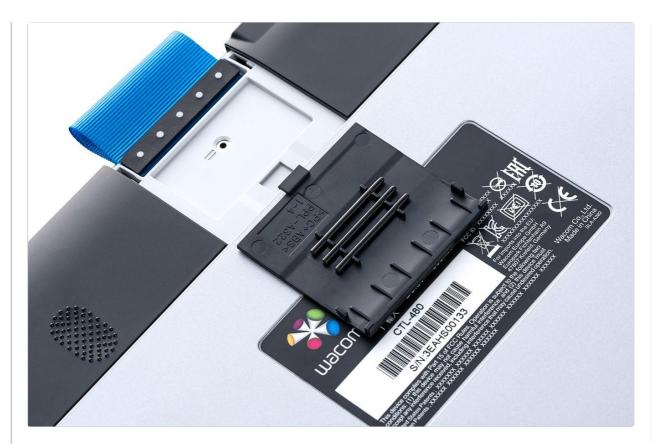


Image: The back panel of the Wacom Intuos tablet, indicating the location of the serial number and other regulatory information.

© 2023 Wacom. All rights reserved.

Related Documents - CTH680



Wacom Intuos Pro Pen Tablet (PTH-660/PTH-860) Specifications and Features

Detailed specifications and features for the Wacom Intuos Pro Pen Tablet, including model numbers PTH-660 and PTH-860, dimensions, pen technology, system requirements, and included accessories.



Wacom Intuos Pro Quick Start Guide

Concise guide to setting up and using your Wacom Intuos Pro pen tablet, covering connections, software installation, and pen maintenance.



Bamboo (CTH-470, CTH-670, CTL-470)

Wacom Bamboo (CTH-470, CTH-670) Bamboo Pen (CTL-470) , ,

