

[Manuals.plus](#) /

› [ICE-WATCH](#) /

› ICE-WATCH Chronograph Watch BM.CH.DBE.B.S.13 User Manual

ICE-WATCH BM.CH.DBE.B.S.13

ICE-WATCH Chronograph Watch User Manual

MODEL: BM.CH.DBE.B.S.13

1. Product Overview

This manual provides instructions for the ICE-WATCH Chronograph Blue Dial Men's Watch, model BM.CH.DBE.B.S.13. This timepiece features a quartz movement, analog display, and chronograph functionality, housed in a durable resin case.



Image 1: Front view of the ICE-WATCH Chronograph Blue Dial Men's Watch.

Key Features:

- Quartz Movement for precise timekeeping.
- Analog Display with a blue dial.
- Chronograph (Stopwatch) Functionality.
- Resin Case for durability.
- Water Resistance up to 100 meters (10 ATM).
- Mineral Glass window display.

2. Setup

2.1 Setting the Time

1. Pull the crown (located on the right side of the watch case) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Push the crown back into position 1 to start the watch.

2.2 Setting the Date (if applicable)

If your model includes a date display, pull the crown out to position 1 (first click). Turn the crown to adjust the date. Once set, push the crown back in. Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.

2.3 Chronograph Hand Zero Position Adjustment

If the chronograph hands (seconds, minutes, or hours) do not return to the zero position when reset, they may need adjustment:

1. Pull the crown out to position 2.
2. Press button A (top pusher) to advance the chronograph second hand.
3. Press button B (bottom pusher) to advance the chronograph minute/hour hand (if applicable).
4. Once all chronograph hands are aligned to the 12 o'clock (zero) position, push the crown back to position 1.

3. Operating Instructions

3.1 Basic Timekeeping

The watch operates continuously once the time is set and the crown is pushed in. The quartz movement ensures accurate timekeeping.

3.2 Using the Chronograph (Stopwatch)

1. **Start:** Press button A (top pusher) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press button A again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping the chronograph, press button B (bottom pusher) to reset all chronograph hands to their zero positions.
4. **Split Time (if applicable):** Some chronographs allow for split time measurement. Consult specific movement instructions if this feature is desired.

3.3 Water Resistance

This watch is water resistant up to 100 meters (10 ATM). This means it is suitable for swimming, showering, and snorkeling. It is **not** suitable for high-impact water sports or diving requiring helium gas. Ensure the crown is fully pushed in before any contact with water. Do not operate the crown or pushers while the watch is wet or submerged.

4. Maintenance

4.1 Cleaning

To maintain the appearance of your watch, wipe the case and strap regularly with a soft, dry cloth. For resin components, a slightly damp cloth can be used, followed by drying. Avoid using harsh chemicals or abrasive materials.

4.2 Battery Replacement

The watch is powered by 1 Lithium Metal battery. When the watch stops or the second hand begins to jump erratically (indicating low battery), the battery needs to be replaced. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and water

resistance integrity.

5. Troubleshooting

5.1 Watch Not Running

- Check if the crown is fully pushed into position 1.
- The battery may be depleted. Refer to section 4.2 for battery replacement.

5.2 Chronograph Hands Not Resetting to Zero

- Perform the chronograph hand zero position adjustment as described in section 2.3.

5.3 Water Inside the Watch

- If condensation or water appears inside the watch, immediately take it to a qualified watch technician. This indicates a breach in water resistance.

6. Specifications

Feature	Detail
Model Name	BM.CH.DBE.B.S.13
Movement Type	Quartz
Display Type	Analog
Case Material	Resin
Case Diameter	48 Millimetres
Case Thickness	14 Millimetres
Band Width	17 Millimetres
Window Display Glass	Mineral Glass
Water Resistance Depth	100 Metres (10 ATM)
Power Source	Battery Powered (1 Lithium Metal battery included)
Item Weight	45 Grams
Special Feature	Stop Watch (Chronograph)

7. Warranty and Support

7.1 Warranty Information

This ICE-WATCH product comes with a **2-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear of the case, crystal, or strap.

7.2 Customer Support

For warranty claims, service, or technical assistance, please refer to the contact information provided with your purchase documentation or visit the official ICE-WATCH website for regional support details. When contacting support, please have your model number (BM.CH.DBE.B.S.13) and proof of purchase available.