

Manuals.plus /

- › American Range /
- › American Range A31000, Majestic Oven Rack, 28-1/2 X26

## American Range A31000

# Instruction Manual

American Range A31000 Majestic Oven Rack

Model: A31000

## INTRODUCTION

---

This manual provides essential information for the proper use, maintenance, and care of your American Range A31000 Majestic Oven Rack. This genuine OEM replacement part is designed for specific American Range oven models, ensuring safety, reliability, and optimal performance. Please read this manual thoroughly before using the product.

## PRODUCT OVERVIEW

---



Image 1: Top-down view of the American Range A31000 Majestic Oven Rack, showing its rectangular shape and parallel wire construction.

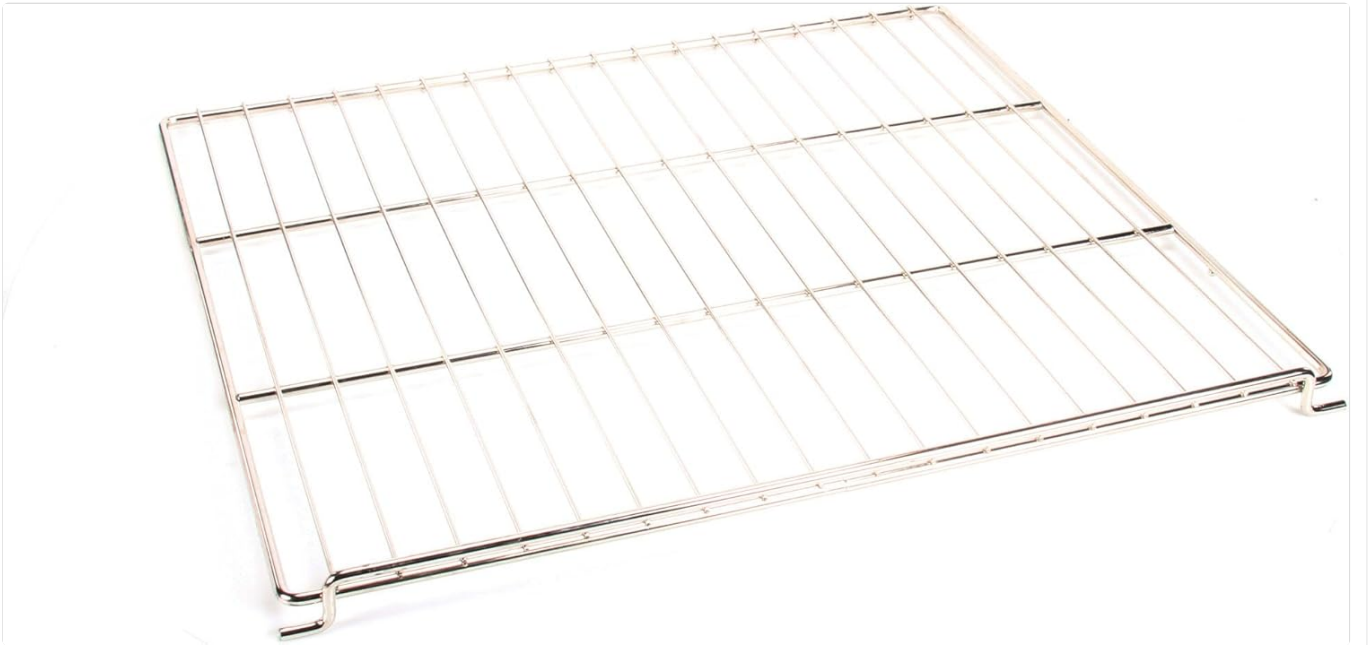


Image 2: Angled view of the oven rack, highlighting the sturdy frame and evenly spaced wires, with the support feet visible at the corners.

The American Range A31000 Majestic Oven Rack is a durable, wire-grid accessory designed to fit specific American Range oven models. It provides a stable surface for cookware within the oven cavity. Its construction ensures proper air circulation for even cooking.

## SETUP

---

The oven rack requires minimal setup. Ensure your oven is cool before handling racks.

1. **Unpacking:** Carefully remove the oven rack from its packaging. Inspect for any signs of damage during transit.
2. **Initial Cleaning:** Before first use, wash the oven rack with warm, soapy water to remove any manufacturing residues. Rinse thoroughly and dry completely.
3. **Placement:** Slide the oven rack into the desired rack guides within your American Range oven. Ensure it is fully seated and stable before placing any items on it.



Image 3: A close-up view of a corner of the oven rack, showing the robust construction and how the wires are integrated into the frame, designed for secure placement in oven guides.

## OPERATING INSTRUCTIONS

---

The oven rack is designed to support various types of cookware during cooking. Always ensure the rack is properly positioned before heating the oven or placing heavy items.

- **Rack Position:** Select the appropriate rack position based on the food item being cooked and the recipe's requirements. Generally, higher racks are for broiling or browning, middle racks for most baking and roasting, and lower racks for items requiring longer cooking times or larger items.
- **Loading:** Place cookware centrally on the rack to ensure even weight distribution. Avoid overloading the rack, as this can cause it to sag or become unstable.
- **Safety:** Always use oven mitts or heat-resistant gloves when adjusting or removing hot oven racks. Allow the oven and rack to cool sufficiently before handling with bare hands.

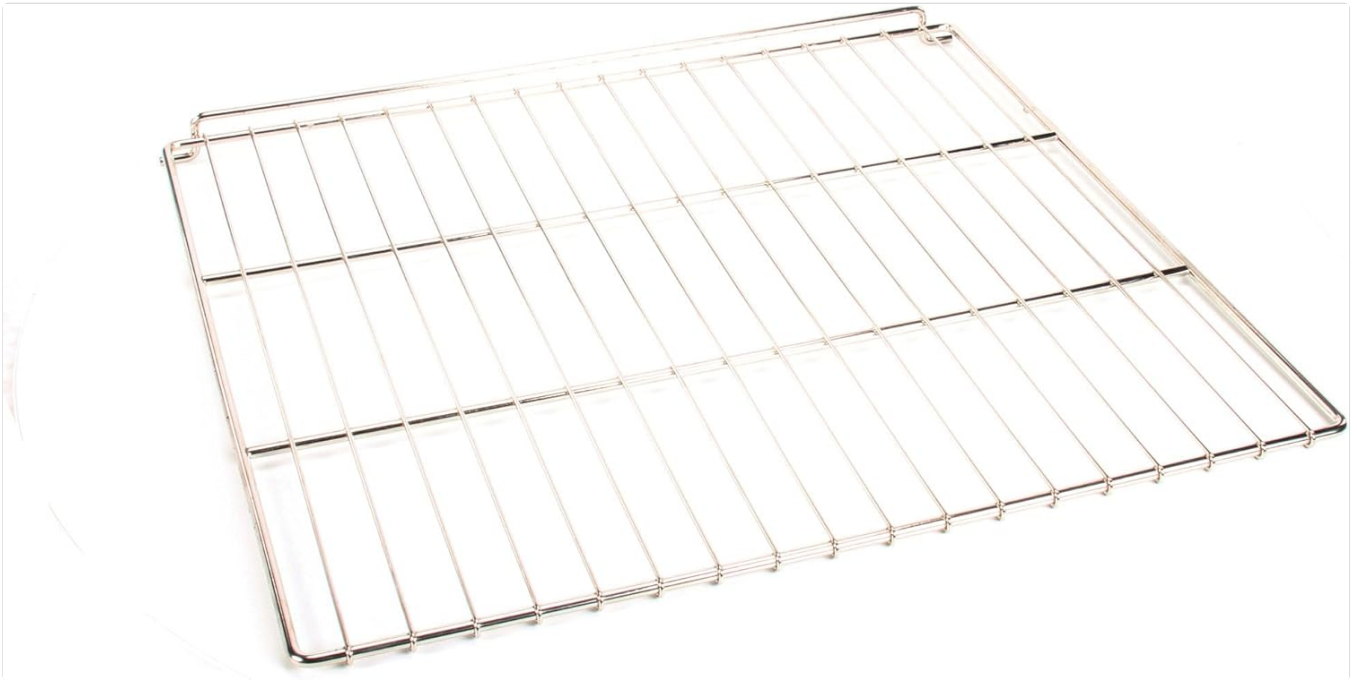


Image 4: An alternative angled view of the oven rack, emphasizing its full dimensions and the uniform spacing of the wires, indicating its suitability for various cookware sizes.

## MAINTENANCE AND CLEANING

Regular cleaning will extend the life of your oven rack and maintain its appearance.

- **Routine Cleaning:** For light soil, wash the rack with warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry immediately to prevent water spots or rust.
- **Heavy Soil:** For baked-on food or grease, soak the rack in hot, soapy water for several hours or overnight. Use a stiff brush (not metal) to scrub away stubborn residues. Alternatively, some oven cleaning solutions designed for racks may be used, following the product's instructions carefully.
- **Avoid Abrasives:** Do not use steel wool, abrasive cleaners, or harsh chemicals, as these can damage the finish and promote rust.
- **Drying:** Always dry the rack completely after washing to prevent rust, especially if it is made of chrome-plated steel.

## TROUBLESHOOTING

Most issues with an oven rack are minor and easily resolved.

Problem	Possible Cause	Solution
Rack does not slide smoothly.	Accumulated grease or food debris on rack or oven guides.	Clean the rack and oven rack guides thoroughly. A small amount of cooking oil can be applied to the rack edges for smoother sliding, but wipe off excess.
Rack appears discolored or rusty.	Exposure to moisture, harsh chemicals, or abrasive cleaning.	Ensure the rack is dried completely after washing. Avoid abrasive cleaners. If rust is significant, replacement may be necessary.
Rack does not fit oven.	Incorrect model number or oven type.	Verify that the A31000 rack is compatible with your specific American Range oven model. Refer to your oven's manual or manufacturer's specifications.

## SPECIFICATIONS

---

Attribute	Detail
Model Number	A31000
Part Number	A31000
Brand	American Range
Product Dimensions	12.7 x 60.96 x 76.2 cm (5 x 24 x 30 inches)
Item Weight	454 g (1 lb)
Item Package Quantity	1
First Available	December 2, 2013

## WARRANTY INFORMATION

---

Specific warranty details for the American Range A31000 Majestic Oven Rack are typically provided with the original product purchase or can be obtained directly from American Range. As a genuine OEM part, it is designed to meet the manufacturer's quality standards. Please retain your proof of purchase for any warranty claims.

## SUPPORT AND CONTACT

---

For further assistance, technical support, or to inquire about replacement parts, please contact American Range customer service. Contact information can usually be found on the official American Range website or in the original appliance manual.

When contacting support, please have your oven model number and the A31000 oven rack part number ready to expedite service.