

FUNAI DV220FX4

Funai DV220FX4 Combination Video and DVD Player User Manual

Model: DV220FX4 | Brand: FUNAI

1. INTRODUCTION

Thank you for purchasing the Funai DV220FX4 Combination Video and DVD Player. This manual provides essential information for the proper setup, operation, and maintenance of your new device. Please read this manual thoroughly before using the unit to ensure safe and optimal performance. Keep this manual for future reference.

2. SAFETY INFORMATION

To reduce the risk of electric shock, fire, or damage to the unit, please observe the following safety precautions:

- **Power Source:** Connect the unit only to the power supply indicated on the rating label.
- **Ventilation:** Do not block ventilation openings. Ensure adequate space around the unit for proper airflow.
- **Water and Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids, such as vases, on the unit.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this unit yourself. Refer all servicing to qualified service personnel.
- **Object and Liquid Entry:** Never push objects of any kind into this unit through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Funai DV220FX4 Combination Video and DVD Player

- Remote Control (NB681)
- AV Cables (RCA type)
- 2 x AA Batteries (for remote control)
- User Manual (this document)
- Quick Start Guide

4. PRODUCT OVERVIEW

4.1 Front Panel



The front panel of the DV220FX4 features controls for both VCR and DVD functions, along with power and input selection. Key elements include the VCR tape slot on the left, the DVD disc tray on the right, and various playback and recording buttons for both formats. A power button and indicator light are also present.

4.2 Rear Panel



The rear panel provides all necessary audio and video output connections for integration with your television or audio system. These include standard RCA (composite video and stereo audio) outputs, S-Video output, and digital audio output (coaxial). There are also RCA audio/video input jacks for recording to VHS.

4.3 Remote Control





The included remote control (model NB681) allows full control over both VCR and DVD functions from a distance. It features dedicated buttons for power, input selection (VCR/DVD), playback controls (Play, Pause, Stop, Rewind, Fast Forward, Skip), recording, menu navigation, and numerical input for direct track/chapter selection.

5. SETUP

5.1 Connecting to a Television

The DV220FX4 offers multiple connection options to your television. Choose the best available option on your TV for optimal picture quality.

- **RCA (Composite Video):** Connect the yellow video cable from the unit's VIDEO OUT to your TV's VIDEO IN. Connect the red and white audio cables from the unit's AUDIO OUT (L/R) to your TV's AUDIO IN (L/R).
- **S-Video:** For improved picture quality, connect an S-Video cable from the unit's S-VIDEO OUT to your TV's S-VIDEO IN. You will still need to connect the red and white audio cables (RCA) for sound.
- **Digital Audio (Coaxial):** For digital audio output to a compatible receiver, connect a coaxial digital audio cable from the unit's DIGITAL AUDIO OUT to your receiver's digital audio input.

After connecting, select the corresponding input on your television (e.g., Video 1, AV, S-Video) to view the player's output.

5.2 Power Connection

Plug the AC power cord into a standard wall outlet. The unit will enter standby mode.

6. OPERATING INSTRUCTIONS

6.1 Playing a DVD

1. Press the POWER button on the unit or remote control to turn on the player.
2. Press the DVD button on the remote or front panel to select DVD mode.
3. Press the OPEN/CLOSE button to open the disc tray.
4. Place a DVD disc gently onto the tray with the label side facing up.
5. Press the OPEN/CLOSE button again to close the tray. The disc will load, and playback will typically begin automatically.
6. Use the PLAY, PAUSE, STOP, FAST FORWARD, REWIND, and SKIP buttons on the remote or front panel to control playback.

6.2 Playing a VHS Tape

1. Press the POWER button on the unit or remote control.
2. Press the VCR button on the remote or front panel to select VCR mode.
3. Insert a VHS tape into the tape slot. The unit will automatically load the tape.
4. Playback may begin automatically, or you may need to press the PLAY button.
5. Use the PLAY, PAUSE, STOP, REWIND, and FAST FORWARD buttons to control tape playback.

6.3 Recording to VHS (Line In Recording)

This unit supports recording from an external source (e.g., cable/satellite box, camcorder) to a VHS tape via the Line In inputs.

1. Connect the audio/video output of your external source (e.g., cable box) to the AUDIO IN (L/R) and VIDEO IN (yellow) jacks on the rear panel of the DV220FX4.
2. Insert a recordable VHS tape into the VCR slot.
3. Press the VCR button on the remote or front panel to select VCR mode.
4. Select the appropriate input source on the DV220FX4 (e.g., Line 1, Line 2) using the INPUT SELECT button on the remote until you see the external source's signal on your TV.
5. Press the REC button on the unit or remote control to begin recording. The REC indicator will light up.
6. To stop recording, press the STOP button.

7. MAINTENANCE

7.1 Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Ensure the unit is unplugged before cleaning.

7.2 Disc and Tape Care

- Handle discs by their edges to avoid fingerprints on the playing surface.
- Store discs in their cases when not in use.
- Keep VHS tapes away from strong magnetic fields and direct sunlight.
- Periodically fast-forward and rewind tapes to their ends to prevent sticking.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord unplugged; power outlet not active.	Ensure power cord is securely plugged in. Test outlet with another device.
No picture/sound	Incorrect input selected on TV; loose AV cables.	Select correct input on TV. Check all AV cable connections.
Disc/Tape won't play	Disc/Tape inserted incorrectly; disc/tape is dirty or damaged.	Ensure disc/tape is inserted correctly. Clean disc/tape. Try another disc/tape.
Poor VCR sound quality	Worn tape; dirty VCR heads.	Try a different tape. Consider using a VCR head cleaner tape.
Remote control not working	Batteries are dead or inserted incorrectly; obstruction between remote and unit.	Replace batteries. Ensure correct polarity. Remove any obstructions.

9. SPECIFICATIONS

- **Model Name:** DV220FX4
- **Media Type:** VHS, DVD
- **Supported File Formats:** DVD, VCD, SVCD
- **Connectivity Technology:** RCA
- **Connector Type:** RCA
- **Audio Output Mode:** Stereo
- **Audio Encoding:** DD (Dolby Digital)
- **Video Output:** Progressive Scan, S-Video Out
- **Recording:** Line In Recording on VHS from Cable/Satellite Box
- **Dimensions (WxDxH):** Approximately 13.4 x 21.2 x 7 inches (340 x 538 x 178 mm)
- **Item Weight:** Approximately 7.18 pounds (3.26 kg)
- **Color:** Black
- **Power Supply:** 120V, 60Hz
- **Power Consumption:** 8W (TBD)
- **Standby Power Consumption:** 2.8W (TBD)

10. CUSTOMER SUPPORT

For technical assistance or inquiries, please contact Funai Customer Support:

- **Hotline:** 877-993-8624
- **Email:** funai@funaisupport.com
- **Operation Hours:** Mon-Sun 9am - 11pm EST (Excluding major holidays)

Please have your model number (DV220FX4) and a description of the issue ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00EOV3H4C>

More documents and user manuals: <https://manuals.plus/>