

**Candy 31006634**

# Candy AQUA 1041 D1 Washing Machine

## USER MANUAL

### Introduction

---

This user manual provides essential information for the safe and efficient operation of your new Candy AQUA 1041 D1 freestanding front-loader washing machine. Please read these instructions carefully before using the appliance and keep them for future reference.

The Candy AQUA 1041 D1 is a compact washing machine designed for convenience and efficiency, featuring a 4 kg capacity and a 1000 rpm spin speed.

### Safety Information

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play with the appliance.
- Do not operate the machine if the power cord or plug is damaged.
- Never open the detergent drawer during a wash cycle.
- Always unplug the machine before cleaning or maintenance.
- Ensure all transit bolts are removed before first use to prevent damage.

### Setup and Installation

---

Proper installation is crucial for the performance and longevity of your washing machine.

#### 1. Unpacking

Carefully remove all packaging materials. Check for any damage during transit. Keep packaging materials out of reach of children.

#### 2. Removing Transit Bolts

Before operating the washing machine, it is essential to remove the transit bolts located at the rear of the appliance. These bolts secure the drum during transport and must be removed to prevent severe damage to the machine during operation.



Figure 1: Front view of the Candy AQUA 1041 D1 washing machine, showing the control panel and drum door.

### 3. Location and Leveling

Place the washing machine on a firm, flat surface. Ensure there is adequate space around the machine for ventilation and access. Use the adjustable feet to level the appliance, preventing excessive vibration and noise during operation.



Figure 2: The washing machine positioned in a bathroom, demonstrating suitable placement.

	<p><b>ENERG</b> енергия · ενεργεια</p> <p>Y IIA IE IA</p>
<p><b>CANDY</b></p>	<p><b>31006634</b> <b>ΔΟΙΙΑ 10Δ1D1 /2-S</b></p>

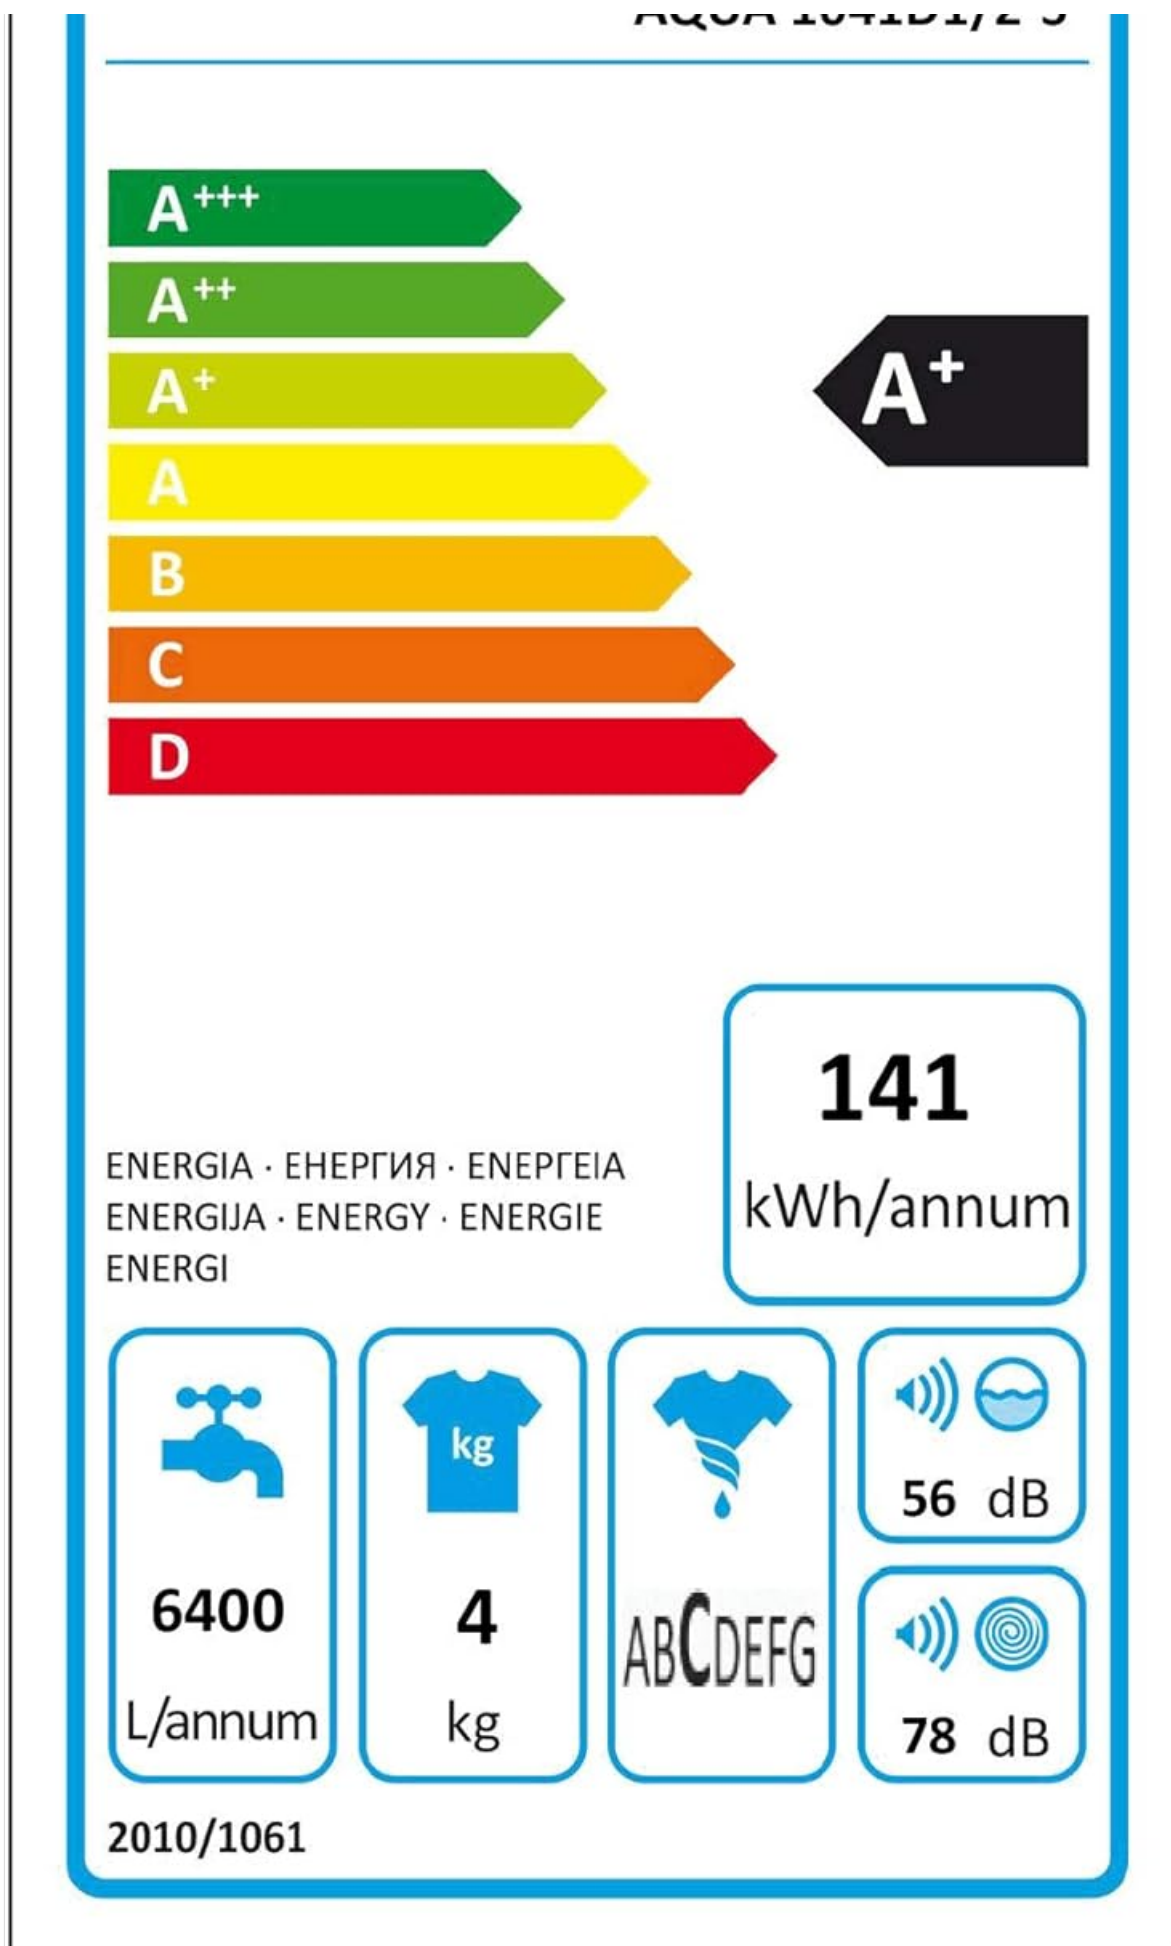 


Figure 3: The compact dimensions of the washing machine are highlighted by its placement next to a standard chair.

#### 4. Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks.

## 5. Drain Connection

Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fastened to prevent displacement during the drain cycle. The drain hose should be at a height between 60 cm and 100 cm from the floor.

## 6. Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of your appliance.

# Operating Instructions

---

## 1. Control Panel Overview

The control panel consists of a program selector dial, function buttons, and indicator lights. Refer to Figure 1 for a visual guide.

- **Program Selector Dial:** Used to select the desired wash program.
- **Start/Pause Button:** To start or pause a wash cycle.
- **Delayed Start Button:** To set a delayed start time (3, 6, or 9 hours).
- **Indicator Lights:** Show the current status of the wash cycle.

## 2. Loading Laundry

Open the door and load the laundry into the drum. Do not overload the machine; the maximum capacity is 4 kg. Close the door firmly.

## 3. Adding Detergent

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and fabric softener to the designated compartments.

## 4. Program Selection

Turn the program selector dial to choose the desired wash program. Common programs include:

- **Normal Cotton 60°:** Standard program for normally soiled cotton laundry.
- **Standard Cotton 40°:** Standard program for normally soiled cotton laundry.
- Other programs for various fabric types and soil levels.

## 5. Starting a Cycle

Press the Start/Pause button to begin the wash cycle. The indicator lights will show the progress of the cycle.

## 6. Delayed Start Function

To use the delayed start function, select your program, then press the Delayed Start button repeatedly to choose a delay of 3, 6, or 9 hours. Press Start/Pause to confirm. The machine will begin the cycle after the selected delay.

## 7. Ending a Cycle

Once the cycle is complete, the machine will stop, and the corresponding indicator light will illuminate. Open the door and remove your laundry.

# Maintenance

---

Regular maintenance ensures the optimal performance and extends the lifespan of your washing machine. Always unplug

the appliance before performing any maintenance.

### 1. Cleaning the Exterior

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

### 2. Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. Clean the compartment housing with a brush if necessary.

### 3. Cleaning the Drum

Periodically run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) to clean the drum and remove any build-up.

### 4. Cleaning the Filter

The filter, usually located at the bottom front of the machine, should be cleaned regularly to prevent blockages. Place a shallow container beneath the filter to catch any residual water before unscrewing and removing the filter. Clean it thoroughly and reinsert.

## Troubleshooting

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	No power; door not closed; program not selected.	Check power supply; ensure door is latched; select a program and press Start.
Water leakage	Hoses loose; detergent drawer overflowing; filter clogged.	Tighten hose connections; do not overfill detergent drawer; clean filter.
Excessive noise/vibration	Transit bolts not removed; machine not level; uneven load.	Remove transit bolts; adjust leveling feet; redistribute laundry in drum.
Poor washing results	Incorrect detergent dosage; wrong program; overloaded.	Adjust detergent; select appropriate program; reduce load size.

## Specifications

Detailed technical specifications for the Candy AQUA 1041 D1 washing machine.

Feature	Value
Brand	Candy
Model Number	31006634
Product Type	Freestanding Front Loader Washing Machine
Capacity	4 kg (30 Liters)
Max Spin Speed	1000 rpm
Energy Efficiency Class	A+
Annual Energy Consumption	162 kWh

Feature	Value
Annual Water Consumption	6400 Liters
Noise Level (Wash)	56 dB
Noise Level (Spin)	78 dB
Dimensions (H x W x D)	69.5 x 51 x 44 cm
Weight	47 kg
Drum Material	Stainless Steel
Control Type	Push Button / Dial




Figure 4: Energy label for the Candy AQUA 1041 D1, detailing energy and water consumption, capacity, and noise levels.

### Warranty and Support

Your Candy AQUA 1041 D1 washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or to report a fault, please contact Candy customer support. Have your model number (31006634) and serial number ready when contacting support.

 You can often find contact details for Candy customer service on their official website or in the documentation provided with your appliance.

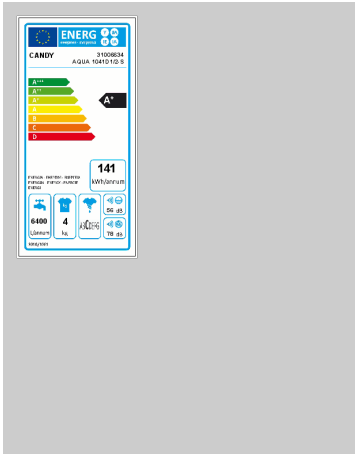


[\[pdf\]](#) Label

Energielabel alt Candy Aqua 1041 D1 Frontlader Preisvergleich Geizhals Österreich

4ed69c4842d35d5ad8c3887efb41f89333cc.gzhls at blob ldb 9 8 b 6 |||

CANDY **31006634** AQUA 1041D1/2-S 141 56 6400 4 78 ...

 
lang: **score:22** filesize: 87.67 K page\_count: 1 document date: 0000-00-00

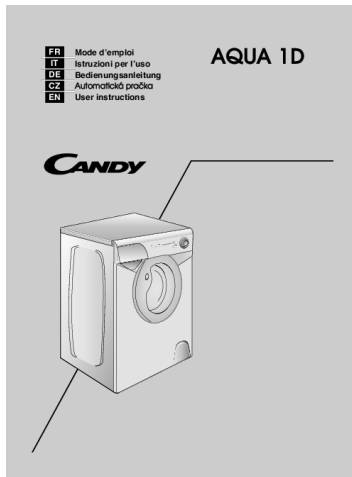

[\[pdf\]](#) Instructions Catalog

Aqua D1 43004241 claudio Atsisiųsti vartotojo vadovą AQUAMATIC AQUA 1041D1 2 S Iš priekio įkraunama skalbimo mašina Candy 31006634 1041 ALL d15v10x8t3bz3x cloudfront net Libretti 2018 9 15378144 |||

 FR Mode d'emploi IT Istruzioni per l'uso DE Bedienungsanleitung CZ Automatická příručka EN User instructions AQUA 1D FR TOUS NOS COMPLIMENTS En achetant cet appareil mnager Candy, vous avez dmontr que vous n acceptez aucun compromis: vous voulez toujours ce qu il y a de mieux. Candy a le plaisir de v...  
lang:fr **score:16** filesize: 5.07 M page\_count: 144 document date: 2017-08-24

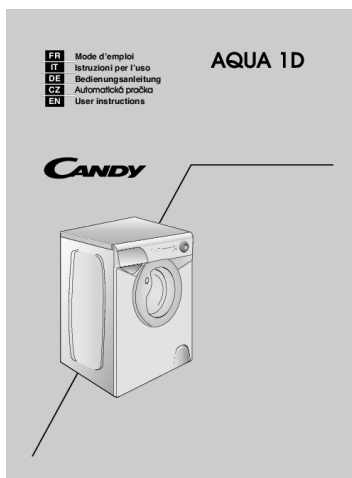

[\[pdf\]](#) Instructions Catalog

Aqua D1 43004241 claudio AQUA 1D cloudfront net Si l appareil doit être utilise de manière incompatible comme défini ci dessus la durée vie pourrait réduite et 31006634 1041 2 S d15v10x8t3bz3x Libretti 2018 9 15378155

FR Mode d'emploi IT Istruzioni per l'uso DE Bedienungsanleitung CZ Automatická příručka EN User instructions AQUA 1D FR TOUS NOS COMPLIMENTS En achetant cet appareil mnager Candy, vous avez dmontr que vous n acceptez aucun compromis: vous voulez toujours ce qu il y a de mieux. Candy a le plaisir de v...  
lang:fr **score:11** filesize: 3.56 M page\_count: 72 document date: 2013-02-15